

turntable player

TT202-F

IMPORTANT: Please read this manual carefully and completely before operating this unit and keep this manual for future reference.

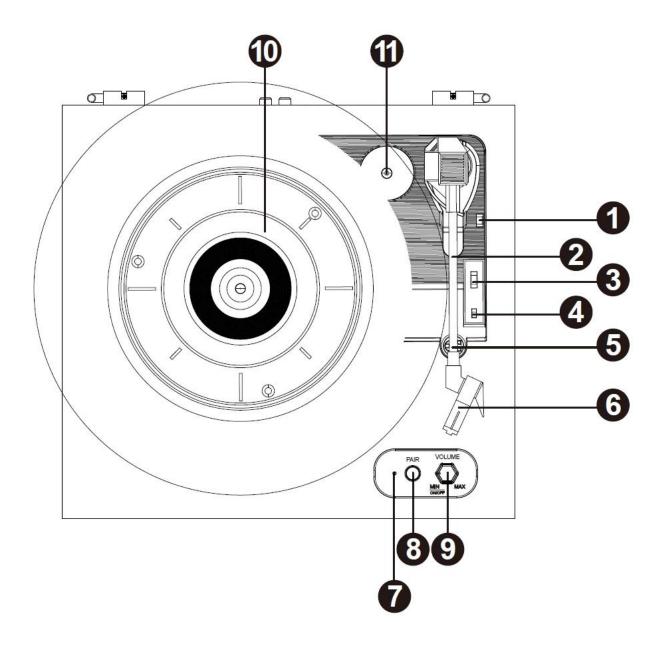

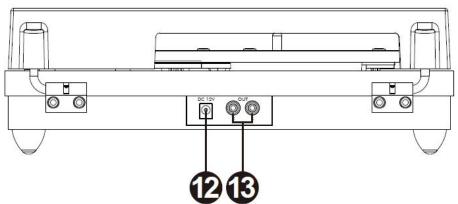

- 1. Lift Lever
- 2. Tone-arm
- 3. Speed Control Selection Switch
- 4. AUTO STOP ON/OFF Switch
- 5. Tone Arm Clip/Rest
- 6. Stylus(Needle) Cartridge
- 7. Indicator
- 8. PAIR button
- 9. Power Switch(VOLUME CONTROL KNOB)
- 10. Turntable Platter
- 11.45RPM adaptor
- 12. DC IN Power Jack
- 13. L/R RCA Output Jack

Getting Started

Firmly and securely insert the DC plug of the adaptor to the **DC IN Jack** on the back of the unit.

Plug the adaptor's AC plugs into a power outlet.

Playback via Bluetooth speaker

- 1. Turn on the power switch knob of the turntable. The indicator will become blue color flashing slowly.
- 2. Press the pair button and the indicator will become blue color flashing quickly. And the turntable will start to search the Bluetooth speaker which is at pairing status.
- 3. After automatically connection with the Bluetooth speaker, the indicator will become blue color without flashing. Now when the turntable starts to play, vinyl records music can be wirelessly streamed to the Bluetooth speaker.
 - After first successful connection with one Bluetooth speaker, you can simply turn on the power switch knob of the turntable and the turntable will automatically connect that Bluetooth speaker which is turned on.
- 4. Place a record on the turntable platter and select the desired speed (33/45/78) according to the record. NOTE: when playing a 45RPM record, use the included 45RPM adaptor.
- 5. Remove the stylus protector. Open the tone-arm clip to release the tone-arm. Push the lift lever backward to raise the tone-arm and gently move the tone-arm to the desired position over the record. The turntable will begin to spin when the arm is moved toward the record. Push the lift lever forward to lower the tone-arm slowly onto the desired position on the record to begin playing the record. Please note: The record will begin to

- spin only when the tone-arm is moved toward the record if the Auto Stop is turned on.
- If the Auto Stop Control Switch is turned ON, the record will stop automatically when finished. If Auto Stop Control Switch is turned OFF, the record will NOT stop automatically when finished.

Remark: AUTO STOP function applies to most 33RPM vinyl records. However, for very few vinyl records, it will stop when it does not come to the end, or it will not stop when it comes to the end when AUTO STOP is ON.

- 7. Turn the VOLUME CONTROL KNOB to adjust the volume. This volume control number can only control the volume of the built-in speakers. It cannot control the volume level of the Bluetooth speaker. Turn the volume control knob to min. to enjoy music from the Bluetooth speaker only. Please adjust the volume control of the Bluetooth speaker to adjust the vinyl records playback volume level.
- 8. If the turntable does not play and the platter stops for 10 minutes, the turntable will automatically enter into power-saving mode and the indicator will light off.

Playback via Built-in speaker

This turntable player has built-in speaker so you can enjoy music playback as well without connecting to any Bluetooth speaker.

TIPS FOR BETTER TURNTABLE PERFORMANCE

- 1. When opening or closing the turntable cover, handle it gently.
- 2. Do not touch the needle tip with your fingers; avoid bumping the needle against the turntable platter or record edge.
- 3. Frequently clean the needle tip-use a soft brush in a "back-to-front' motion only.
- 4. If you must use a needle cleaning fluid, use very sparingly.
- 5. Gently wipe the turntable player housing with a soft cloth. Use only a small amount of mild detergent to clean the turntable player.
- 6. Never apply harsh chemicals or solvents to any part of the turntable system.

FCC Warning Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.