



## Playing a Vinyl Record



A. If in place, remove the protective Stylus Guard from the tonearm cartridge by gently pulling it forwards.

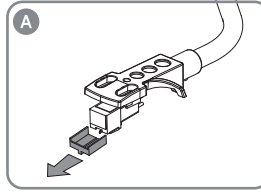

B. Turn the Mode / Speed selector switch to the correct speed 33 or 45 (33 for 12 inch LPs 45 for single). LED will light up red.


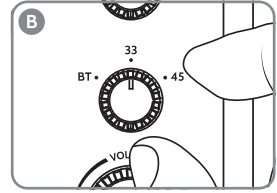


C. Adjust the volume to a low/mid level using the volume dial.

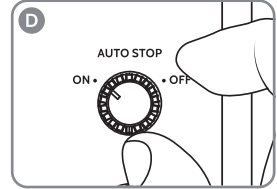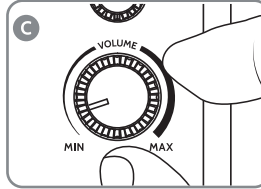



D. Make sure the auto stop\* dial is in the On position.

E. Carefully place a record/disc on the platter/turntable.

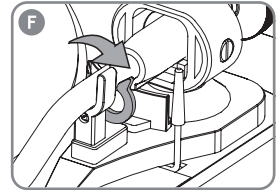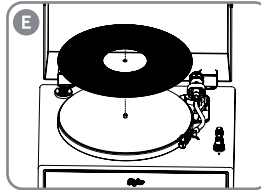



F. Unclip the arm rest lock.

G. Lift the tonearm.

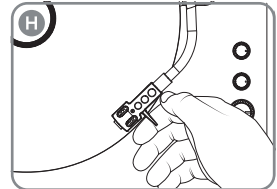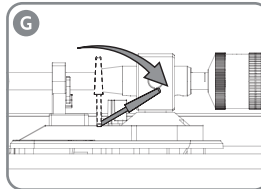



H. Place the stylus over the start of the record, or at the start of the track you want to play, the turntable will spin automatically.

I. Gently lower the tonearm using the tonearm lever.

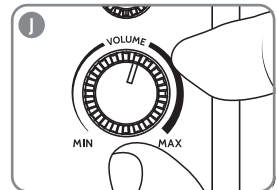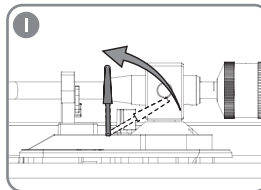

J. Adjust the volume to your preferred level using the volume dial

K. When the disc has finished playing the turntable will stop turning automatically\*.

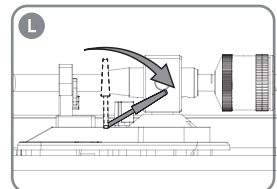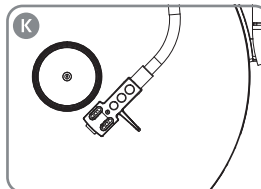

L. Lift the tonearm with the lever and return it to the tonearm rest.

To stop playing before the disc is finished or if it doesn't auto stop lift the tonearm with the lever and return it to the tone arm rest (14) the platter will stop turning automatically.

### \* Auto-Stop switch operation

Some records may have an auto-stop area outside the pre-set limit, so the turntable stops before the last track finishes. If this happens, set the AUTO STOP switch to the OFF position (M). This will allow the record to play to the end, but please note that it will not stop automatically. Use the lever to raise the tonearm and place it back in the rest and then turn the AUTO-STOP switch (D) back to ON to stop the turntable from spinning.

