
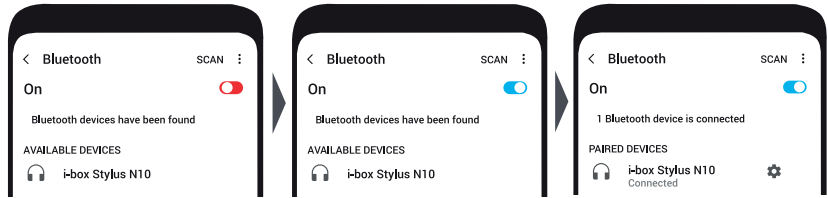



## Pairing with Bluetooth Enabled Devices

To connect a compatible Bluetooth device, turn the Mode / Speed selector switch to BT. The LED will flash blue and is ready to pair, look for "i-box Stylus N10" in your device's Bluetooth menu. Connect your device, you will hear a multiple audio tone and the LED will stop flashing and remain blue to confirm connection.

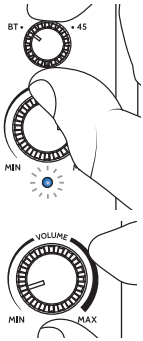

For volume control adjust the volume on the N10 and on your Bluetooth device. Use the controls of your Bluetooth device for all other actions. Use your Bluetooth device's menu to disconnect, you will hear a single audio tone to confirm disconnection and the LED will flash blue to indicate pairing mode is activated.


## Auxiliary Input - AUX-IN

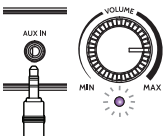

The 3.5mm AUX-IN port is ideal for playback of audio from older mobile devices without Bluetooth capability. Connect your device to the AUX-IN port (19) with a 3.5mm stereo jack lead (not supplied). Power on the turntable and the auxiliary device, the LED will light up purple. Adjust the volume on the N10, Use the controls of your auxiliary device for all other actions. Please Note: The AUX-IN function overrides all others no matter what the mode setting is.



## Care

See page 3 for general tips for cleaning the turntable and vinyl discs. The stylus will also need cleaning from time to time if only to remove fluff and dust. Use a proper stylus brush or cleaner only (not supplied). Clean the stylus tip by moving the brush from the rear to the front of the stylus tip.

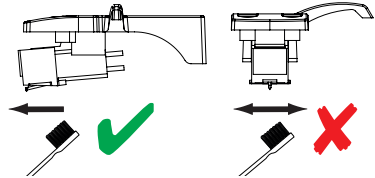

## Counterweight and Tracking Force Adjustment\*

Loosen the lock screw before adjusting the counterweight.

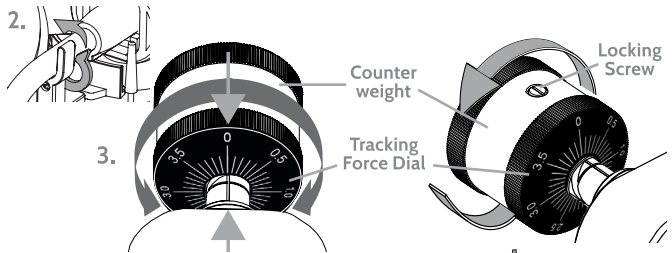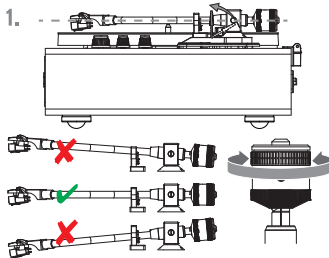

Unclip the tonearm position the tonearm in the space between the tonearm rest and the platter.  
1. Gently lower the tonearm lever, being careful not to damage the stylus, rotate the counterweight backwards and forwards so that the tonearm hangs level in a neutral balance position. The tonearm when moved up and down should now return to this position.


2. Return the tonearm to the rest.  
3. Hold the counterweight still and rotate the front Tracking Force Dial **separately** so that the "0" lines up with the line on the tonearm. Check the balance is still neutral.  
4. Now rotate the counterweight and tracking force dial **together**, counter-clockwise to 3.5g (the recommended tracking force for the AT 360OL cartridge fitted cartridge).

\*The tonearm counterweight has been factory preset for the AT 360OL cartridge fitted.


## Replacing the Stylus

It is recommended to replace the stylus after 1,000 hours of playing time or if it is damaged.

Switch off the N10 and disconnect from the mains. When removing the old stylus, hold the stylus headshell and the cartridge body tightly. Rotate the front of the stylus forward and then pull downwards to remove.

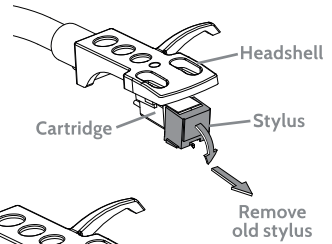

To fit a new stylus, slot it onto the cartridge, then lift and rotate the stylus until it clicks into place







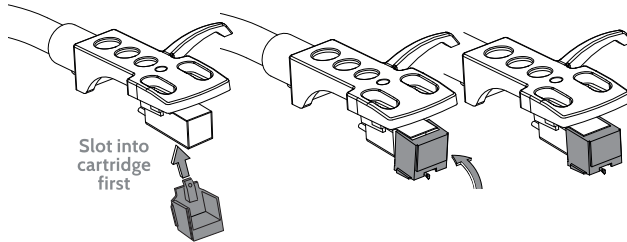


## Replacing the Belt

Over time the belt can deteriorate and stretch causing it to slip or cause juddering.

First switch off the N10 and disconnect from the mains.

- Remove the felt mat.
- Unhook the old belt from the drive pulley.
- Remove the circlip holding the platter in place and lift off the platter.
- Remove the old belt from the platter.
- Place the new belt on the platter.
- Hook the belt over the drive pulley making sure it is not twisted.
- Rotate the platter slowly 10x in a clockwise direction to seat the belt properly and make sure it turns smoothly.

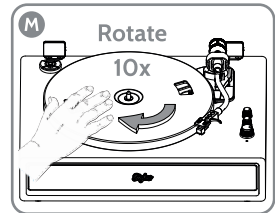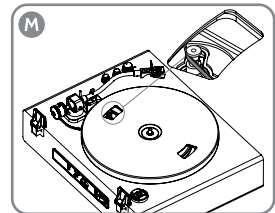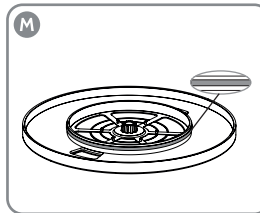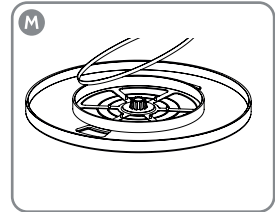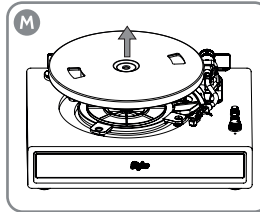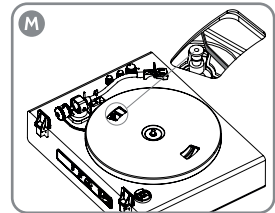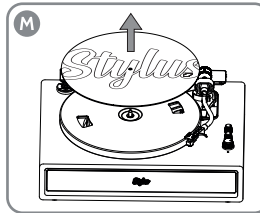

## Disclaimer

Updates to Firmware and/or hardware components are made regularly. Therefore some of the instructions, specifications and pictures in this documentation may differ slightly from your particular situation.

All items described in this guide are for illustration purposes only and may not apply to your particular situation. No legal right or entitlements may be obtained from the description made in this manual.

## Declaration of Conformity

Hereby, Philex Electronic Ltd. declares that the radio equipment: model Stylus N10 Compact Turntable with Detachable Speaker for wireless reception in domestic premises is in compliance with the Radio Equipment Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: [www.philex.com/doc](http://www.philex.com/doc)

## Troubleshooting

Problem	Possible cause	Solution
The unit does not respond or has cut out (no power)	Auto power OFF has activated due to no input/activity.	Turn the power switch OFF and then ON again.
	The power adaptor is not connected to the mains socket.	Connect to the mains socket.
	The mains socket is not switched on or is defective.	Switch on the mains switch or try another socket.
	Wrong source selected.	Select the correct source.
	Device not turned ON.	Turn ON the device.
Sound is distorted	Volume set too low.	Turn the volume dial up to increase the sound level.
	Volume level is set too high.	Decrease the volume.
The platter does spin or spins at varying speed	Check the stylus for fluff	Remove fluff with stylus cleaner
	The belt may be misaligned or worn	Check belt alignment and condition realign or replace
	The LED is purple and a cable is connected to AUX IN	Disconnect AUX IN cable
The stylus skips	Power is on, but LED is off the N10 may have Auto Powered off due to inactivity	Turn the power switch OFF and then ON again.
	Is the disc warped/damaged	Try playing a different disc
	Is the stylus pressure correct?	See "Tracking Force Adjustment"

## Specifications

Turntable	
Amplifier	Yes, Built-in
Motor	DC servo motor
Drive system	Belt drive
Speed	33 $\frac{1}{3}$ rpm, 45 rpm
SNR	More than 35 dB
Stylus	Audio-Technica 3600L
Recommended tracking force	3.5g $\pm$ 0.5g
Stylus frequency response	30 - 20,000 Hz
Audio Output	
Output Power	20W (2x 10W)
General	
Power requirements	12V $\approx$ 2A

## Technical Support

For further help, advice, information or live chat visit [www.iboxstyle.com](http://www.iboxstyle.com)

## ES Guía Del Usuario

### ⚠ Cuidados del tocadiscos Stylus N10

Manténgalo alejado de llamas directas como velas encendidas.

No lo exponga a goteos ni salpicaduras. Coloque los objetos con contenido líquido como jarrones alejados del dispositivo.

La unidad no debe exponerse a la luz directa del sol ni a temperaturas extremas, humedad, vibraciones, campos magnéticos intensos, altas frecuencias ni entornos polvorientos.

No coloque el producto en librerías cerradas ni estantes sin la ventilación adecuada. No obstruya las aberturas de ventilación con objetos como periódicos, tapetes, cortinas, etc.

No introduzca cables, agujas ni ningún otro objeto similar en ninguna abertura de la unidad.

No desmonte ni modifique el tocadiscos, ya que no contiene piezas manipulables por el usuario.

Si el tocadiscos presenta daños o algún mal funcionamiento, no lo utilice. Póngase en contacto con un ingeniero de asistencia cualificado.

No utilice productos abrasivos, diluyente u otros disolventes para limpiar la unidad. Para limpiarla, pase un paño suave y limpio, humedecido.

Para limpiar los discos de vinilo, pase un paño antiestático suave por la superficie con movimientos circulares.

No deseche este producto con el resto de desechos domésticos al final de su vida útil; entréguelo en un centro de recogida y reciclaje de aparatos eléctricos y electrónicos. Consulte con su autoridad local para recibir asesoramiento en materia de reciclaje.



Índice .....	página
Piezas y controles.....	12-13
Configuración de su tocadiscos .....	14
Conexión a altavoces externos o a un amplificador .....	14
Alimentación del tocadiscos.....	14
Apagado automático .....	14
Reproducción de un disco de vinilo .....	15
Funcionamiento del interruptor de parada automática .....	15
Sincronización con dispositivos compatibles con Bluetooth.....	16
Entrada auxiliar - AUX-IN.....	16
Contrapeso y ajuste de la fuerza de seguimiento.....	16
Sustitución de la púa .....	17
Sustitución de la correa .....	17
Guía para resolución de problemas.....	18
Especificaciones.....	18
Asistencia técnica .....	18

### Contenido de la caja

i-box Stylus N10 tocadiscos  
1x Cubierta antipolvo  
1x Adaptador de corriente

1x Manual de usuario  
1x Guía de inicio rápido

