



## KEEFE 706

# Quick Start Guide

Thank you for purchasing The Edge 7 Tablet! This document will guide you through the initial configuration and will activate the tablet according to the guidelines of the facility where you are located. **Please read Important Safety Reminders and Warranty Information before using the tablet.**

The tablet has many security features that are designed to meet the requirements of correctional institutions. This includes a mortality timer, connectivity limited to only authorized kiosks or servers, etc. **Please be advised when you are released you will have to send the tablet for de-institutionalization which will require paying a \$25 service fee. If you do not accept these conditions, do not activate and return the tablet.**


### SET-UP INSTRUCTIONS

**Charge Battery** – Please ensure that the tablet has at least 30% charge before attempting to activate. You charge the tablet by connecting the charger to the tablet’s microUSB port.

**Turn on your Tablet** – Power up the tablet by pressing and holding the Power Button for five (5) seconds. It will take several seconds to boot up—PRESSING THE POWER BUTTON MORE THAN ONCE WILL TURN OFF YOUR TABLET AND INTERRUPT THE BOOTUP PROCESS. During the initial boot-up, the tablet animation will play.

**Activate Tablet** – Connect the tablet to the kiosk by carefully lining up the kiosk’s USB cord to the microUSB port on your tablet and gently make the connection. **Never disconnect your tablet during an active connection.** Select the “Music” option on the kiosk, then click on “ACTIVATE”. The activation process may take several minutes. Please follow the on-screen prompts. Once the session is complete and you have disconnected your tablet, you are ready to begin using the tablet.

To download previously purchased music and videos, you will need to open the Media Store application and press the Download All button from the Downloads screen. This action will automatically download media catalogs.

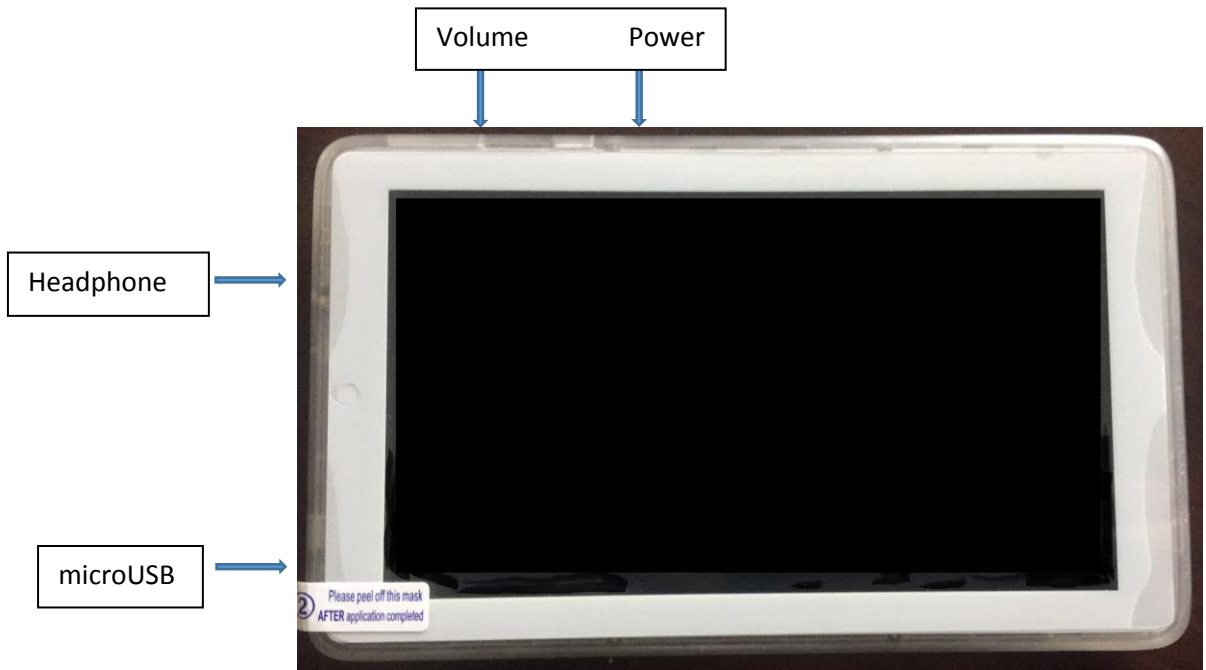

### Safety Reminders

Using your earbuds at high volume can be dangerous and/or damage your hearing. Keep the volume at a moderate level so you are able to hear outside sound. Please exercise extreme caution and discontinue use in potentially hazardous situations.

### Warranty Information:

The Edge 7 Tablet should provide you with trouble-free performance. To keep the tablet in good operational order, please note the following:

- Warranty expirations vary by correctional institution. Please check with your facility for the warranty agreement.
- The Edge 7 Tablet IS NOT WATERPROOF! Keep it away from sinks, showers, rain and other sources of moisture. Tablets that show signs of water damage will not be covered under warranty.
- DO NOT disassemble your tablet. Disassembling it will permanently damage the tablet and void the warranty.
- Treat The Edge 7 Tablet as a fragile electronic device. Do not drop or bang it against any object or surface. Always treat the earbud, kiosk, and keyboard ports with great care. Tablets that exhibit signs of damage or misuse will not be considered for warranty replacement.
- DO NOT twist or apply pressure to the plastic case, as this may disrupt the Touch Screen. Any cracks or damage to the screen will be considered physical damage that is not covered under warranty

## FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## CE WARNING WORDS

We **Advanced Technologies Group, LLC** declares that this Edge7, KEEFE 706 is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

Use the Edge7 in the environment with the temperature between -0°C and 50°C

Use careful with the earphone maybe possible excessive sound pressure from earphones and headphones can cause hearing loss.

Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

The product shall only be connected to a USB interface of version USB2.0  
Adapter shall be installed near the equipment and shall be easily accessible.



Max output power: 9.49dBm

Operating frequency range: 2412-2472MHz

Importer information:

Advanced Technologies Group, LLC

1601 48th St #220, West Des Moines, IA 50266, USA