


active noise-canceling headphones

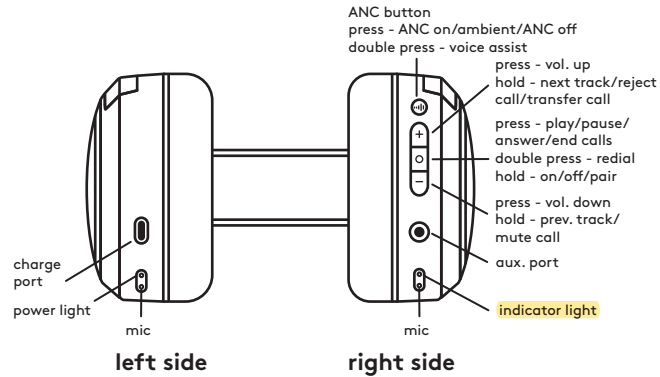

included

- Bluetooth Wireless ANC headphones
- USB-C charging cable
- 3.5mm audio cable
- Carrying case

indicators

- Quick flashing white - pairing/re-pairing
- Single flashing white - paired
- Rapid flashing white - incoming call
- Intermittent flashing white - active call/streaming
- Solid red - low power/charging
- Red light off - charging complete
- Ascending tones - power on
- Descending tones - power off
- Three rapid tones - ready to pair
- Two rapid dings - low battery
- Quick ascending tone - max volume
- Quick descending tone - min. volume

pairing

- When pairing for the first time, while the headphones are off, press and continuously hold the power button for 7 seconds to turn on the headphones. The indicator on the right will quickly flash white when it's ready to pair
 - Use the Bluetooth settings on your phone to pair with HEYDAY HEADPHONES 03
 - Slow single flashing white light - pairing successful
- note:** holding the power button for 4 seconds will power headphones on/off; holding for 7 seconds while the headphones are off will turn the headphones on and enter pairing mode

ANC/AMB button indicators

- ANC/Ambient solid white - ANC/Ambient on
- Two ascending tones - ANC ON
- Two high tones - Ambient ON
- Two descending tones - Ambient OFF

front

4 in

ANC (Active Noise-Canceling)/AMB (Ambient)

- Utilize the ANC button to cycle the three different active noise-cancellation settings
- Pressing the button once from off will enter ANC mode (Active Noise-Cancellation) and is indicated with two ascending tones
- ANC mode reduces outside noise at least 27dB reduction and makes your music the focus of your trip instead of the people around you
- Pressing the button again (twice from off) will enter AMB mode (Ambient) and is indicated by two high tones
- AMB mode only lets in high frequency sounds this way you can still get some quiet time on a bus or airplane but never miss an announcement
- Pressing the button again (three from off) will turn OFF the Active Noise-Cancellation and is indicated with two descending tones
- If the headphones are turned off when ANC or AMB is active, that mode will be activated when the headphones are turned back on

note: ANC mode/AMB mode only works when the Bluetooth turned on

charging

- Plug the USB-C end of the charging cable into the headphones
- Plug USB end of the charging cable into a power supply of at least DC 5V 1A
- **warning:** please use UL compliant power supply
- Full charge requires approximately 2.5 hours
- Charging is complete when red light turns off
- **note:** headphones cannot playback when charging

aux/line in

- Insert the AUX cable into headphone AUX port
- Insert opposite end of the AUX cable into the media source

troubleshooting

- If the headphones are not working correctly, turn them on/off to reset
- If the headphones won't turn on, recharge the battery and try again
- If the headphones won't charge, make sure the power supply works, is 5V 1A, and not damaged
- If the headphones make no sound or do not show as an available device, make sure they are not paired to a different device already
- To re-enter pairing mode hold the power button for 7 seconds when headphones are off

need some help?

Can't get it to pair? Have a question or comment?



call us at: 877-698-4883 or: 877-MyTgtTech online at: TargetTechSupport.com

safety

- Do not use near any water source
- Do not modify or repair this device
- Do not use in high temperatures or extreme weather
- Do not use chemical detergents to clean your device, use a soft dry cloth

heyday

FCC ID:2AC03-ANC2 Model:ANC2 Input:DC5V1A Made in China
This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Target Corp. Mpls, MN, 55403 Phone: 612-304-6073

For qualified repair specialists requesting repair information and parts please contact the original manufacturer at customersupport@gemsfindyours.com

back

6.34 in