


page 5

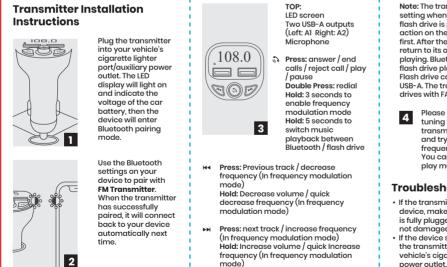

front



Note: The transmitter will recall the last setting when turned back on. When the flash drive is playing, if there is an audio action on the mobile, it will be executed first. After the response is completed, it will return to its original state and continue playing. Bluetooth priority is higher than flash drive playback. Flash drive can only use the A2 port of USB-A. The transmitter only supports flash drives with FAT32 format

Please follow the FM frequency tuning instructions to set the transmitting frequency of the player and try to avoid local radio frequencies with strong FM signals. You can answer phone calls and play music through the transmitter.

Troubleshooting:

• If the transmitter will not charge your device, make sure that your device's cable is fully plugged into the transmitter and not damaged. If the device still won't charge make sure the transmitter is fully plugged into your

vehicle's cigarette lighter port/auxiliary