 
 


kate spade

NEW YORK

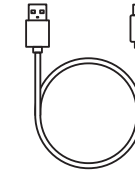

Wireless Speaker

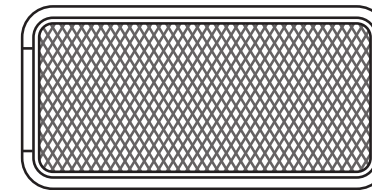

Included:

1. Bluetooth Speaker
2. USB-A to USB-C Charging Cable

Pairing:

1. Hold power button for 2 seconds to power on the speaker.
2. Then hold 'M' button for 5 seconds and the indicator light will flash blue when it is ready to pair.
3. Use the Bluetooth settings on your device to pair with Target KS Speaker 01
4. When pairing is successful the solid blue light will light up and there will be a chime.
5. The speaker will automatically reconnect to the device it was most recently paired to when you turn the speaker on and it is in Bluetooth mode.

Audio Indicators:

- Ascending Tones - Power on
- Descending Tones - Power off
- Three Rapid Tones - Ready to pair
- Single Chime - Paired
- Two Rapid Dings - Low battery
- Quick Ascending Tone - Max volume
- Quick Descending Tone - Min volume

Charging:

1. A full charge requires approximately 2-3 hours.
 2. Plug the USB-C end of the charging cable into the charge port on the right of the speaker.
 3. Plug the opposite end of the charging cable into a power supply of at least DC 5V 2A.
 4. Charging is complete when the green light turns on.
- Warning: Please use UL compliant power supply.

AUX in:

The speaker will auto-switch to the Aux-in mode while connect with your aux cable.

Top

Bluetooth Indicator light:

- Flashing Blue - Pairing Mode
- Solid Blue - Bluetooth Connected

Charging Indicator light:

- Slow Flashing Red - Low Battery/ Less than 10% Battery
- Solid Red - Less than 20% Battery
- Solid Orange - Less than 55% Battery
- Solid Yellow - Less than 75% Battery
- Solid Green - More than 75% Battery

 
Press: Bluetooth/Aux
Hold 5 Sec.: Bluetooth Disconnect

Press: Volume down
Hold: Prev. track

Press: Pause/Play


Press: Volume up
Hold: Next track

Hold 2 Sec.: On/Off
Hold 8 Sec.: Reset

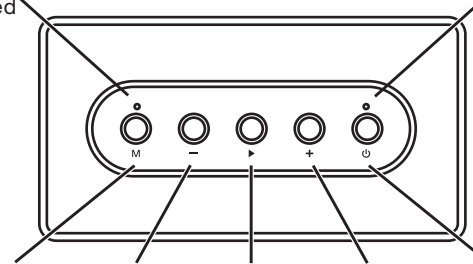

Right

 Charge Input/
USB-C port

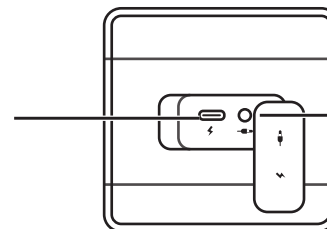

Aux port

TWS (True Wireless Stereo) pairing

1. You can pair two speakers of this same model together.
 2. Turn Bluetooth off on your device, place two matching speakers together, power them on and switch to Bluetooth mode.
 3. Quick press "+" and "-" at the same time on one speaker, the speaker of the first power on will be the master speaker, second power on is the slave speaker.
 4. They will automatically pair, when they are paired successfully and there will be a chime. the indicator for master speaker will flash blue, the indicator for slave speaker will stay the solid blue.
 5. On your device turn Bluetooth on, and pair to one of the speakers.
 6. When the music is played, the master speaker is the left channel and the slave speaker is the right channel.
 7. To maintain TWS pairing, turn Bluetooth off on your device before powering the speakers back on, the speakers will pair automatically, then re-pair with your device.
- note: To disconnect, quick press "+" and "-" at the same time on one speaker again.

Troubleshooting:

1. If the speaker is not working correctly, turn it on/off to restart.
2. If the speaker won't turn on, recharge the battery and try again.
3. If the speaker won't charge, make sure the supply works, is 5V 2A, and not damaged.
4. If the speaker makes no sound or does not show as an available device, make sure it is not paired, if so unpair the device and re-pair the desired device.
5. If the speaker cannot be operated despite being turned on, hold the power button for 8 seconds to reset.

Safety:

1. Do not expose the product to fire, high temperature, direct sunlight, etc.
2. Do not modify or repair this device.
3. Do not allow small particles to get into the product.
4. Do not use chemical detergents to clean, use a soft dry cloth.

only at

FCC ID: 2AC23-ETS14 Model: ETS14 Input: 5V #2A Max Made in China
This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or an experienced radio/TV technician for help.
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.
Target Corp, Minneapolis, MN, 55403 Phone: 1-612-304-6073
For qualified repair specialists requesting repair information and parts please contact the original manufacturer at customersupport@gemfindyours.com

© 2024 Target. The Bullseye Design is a registered trademark of Target Brands, Inc. All rights reserved.

9.92in

11in