

## wireless speaker back top ወ +decrease volume/ ⊳ıı hold - last track play/pause/ 60 answer/end calls aux port charge port included Bluetooth Speaker • Micro USB charging cable pairing Power ON speaker

 $\bullet$  Use Bluetooth settings on your phone to pair with HEYDAY SPEAKER 04

o White light turns solid followed by a chime - pairing successful

on/hold-off/

TWS pairing

increase volume/

hold - next track

- indicators
- \* Flashing Red- Low Battery

• Rapid flashing white light

- Solid Red Charging
- No Red Light Fully Charged
- Rapid Flashing White Pairing Mode
- o Solid White Bluetooth Connected

Ascending Tones - Power on

- Descending Tones Power off
- Three Rapid Tones Ready to pair
- Single Chime Paired
- Two Rapid Dings Low battery
- Quick Ascending Tone Max Volume
- Quick Descending Tone Min. Volume

## • Full charge requires approximately 3-4 hours • Charging is complete when red light turns off • Open charge port cover on speaker • Plug micro end of charging cable into speaker • Plug USB end of charging cable into a computer or 5V DC USB power supply aux/line in • Insert 3.5mm audio cable (not included) into speaker AUX port • Insert opposite end of audio cable into the music source TWS (True Wireless Stereo) pairing You can pair two matching speakers together to get true stereo sound. • Turn bluetooth off on your device, place the two speakers together and power them on • Hold play on one speaker for two seconds, this is the right channel, you will hear a ding, the second speaker will chime and the light will turn solid when it pairs to the first speaker • Turn Bluetooth on in your device settings, and pair to the first speaker • After initial pairing, the speakers will pair automatically when powered on • Pairing of multiple speakers does not rely on the "Dual Audio" feature of newer phones IPX7 water resistance • The speaker is water resistant with the back flap closed, so you can listen to music outdoors or indoors, and not have to worry about spills or sudden storms. troubleshooting • Speaker does not show as an available option on my device: Ensure the speaker is not paired to another device. Enter Bluetooth settings on connected device and unpair it. Follow pairing instructions on desired device. need some help? Can't get it to pair? Have a question or comment? [])) call us at: 877-698-4883 or: 877-MyTgtTech online at: TargetTechSupport.com safetv • Submergable up to one meter of water for less than 30 minutes • Do not modify or repair this device • Do not use in high temperatures or extreme weather • Do not use chemical detergents to clean your device, use a soft dry cloth heyday 🖟 🐨 🕱 FCC ID: 2A023-BTSP41 Model: bts-41 MC:D0318 Input: SV **m** Max 1A Mode in China This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept interference received, including interference that may cause undesired operation. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This expirate has been tested and found to comply with the limits for a Class B dighel device, pursuent to Part B of the FCC Rules. These limits are designed to provide reasonable protection agains harmful interference in a related in attallation. This equipment generates, uses and can radiate radia frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radia communications. may cause hormful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Review or relacate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experimenced radio/TV technician for help. Target Corp. Mpls. MN, 55403 Phone: 877-698-4883 This modular complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must

4 in

charging

front

back

not be co-located or operating in conjunction with any other antenna or transmitter

5.6 in