

outside

12 in

**light indicators for selfie remote**

- Flashing white - ready to pair
- Solid white - paired
- Flashing red - low battery

**selfie remote**

- Remove the selfie remote from the tripod stand.
- Hold the camera button to power on, be sure to remove the protective film on the battery.
- The indicator light will flash white when it is ready to pair.
- Use the Bluetooth settings on your phone to pair with "HEYDAY REMOTE 01"
- The remote is connected when the indicator light turns solid white.
- Open the camera on your phone and use the camera button to take pictures.
- The remote will automatically shut down after 10 minutes of no use, hold the camera button to turn the selfie remote off.
- If the indicator light is flashing red the remotes battery is low, replace the CR2032 battery.

Heqday, Inc.  
 FCC ID: 2A023-H667 Selfie Remote Model: H667  
 This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.  
 Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.  
 NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.  
 However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
 • Reorient or relocate the receiving antenna.  
 • Increase the separation between the equipment and receiver.  
 • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
 • Consult the dealer or an experienced radio/TV technician for help.  
 The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure condition without restriction.  
 Target Group: Male, White, (20-49) Phone: 1-822-304-6073  
 For qualified repair specialists requesting repair information and parts please contact the original manufacturer at customer-support@genefit-dynurs.com

**WARNING**

- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- The remote control supplied with this product contains a CR2032 coin/button cell battery.
- The battery voltage is 3V.
- Non-rechargeable battery is not to be recharged.
- Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.

 
**Battery Warning:**

- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

**WARNING:** Contains coin battery

**WARNING**

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH OF CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.

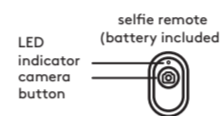

closed right - page 3

back cover - page 6

front cover - page 1

inside

**battery installation**

**front**

camera button  
indicator light

**back**

battery cover

- ①
- ②
- ③
- ④

If the remote is not working or the indicator light is flashing red, you will need to replace the battery. First, use a flat edge tool like a coin or screwdriver to rotate the center slot clockwise 90 degrees to the unlock position.

Next, flip the remote over so that the back of the remote is facing down and then tap the front of the remote to remove the battery cover.

After the battery is properly inserted, replace the battery cover and use the flat edge tool like a coin or screwdriver to rotate the center slot counterclockwise to the lock position.

open left - page 2

open middle - page 4

open right - page 5

DO NOT PRINT

**how to fold: TRI FOLD**

inside - open

