


4 in

tripod selfie stick with ring light

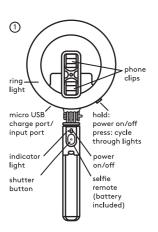

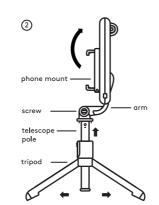


To use the tripod, pull the telescope pole up and open the legs of the tripod, and place it on a sturdy flat surface.

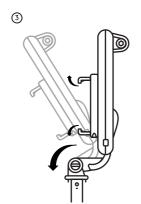

6.67 in

Adjust the arm of the ring light to the desired position, if the arm is hard to move, loosen the screw. Tighten the screw and nut to lock it in place. Be sure that the arm is not angled too far forward or it will tip

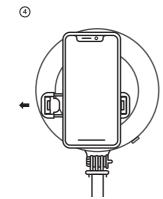

Rotate the phone mount, pull the arm of the phone mount open, and place your phone into it. The mount rotates so you can stream in either landscape or portrait settings. Close the legs of the tripod to use it as a selfie stick

included

- Tripod selfie stick with ring light
 Selfie remote
 Micro-USB charging cable

light indicators for selfie remote

- Flashing white rapidly ready to pair
 No white light paired
 Flashing red low battery

selfie remote

- Extend the telescope pole and remove the selfie remote

- Be sure to remove the protective film on the battery, slide the power button up to power on
 The indicator light will rapidly flash white when it is ready to pair
 Use the bluetooth settings on your phone to pair with "HEYDAY REMOTE 02"
 The remote is connected when the indicator light turns off
 Open the camera on your phone and use the shutter button to take pictures; the light will flash each time a photo is taken
- Press and hold the shutter button to start recording video, the indicator light will stay lit
 during the duration of the video recording; let go of the shutter button to stop recording
 The remote will enter stand by mode after 10 minutes of no use, slide the power button
 down to turn the selfie remote off
- down to turn the selfie remote off

 If the indicator light is flashing red the battery is low, replace the CR1632 battery note: the selfie remote is compatible with iPhone iOS 5.0 and newer, Android 4.2.2 and newer (Android devices: if you change your "Volume key function", be sure to change it into default, or "take a picture" to let the selfie stick function normally)

ring light

- The ring light

 The ring light requires approximately 3 hours to fully charge but may take longer

 Using the micro-USB cable provided, plug the micro-USB end into the ring light and opposite end into the USB-A power supply of at least DC 5V 1A warning: please use UL compliant power supply

 Hold the power button to turn the light on/off

 Press the power button to cycle through cool, warm, and bright light temperature settings note: the ring light will recall the last setting when turned back on; run time for maximum brightness on is 1.5 hours
- maximum brightness on is 1.5 hours

installation tips

- If the tripod is unstable, adjust the position of the phone mount for extra stability note: maximum weight of 300g when legs fully extended and spread

 Be sure not to press down on the tripod too forcefully as this may damage the legs

- To avoid damaging your phone, make sure that the screw is fully tightened before placing
 your phone into the mount
 Always be aware of your surroundings; do not use the stand as a selfie stick in potentially
 dangerous situations such as driving, walking, or situations that require your full attention

Can't get the stand to stay up? Have a question or comment?



call us at: 877-698-4883 or: 877-MyTgtTech online at: TargetTechSupport.com


safety


- Do not use near any water source
 Do not modify or repair this device
 Do not use in high temperatures or extreme weather
- Do not use chemical detergents to clean your device, use a soft dry cloth


Target Corp. Mpls. MN, 55403 Phone: 1-612-304-6073

 
front

selfie stick remote

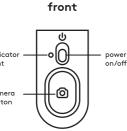

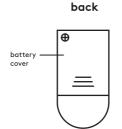


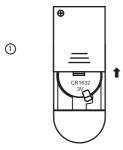




If the remote is not working or the indicator light is flashing red, you will need to replace the battery. First, use and then slider the battery cover up

Next, remove the old battery from the battery compartment.

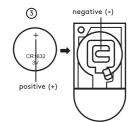

Insert the new battery in the prope direction as indicated by positive (+) and negative (-) symbols

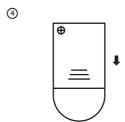

After the battery is properly inserted slider the battery cover down and use a screwdriver to tighten the screw.

- Chemical Burn Hazard. Keep batteries away from children. Do not ingest the battery.
 The remote control supplied with this product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours.
- and can lead to death. Keep new and used batteries away from children.
- If the battery compartment does not close securely, stop using the product and keep it away from children.
 If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

- Insert the battery in the proper direction as indicated by positive (+) and negative (-) markings in the battery holder.
 Remove a depleted battery promptly and recycle or dispose of it in accordance with Local and National Disposal Regulations.

 If a battery leaks, remove it and recycle or dispose of it in accordance with battery.
- manufacturer's instructions and Local and National Disposal Regulations. If fluid from the battery comes into contact with skin or clothes, flush with water immediately.

 Remove the battery if your device is to be stored for an extended period of time without
- being used