

 
4.65 inches

6.5 inches


 **rock on**

TWS earbuds with charging case

Open Case

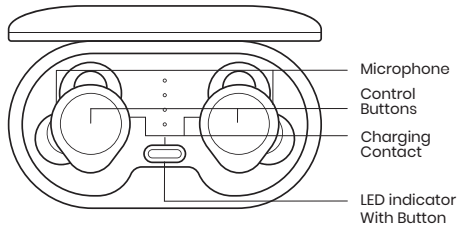

Back

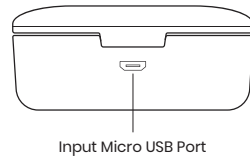 

Before you get started:

- High volume may affect your hearing.
- Do not use the unit while driving or cycling or where it's necessary to keep environmental awareness. Doing so may cause traffic accidents.
- This product has magnets which may interfere with pacemakers, defibrillators and programmable shunt valves or other medical devices. Do not put this product close to these medical devices and the person who use any of these medical devices.

Whats included:

- TWS Earbuds
- TWS Earbud Case
- Micro USB charging cable

 
Indicator:

- Earbud Solid Red - Charging
- Earbud No Light - Charging complete
- Earbud Rapid Flashing Red/Blue - Pairing mode
- Earbud Rapid Flashing Red/Blue and Fades - Paired
- Earbud Flashing Red - Low power
- Case One Light - 25% charged
- Case Two Lights - 50% charged
- Case Three Lights - 75% charged
- Case Four Lights - 100% charged

FRONT

Control Buttons

Quick Tip: the control button is located in the center of the earbud, be sure to button here so inputs register

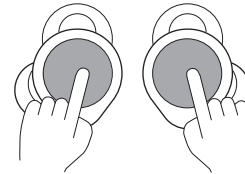

Left earbud	or	Right earbud
● ◌ reject call	● hold 1 sec.	● ◌ reject call
● ⏻ turn on turn off	● hold 4 sec.	● ⏻ turn on turn off
● ⏮ play/pause ● ⏭ answer/end call	● 1 tap	● ⏮ play/pause ● ⏭ answer/end call
●● ⏪ next song*	●● 2 taps	●● ⏩ prev. song*
●●● ⏴ voice assist	●●● 3 taps	●●● ⏵ voice assist

Pairing:

1. To pair the earbuds to your device for the first time, open the case and remove the earbuds.
2. The Right will flash blue and red when they are ready to pair.
3. Use your device to pair with "GEMSTWS07". The earbuds will flash and fade when they have successfully paired.

Re-enter Pairing: To re-enter pairing mode disconnect from your device.

Troubleshooting:

- If the earbuds are not working correctly, reset them
- If the earbuds won't turn on, recharge the battery and try again
- If the earbuds won't charge, make sure the power supply works, is 5V>1A, not damaged and that the case is charged
- If the earbuds still won't charge, make sure the charge pins are clear of debris as this may cause a connection issue; if they are use a soft dry cloth to clean them
- If the earbuds make no sound or do not show as an available device, make sure they are not paired, if so unpair the device and repair to the desired device

Safety:

- Do not use near any water source
 - Do not modify or repair this device
 - Do not use chemical detergents to clean your device, use a soft dry cloth
- WARNING:** The battery (battery or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like

FCC ID: 2A023-TWS07 Model: TWS07 Case Input: 5V\leq500mA Case Output: 5V\leq250mA Earbud Battery Capacity: 3.7V/50mAh/0.185Wh Case Battery Capacity: 3.7V/450mAh/1.665Wh Made in China
This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

gemfindyours.com 7157 Shady Oak RD, Eden Prairie, MN 55344 Distributed by Chug, Inc.



BACK