

多媒体扬声器 - K88

便携式无线K歌音箱
MI-KM104



技术规格:

无线标准: 5.0
传输距离: 10米
播放时间: 4-6小时
频率效应: 80Hz-15KHz
扬声器: 52mm 40, 10W
输入功率: 5V=1A
最大电流消耗: 1A
电池类型: 高性能大容量锂电池
音频信号输入接口: 标准Φ3.5mm耳机孔(立体声)

特点:

- 无线连接
- 记忆功能:断点续播
- 支持U盘/TF卡/AUX播放模式
- 内置锂离子电池
- 多种音乐格式解码
- 使用高保真的扬声器,发出声音更自然和细腻

无线扬声器说明书

多媒体扬声器 - K88

按键说明:

- 音箱**
播放功能
- 按键+
短按: 喇叭音量+
长按: 下一曲
 - 我键-
短按: 喇叭音量-
长按: 上一曲
 - 电源
长按: 开/关机 短按: 播放/暂停
长按: BS 复位 (解决死机功能)
 - 灯光
长按: 开灯/关灯 短按: LED灯彩灯模式切换
 - 按键M
长按: 蓝牙模式下暂停, TF卡和U盘模式下单曲循环/顺序播放

麦克风

- 播放功能
- 电源
长按: 开/关机 短按: 切换音量控制/静音控制
 - 按键+
短按: 增加音量/增加音调
 - 按键-
短按: 减少音量/减少音调
 - 按键
长按: 降噪音 短按: 变音

使用说明:

- 无线配对
1.1. 使用无线配对前, 请先打开音频电源, 它已经默认为无线模式。
1.2. 打开无线设备, 搜索K88, 连接配对, 连接成功后, 开始播放音乐体验。
- 适用于各种手机配件无线技术, 无线适配器, 无线播放器。
- 语音提示
1. 1. 打开/机有语音提示音;
1.2. 音量增加时最大音量有语音提示, 最小音量无语音提示。
1.3. 检测到3-4V电压提示3次后关机
1.4. 模式切换
1.5. 开机默认进入无线模式, 模式切换顺序: 无线模式, FM模式, TF卡模式-U盘模式-AUX模式
1.6. 2. 模式后指示光。
1.7. 音量
1.8. 无线配对状态: 白灯闪烁约0.5秒/次
1.9. 播放时状态: 红灯常亮
1.10. 播放时状态: 红灯闪烁约1秒/次
1.11. 充电指示灯
1.12. 充电时红灯亮, 充满电 红灯灭
1.13. 音量
1.14. 开机默认音量70%音量。
1.15. 充电使用:
本机内置过充保护电路, 可长时间连接电脑或充电器, 约四小时即可完成充电。每个电池的播放时间会根据使用不同大小的音量而有所不同。
1.16. 无工作状态: 15分钟后自动关机。

多媒体扬声器 - K88

故障排除:

1. 自动关机: 电池电量不足时会自动开启电池保护, 请充电4小时后再试。
2. 无法播放音乐: 音乐文件存储路径不能被播放识别, 音乐文件请存储在可移动设备的目录下。
3. 连接电脑无声: 电脑界面连接错误, 请选择正确的音频输出接口。
4. 充电无反应或功能异常: 关机后重试。
5. 当机器出现异常现象5分钟长按开/键约15秒自动复位。

产品保修卡

用户名: _____

联系电话: _____

购买日期: _____

产品编号: _____

维护故障: _____



注意: 产品保修期为6个月

Multimedia speaker - K88

LED Speaker and Microphone
MI-KM104



Technical Specifications:

Wireless standard: 5.0
Transmission distance: 10 meters
Playing time: 4-6 hours
Frequency effect: 80Hz-15KHz
Frequency effect: 52mm 40, 10W
Input power: 5V = 1A
Maximum current consumption: 1A
Battery type: High-performance large-capacity lithium battery
Audio signal input interface: standard Φ3.5mm
headphone jack (stereo)

Features:

1. Wireless connection
2. Memory function, breakpoint resuming
3. Support U disk/TF card /AUX playback mode
4. Built-in lithium ion battery
5. Enhanced decoding, support multiple music formats.
6. Using high-fidelity speakers, the sound is more natural and delicate

Multimedia speaker - K88

Button instruction:

SOUND BOX
Press function

1. Press +
Click: volume up
Long press: previous song
2. Press -
Click: volume down
Long press: next song
3. Power Supply
Long press: Switch on and off. Click: play/pause
Long press: BS reset (to solve the crash function)Step
4. Lighting
Long press: Turn the light on/off
Click: switch to LED magic light mode
5. Press M
Long press: In Bluetooth mode, eliminates the voice cancel, TF card and U disk mode single loop/sequential play

MICROPHONE

Press function

1. power button
Long press: Power on/power off
Click: Convert Volume Control Reverb Control
2. Press +
Click: volume up/ reverb up
3. Press the button -
Click: volume down/ reverb down
4. Microphone button
Long press: eliminates the original sound
Click: magic voice

11. Type-C jack

1. The charging cable interface, when plugged into the Type-C charging cable, the default is to charge the device
2. When using the radio function, insert the charging cable as the radio antenna, and the radio function can be used normally

Directions for use:

1. Wireless pairing
1.1. Before using wireless pairing, first turn on the audio power, it is already the default wireless model.
1.2. Turn on the wireless device, search for K88, connect and pair. connect After success, start playing music experience.
2. Suitable for various mobile phone accessories wireless technology, wireless adapter, wireless player.
3. Voice prompt
3.1. There is a voice prompt when turning on/off.
3.2. When the volume is increased to the maximum volume, there will be a voice prompt, and the minimum volume will not have a voice prompt.
3.3 Shut down after detecting 3.4V low power prompt 3 times;
4. Mode switching
4.1. It enters the wireless mode by default when it is turned on. The sequence of mode switching is as follows:
Wireless mode-TF card mode-USB mode-AUX mode.
4.2. Mode: Post-insertion priority
5. Play indicator
Wireless search status: white light flashes quickly about 0.5 seconds/time;
Wireless pairing status: white light is always on
Playing status: the white light flashes slowly about 1 second/time;

6. Charging indicator

1. Red light on when charging, red light off when fully charged
7. Volume
Turn on the default speaker volume at 70%.
8. Charging and using:
This machine has a built-in overcharge protection circuit which can be connected to a computer or charger for a long time, about four hours. Charging is complete. The play time of each battery will vary depending on the volume used rather different.
9. If there is no working state, it will automatically shut down after 15 minutes.

Troubleshooting:

1. Automatic shutdown: When the battery power is low, the battery protection will be turned on automatically, please charge it for 4 hours before use.
2. Unable to play music: The music file storage path cannot be recognized by the player. Please store the music file in the root directory of the removable device.
3. There is no sound when connected to the computer: the computer interface is connected incorrectly, please select the correct audio output port.
4. There is no response to the keys or the function is disordered: try again after shutting down.
5. When the machine is abnormal, press and hold the power button for 8 seconds to automatically reset

Product warranty

Username: _____

Contact number: _____

Date of purchase: _____

Product number: _____

Maintenance failure: _____

Note: The product warranty is 6 months

WIRELESS SPEAKER INSTRUCTIONS

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.