

## Controls •

### Description




- ① Charging Port
- ② Digital Display
- ③ Charging Slots
- ④ Built-in Mic
- ⑤ Left Earbud Touch Pad (Multi-function)
- ⑥ Right Earbud Touch Pad (Multi-function)
- ⑦ LED Light Indicator (Inside)
- ⑧ Right Earbud
- ⑨ Left Earbud

## Instruction • For Use

### LED Information



Plug the Type-C end of the included USB charging cable into the charging port of the Charging Case. Digital display will flash to show the battery capacity of charging case.

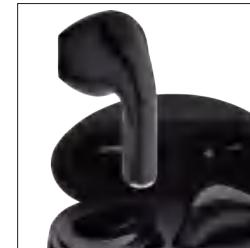

### ON / OFF Device

Take out the Earbud from the Charging Case, it will turn on automatically (Or, if the Earbud is not stored inside the Charging Case, Press and hold the touch pad of the Earbud to turn ON.)


Press and hold the touch pad of the Earbud to turn OFF the device. (Or, put the Earbud back to the Charging Case, it will turn off for recharging automatically.)

## Instruction • For Use

### Pairing



After Turning On the Device  
Wait for Blue Flashing Light

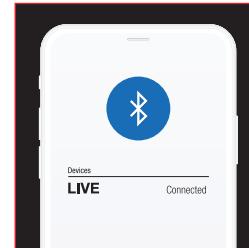

Search LIVE  
in your Bluetooth Settings



Bluetooth Device  
Connected

## Instruction • For Use

### Control Functions

- ▶ Increase Volume  
Press and hold the Touch Pad of right Earbud for 1 second and release
- ◀ Decrease Volume  
Press and hold the Touch Pad of left Earbud for 1 second and release
- ⏸ Pause  
Short press the Touch Pad of one Earbud will pause the music
- ▶ Play  
Short press the Touch Pad of one Earbud will resume the music
- ◀ Previous track  
Short press the Touch Pad of left Earbud 3 times
- ▶ Next track  
Short press the Touch Pad of right Earbud 3 times

Note: An indication tone will alert you when the volume is adjusted to maximum level.

### Call Functions

- 📞 Answer a call  
Short press the Touch Pad of one Earbud to answer an incoming call.
- 📞 Reject a call  
Double touch the Pad of one Earbud
- 📞 End a call  
After your phone conversation, short press the Touch Pad of one Earbud

## Instruction • For Use

### Listening to Music Wirelessly

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the Bluetooth Earbud to stream music wirelessly. Once it is paired, play music from your device.

### Voice Assistant Operation



Voice Assistant is a built-in interactive feature that allows you to Start Conversation with Your Siri or Google Assistant, with short press the Touch Pad twice on your device. This feature enables you to ask questions and seek assistance on a number of things from your Voice Assistant, even when you're several feet away from your phone. Below are some of the many examples listed below.

While the Earbud is paired using Bluetooth, short press the Touch Pad twice to start conversation with your Siri or Google Assistant. An indication tone would be heard before you speak into the Earbud.

**Example 1:** Short press the Touch Pad twice and then speak into the Earbud, how's the weather today?  
Voice Assistant will reply with something like: *mainly cloudy with a few showers.*

**Example 2:** Short press the Touch Pad twice, and then speak into the Earbud, what's the time now?  
Voice Assistant will reply with something like: *it is 8pm now.*

## Troubleshooting •

### No Sound

- Power On the Earbud and charge the battery
- Increase the volume on your Earbud, your mobile device and music source
- Move your mobile device closer to the Earbud and away from any interference or obstructions
- Use a different music source
- Connect another mobile device

### Poor Sound Quality

- Use a different music source
- Connect another mobile device
- Move your mobile device closer to the Earbud and away from any interference or obstructions

### Battery Won't Charge

- Secure the ends of the USB charging cable
- Try another charging source

### Your Google Assistant not responding

- This is only available for Android Mobile Devices
- Make sure Google Assistant is downloaded on your mobile device and set to default voice assistant
- Make sure your Android Mobile Device is Bluetooth paired with Earbud
- Make sure you are in a country where Google Assistant is available
- For additional support, visit [www.support.google.com/assistant](http://www.support.google.com/assistant)

### Product Specifications:

Bluetooth specification: Bluetooth 5.3  
Operating Range: Up to 33 feet  
Working time: Up to 2.5 hours (max. volume)  
Charging input voltage: DC 5V  
Charging time: Less than 2 hours  
Built-in Battery: Charging Case: 230mAh  
Bluetooth Earbud: 30mAh (each)  
Size: Charging Case: 1.95" (L) x 0.84" (D) x 1.95" (H)  
Bluetooth Earbud: 0.66" (L) x 0.63" (D) x 1.26" (H) each  
Weight: Charging Case: 0.8 oz, Bluetooth Earbud: 0.1 oz (each)

**Note:** Battery life & charging time may vary based on usage & types of devices used.)

## Warranty •

**WARRANTY COVERAGE:** This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse; neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty doesn't cover the following which may be supplied with this product, including but not limited to; LCD Screens, glass parts, lenses, bulbs etc. This warranty is effective only if the product is purchased and operated in USA and Canada, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

**WARRANTY DISCLAIMERS:** This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract. Under no circumstances will Manufacturer's/ Distributor's maximum liability exceed the retail value of the product.

**WARRANTY PERFORMANCE:** During the above 90 day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 90 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

**SERVICE AND REPAIR:** If service is required for this product, you should first contact Midwest Trading Group Customer Service at [info@mtradinggroup.com](mailto:info@mtradinggroup.com) or by calling 1 (866) 815-4714, Monday to Friday 10am to 6pm EST.

**NOTE:** Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

