


Internal Photographs

EUT - Open View




EUT – PCB View 1


Antenna location

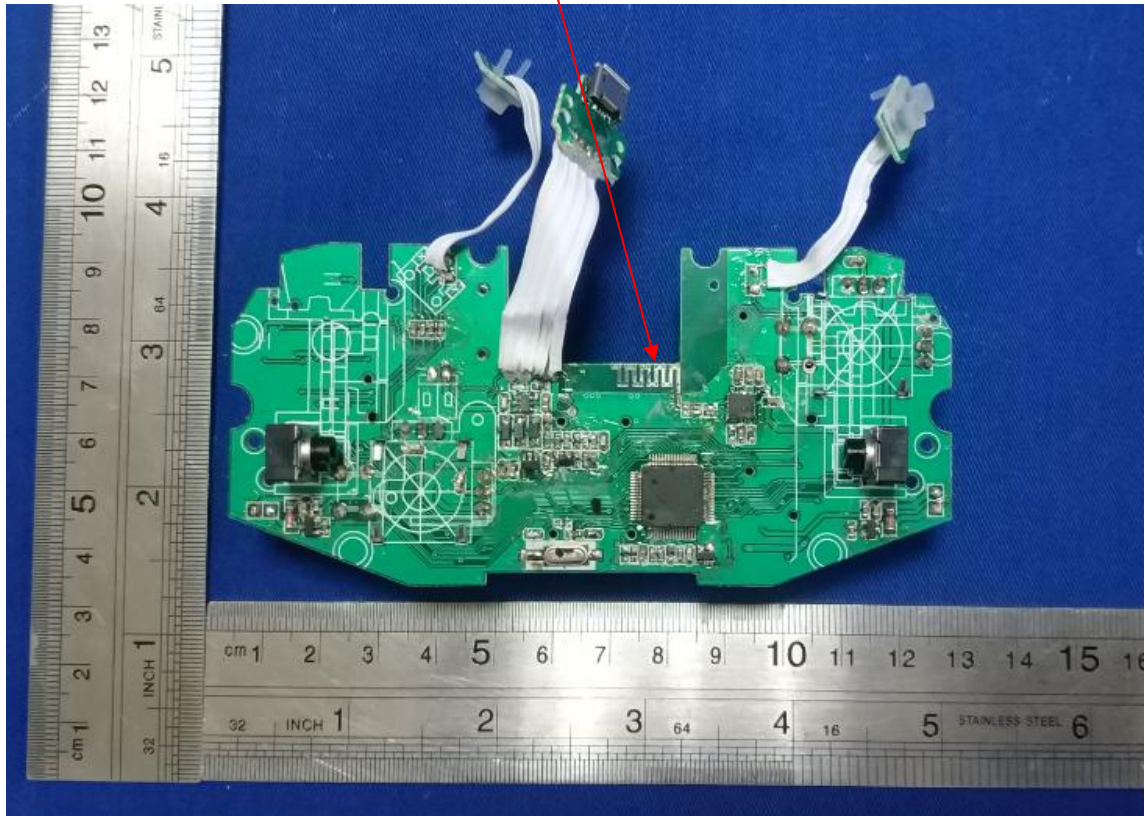


EUT – PCB View 2

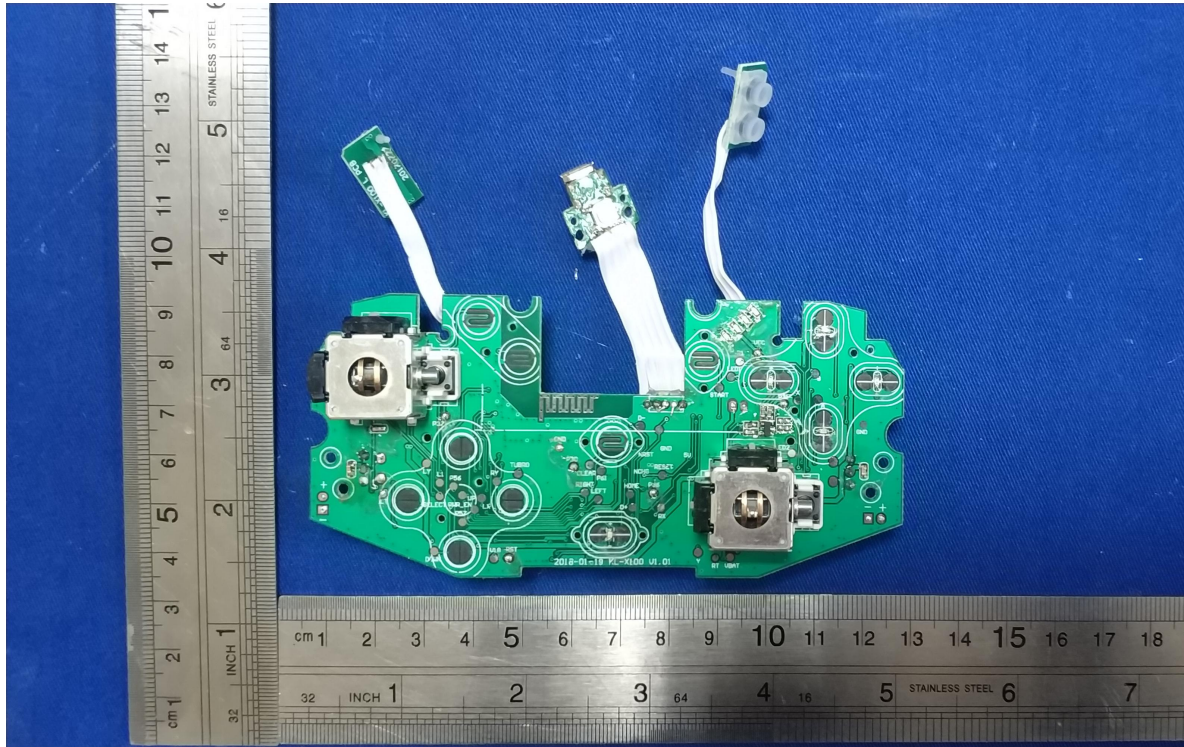

EUT – parts View 1

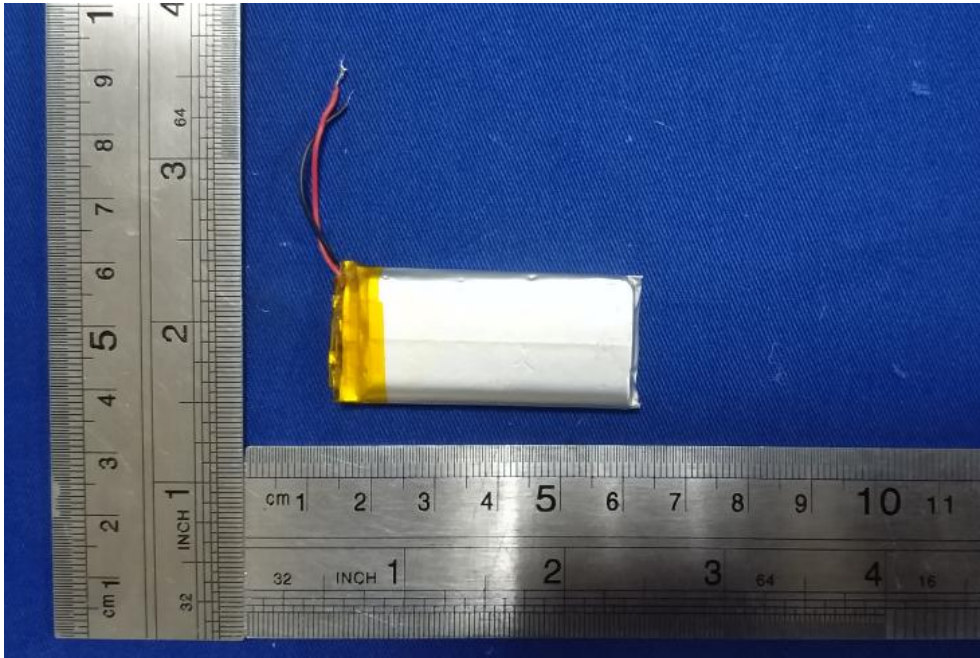


EUT – parts View 2

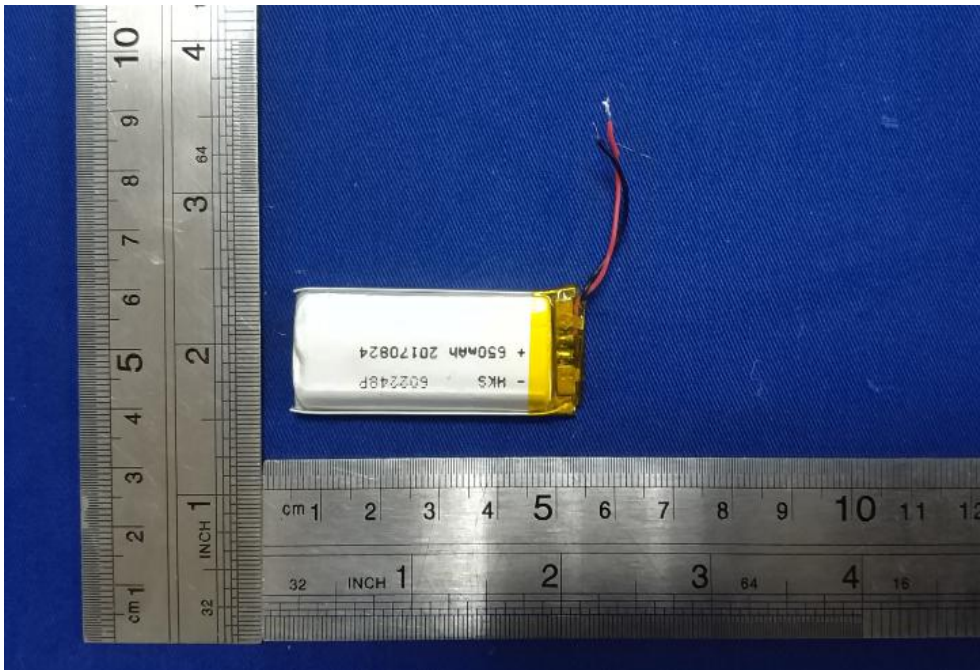

EUT – parts View 3



EUT – parts View 4

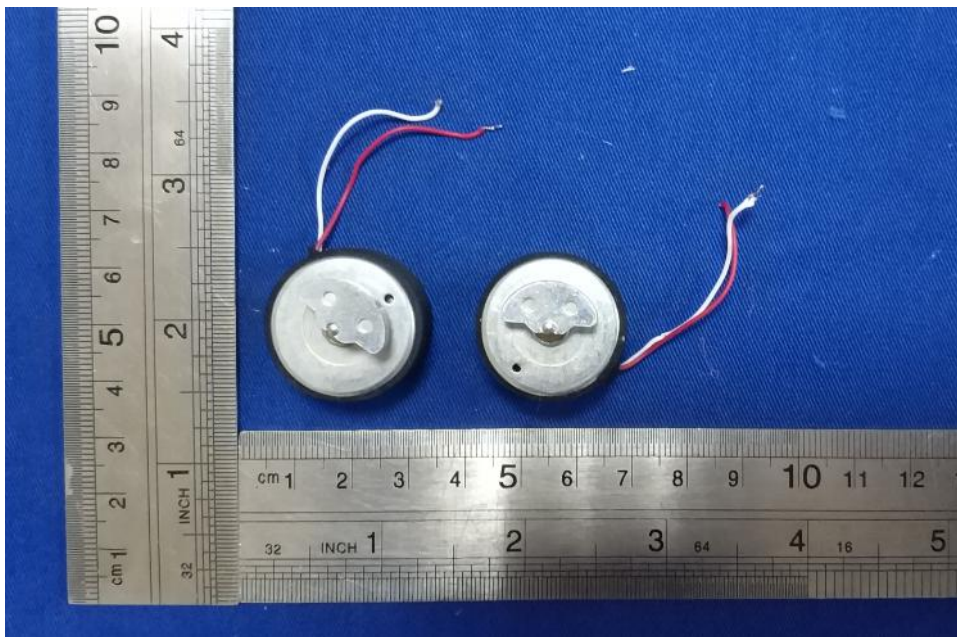

EUT – BT MODULE View

