 
 
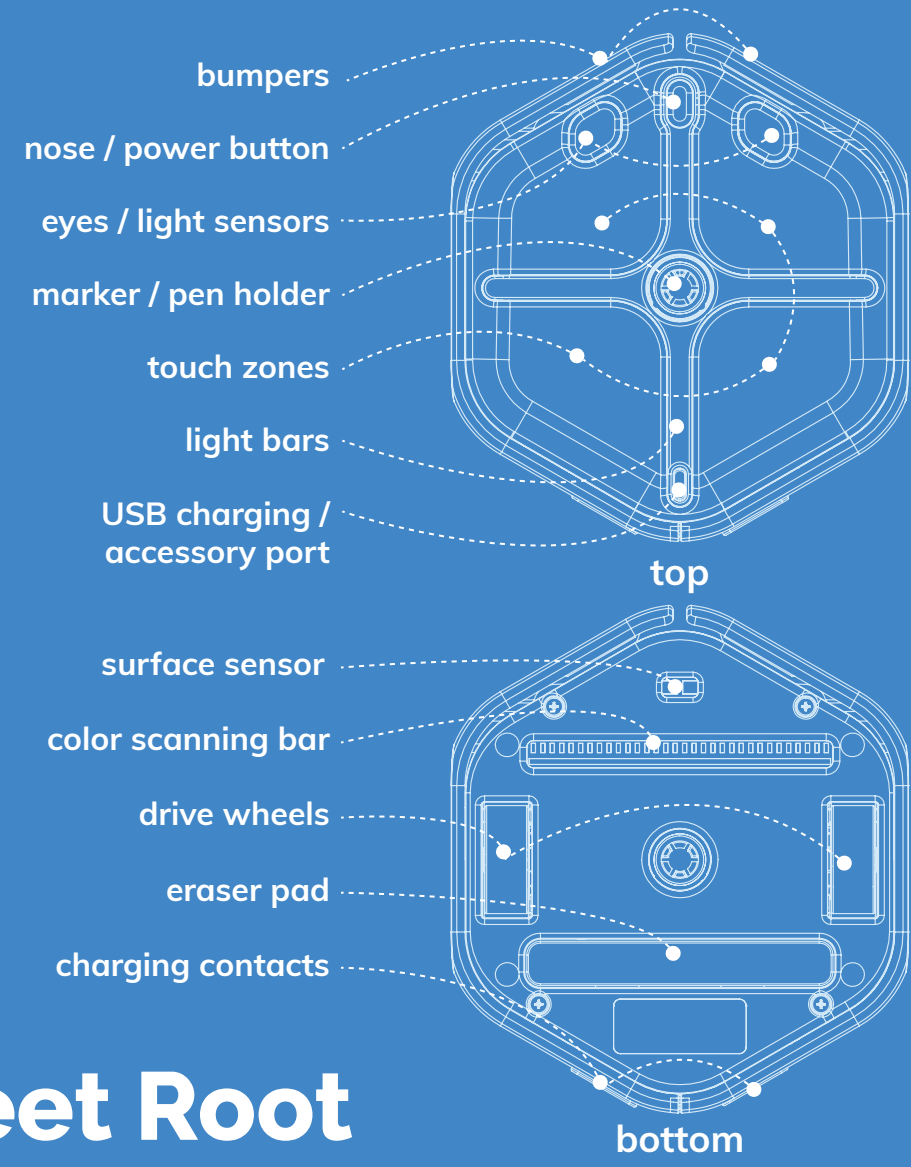 


Let's get started.

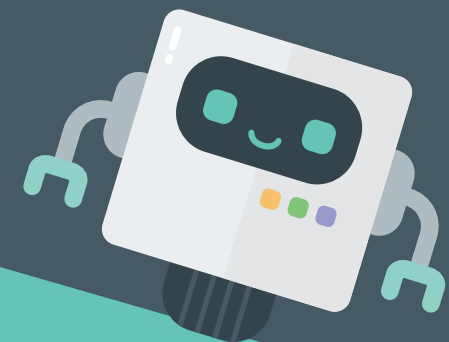

Meet Root

What's Included:

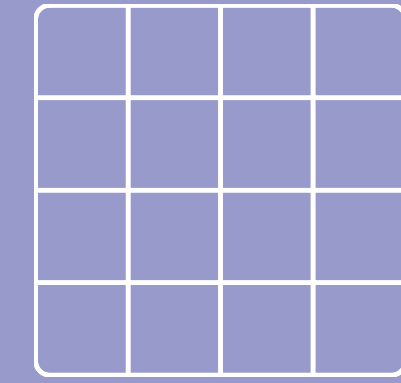 


fold out whiteboard grid



Root robot

You Need:

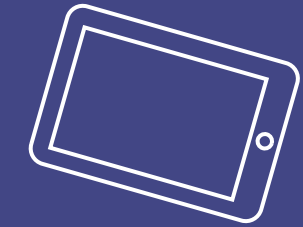

mobile device to download the Root Coding app

Problem solving reimaged



Getting Started:

1



Remove the cardboard shipping tab from the bottom of Root.

2

Use the cable provided to plug Root into a USB charger. Root will start flashing yellow to indicate charging. Root will light up green when charging is complete.

 


3



Download and install the Root Coding app on your mobile device.

Tips:

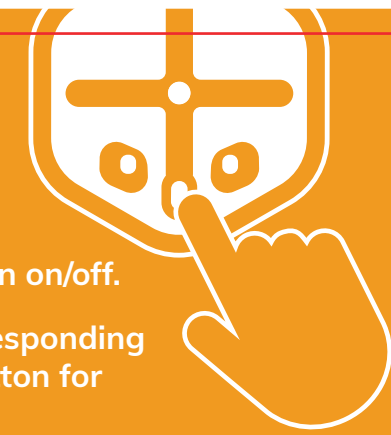

Turning Root On/Off - Press the nose button until the lights turn on/off.

Hard Reset Root - If Root is not responding as expected, hold the nose button for 10 seconds to turn Root off.

Low Battery Warning - If Root flashes red, then the battery is low and needs to be charged.

Clicking Noise - Root's drive wheels have internal clutches to prevent damage to the motors if Root is pushed or gets stuck.

Pen / Marker Compatibility - Root's marker holder will work with most standard sizes. The pen or marker should not touch the surface underneath until Root lowers the marker holder.

Eraser Pad Cleaning / Replacement - Root's eraser pad is held in place with a hook-and-loop fastener. To service simply peel off the eraser pad and wash. Note that Root's eraser only works on magnetic whiteboards.

Visit codewithroot.com/support for more info

rev 01A.1

