

Getting Started

- Remove the speaker from the box.
- Remove any packaging from the product.
- Please retain all packaging until you have checked and counted all the parts and the contents against the parts list.

Package Contents

- Rugged Wireless Speaker
- USB rechargeable cable
- Instruction Manual


Key Features

- Rugged Wireless Speaker
- Wireless Bluetooth connectivity to iPad, iPod Touch, Android, Windows Phone, Blackberry, smartphones, tablets, computers and more.
- Stream Music/Audio wirelessly
- Use as Hands-Free speaker phone, with a built-in microphone
- IPX7 and Floating
- Rubberized Outer Sleeve
- Rechargeable built-in battery
- Wireless Streaming Range – 26 to 33 Feet

SAFETY INSTRUCTIONS

- Read all instructions before using this product.
- Do not leave this product unattended while connected to the power supply.
- Do not use if unit has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by qualified personnel. Improper repairs may place user at serious risk.
- Place unit on sound, even surface, free of vibrations and away from sources of heat.
- Do not put objects into openings.
 - Keep free of dust, lint, hair etc.
- Do not use this unit for anything other than its intended use.
- Keep this product out of reach of children.
- This product is not a toy.
- Do not play music at excessive levels especially near children, as damage to hearing may occur.

Description of Parts

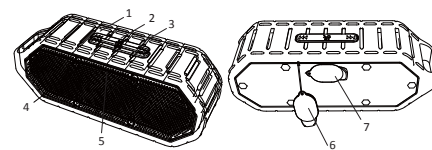

Item	Function	Operation
1	Volume decrease	Short press will skip backward to the previous track, and long press will decrease the volume
2	MFB button	To turn ON/OFF the speaker. Short press will pause or resume the music. Call Incoming Answer / End Call / Redial last number when in Bluetooth mode.
3	Volume increase	Short press will skip forward to the next track, and long press will increase the volume level
4	Built-In Mic	To answer incoming calls while in Bluetooth mode
5	LED indicator	LED turns RED while recharging, and turns off when fully recharged. LED turns BLUE when in Bluetooth mode.
6	Seal cover (with O-ring)	IPX7 protection of the speaker
7	DC Charging Port	DC Charging Port – To charge the speaker

1

2

INSTRUCTIONS FOR USE

Charging the speaker

For best results, fully charge the speaker before its first use.

- Connect the USB charging cord (included) to the DC 5V charging port of the speaker and insert the other end into a port on your computer or similar power source.
- LED turns RED, indicating that the speaker battery is being charged. Once it is fully charged, the LED will turn off. It will take around 9 hours to fully charge the speaker.

Turning ON/OFF the Speaker –

Press and hold the "MFB" button for 3-6 seconds until you hear the indication tone. Blue LED light will blink rapidly, your speaker is now ON and is entering "pairing" mode.

Press and hold the "MFB" button for 3-6 seconds to turn off the speaker.

Pairing your device with Bluetooth Speaker –

Your Bluetooth Speaker can wirelessly stream audio from any Bluetooth enabled device within the distance of 26-33 Feet. Simply follow the below steps.

- Press and hold the "MFB" button for 3-6 seconds until you hear the indication tone.
- Blue LED light will blink rapidly, your speaker is now ON and is entering "pairing" mode.
- Turn on the Bluetooth on your Mobile Phone or Tablet or Computer.
- It will search for various devices.
- The pairing name of our Bluetooth Speaker is "FISHER-FBT455", pair it with this device.
- If required, enter the password "0000" to confirm to finalize pairing.
- Once paired successfully, you would hear a beep tone and the blue LED light will blink slowly.
- If you fail to pair it within the time frame or you want to pair it with a new device please follows the steps outlined above.

Select your favorite song at the Bluetooth device and music would now stream through Bluetooth speaker.

Talking using the Bluetooth Speaker

Please ensure that your cell phone is paired with the Bluetooth Speaker to use the below functions.

Function	Operation	Button
Answer Incoming Call	Incoming Call	Short press the MFB button to answer an incoming call.
End Call	Incoming Call	After your phone conversation, short press the MFB button.
Volume Increase	During a call	Long press on the Volume increase button will increase the volume
Volume Decrease	During a call	Long press on the Volume decrease button will decrease the volume
Redial last number	Standby mode and connected to a device.	Short press the MFB button twice

3

Listening to Music Wirelessly

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the Bluetooth Speaker to stream music wirelessly. Once it is paired, play music from your device.

Function	Operation	Button
Increase / Decrease Volume	Playing music	Long press to increase the volume or long press to decrease the volume
Pause	Playing music	Press MFB button to pause the music
Play	Pause	Press MFB button to resume the music
Skip Forward / Skip Backward	Playing music	Short press to skip forward the track. Short press to skip backward the track.

(Note: An indication tone will alert you when the volume is adjusted to the maximum level.)

Specifications –

Speaker	: 2x5 Watts
Unit Size	: 9-1/2"x2-7/8"x3-7/16"
Unit Weight	: 1.4 lbs
Play time	: Up to 6 hours
Charge Voltage	: DC5V (USB)
Bluetooth Range	: 26 to 33 Feet
Built-In Rechargeable Battery	: 3.8V / 3600mAh
Charging time	: around 9 hours

(Note: Battery life & charging time may vary based on usage & types of devices used.)

Troubleshooting

Problem	Possible Cause	Solution
Low sound level	Source (Tablet, Mobile Phone, Laptop, etc.) volume too low.	Adjust source volume.
	Battery dead	Charge Battery.
Sound distorted	Battery nearly dead	Charge Battery.
No sound at all.	Source (Tablet, Mobile Phone, Laptop.) turned off.	Turn the source on.
	Speaker turned off.	Turn the speaker on.
	Volume turned down source. Media paused on source.	Adjust volume source. Play media from source.

4

Care and Maintenance

Clean the unit with a soft, damp cloth. Never use chemicals or hard abrasives. Keep this unit away from wet or damp surroundings.

The crossed out whee bin symbol on this item indicates that this product needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authorities for details of where to take the item for re-cycling.

Note: iPod and iPhone are trademarks of Apple Inc, registered in the US, and other countries.

FCC Instructions

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

5