













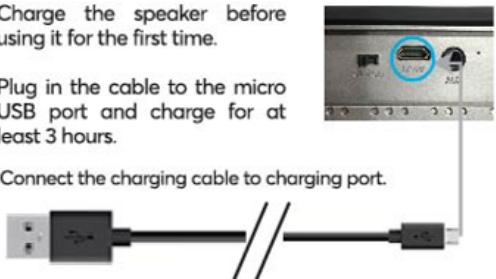

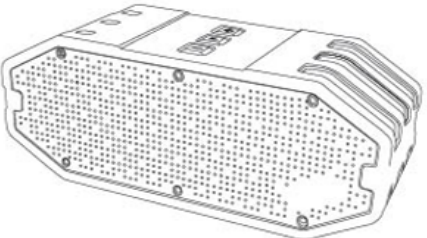
<h3>HYPE® QUICK START GUIDE</h3> <h4>WATER-RESISTANT WIRELESS SPEAKER</h4> <h5>CHARGING THE SPEAKER</h5> <p> Charge the speaker before using it for the first time.</p> <p> Plug in the cable to the micro USB port and charge for at least 3 hours.</p> <p>Connect the charging cable to charging port.</p>  <h5>PAIRING YOUR SPEAKER</h5> <p>Your speaker will work best if it is within 33 ft. of your smart device. You may experience sound briefly cutting off if you are out of range or if your wireless connection is weak. Make sure Bluetooth is enabled on your smart phone or tablet before starting the pairing process.</p>	<h3>HYPE® QUICK START GUIDE</h3> <h4>WATER-RESISTANT WIRELESS SPEAKER</h4> <h5>PAIRING YOUR SPEAKER (continued)</h5> <p>Make sure the speaker is turned off before attempting to pair it with a smart phone or tablet. Press the "OFF/ON" button to turn on the speaker.</p> <div data-bbox="862 414 1064 614"><p>1</p><p>Press the button, it works as Bluetooth mode automatically.</p></div> <div data-bbox="1075 414 1400 614"><p>2</p><p>From your smart phone or tablet, find a list of nearby devices and choose "HY-RGP". Enter "0000" if asked. The speaker will "beep" when pairing is complete!</p></div>	<h3>HYPE® QUICK START GUIDE</h3> <h4>WATER-RESISTANT WIRELESS SPEAKER</h4> <h5>MEDIA KEY FUNCTIONS</h5>  <table border="0"><tr><td></td><td>Press Once - Play/ Pause Music/ Answer Call/Hang Up</td><td>Press Twice - Reject/Redial</td></tr><tr><td></td><td>Press & Hold - Next Track</td><td>Press & Hold 3 sec - Change Mode BT/FM/AUX</td></tr><tr><td></td><td>Press & Hold - Previous Track</td><td>Press Once - Increase volume</td></tr><tr><td></td><td></td><td>Press Once - Decrease volume</td></tr></table>		Press Once - Play/ Pause Music/ Answer Call/Hang Up	Press Twice - Reject/Redial		Press & Hold - Next Track	Press & Hold 3 sec - Change Mode BT/FM/AUX		Press & Hold - Previous Track	Press Once - Increase volume			Press Once - Decrease volume
	Press Once - Play/ Pause Music/ Answer Call/Hang Up	Press Twice - Reject/Redial												
	Press & Hold - Next Track	Press & Hold 3 sec - Change Mode BT/FM/AUX												
	Press & Hold - Previous Track	Press Once - Increase volume												
		Press Once - Decrease volume												

<h3>HYPE® QUICK START GUIDE</h3> <h4>WATER-RESISTANT WIRELESS SPEAKER</h4> <h5>SPECIFICATIONS</h5> <p>Bluetooth Version: V2.1 + EDR Operation Range: Up to 33ft (10m) Play Time: Up to 2 hours Standby Time: Up to 24 Hours Battery Capacity: 1200mAh Charging Time: Up to 3 Hours FCC ID: 2A052-5B362BT BT ID: D033616</p> <h5>WARRANTY</h5> <p>This product is covered by a 3 month limited manufacturer's warranty. Contact us if you have any problems at support@dglusa.com.</p> <h5>WARNING</h5> <p>Keep away from water and moisture. Keep away from heat sources. Do not disassemble.</p>	<h3>HYPE® QUICK START GUIDE</h3> <h4>WATER-RESISTANT WIRELESS SPEAKER</h4> <h5>FCC STATEMENT</h5> <p>This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <h5>FCC INSTRUCTIONS FOR A CLASS B DIGITAL DEVICE OR PERIPHERAL</h5> <p>Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and</p>	<h3>HYPE® QUICK START GUIDE</h3> <h4>WATER-RESISTANT WIRELESS SPEAKER</h4> <p>used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none">• Reorient or relocate the receiving antenna.• Increase the separation between the equipment and receiver.• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.• Consult the dealer or an experienced radio/TV technician for help. <h5>FCC Radiation Exposure Statement</h5> <p>The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.</p>
---	--	--