

Bluetooth Portable
TORNADO Wireless
Speaker

User Guide

Getting Started

Remove the unit from the box.
Remove any packaging from the product.
Please retain all packaging until you have checked and counted all the parts and the contents against the parts list.

Package Contents

Bluetooth Speaker
USB charging cable
3.5mm auxiliary cord
Instruction manual
Warranty card

Features


1. Light-Up Bluetooth speaker with loud sound & heavy bass
2. Stream music wirelessly using Bluetooth enabled devices
3. Wireless range – Up to 10 meters
4. Built-in colour changing LED lights
5. USB/Micro SD (TF) playback [USB & Micro SD (TF) card not included]
6. Built-in FM radio
7. Built-in Microphone input
8. Built-in Aux input
9. Built-in rechargeable battery
10. Built-in foldable carrying handle

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
12. Unplug this apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

2

DESCRIPTION OF PARTS

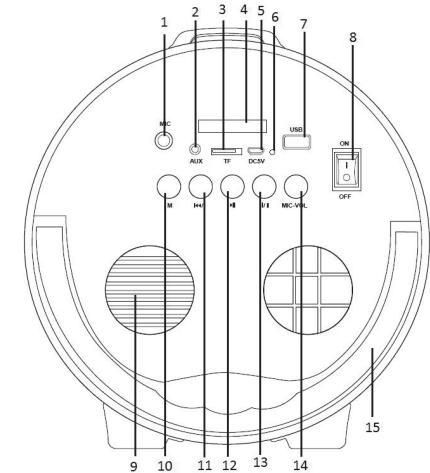

| | | | |
|---|-------------------------|----|-------------------------------|
| 1 | Microphone input | 9 | Speaker |
| 2 | Auxiliary port | 10 | Mode button |
| 3 | Micro SD (TF) card slot | 11 | Skip Backward/Decrease Volume |
| 4 | LED display | 12 | Play/Pause button |
| 5 | Charging port | 13 | Skip Forward/Increase Volume |
| 6 | Charging LED indicator | 14 | Mic volume button |
| 7 | USB slot | 15 | Carrying handle |
| 8 | ON/OFF switch | | |

INSTRUCTIONS FOR USE

Charging the speaker

For best results, fully charge the speaker before use.

1. Connect the USB cord (included) to the charging port of the speaker and insert the other end into a port on your computer or similar power source.
2. The Red LED turns on indicating that the battery is being charged. Once it is fully charged, the Red LED will turn off. It takes 5 to 7 hours to fully charge the speaker.

Note: In order to have better battery life, please do not charge for over 8 hours. Overcharging the speaker can adversely impact the battery life.

3

Turn On/Off the Speaker with colour changing LED lights at the back

1. To Turn "ON" press the "ON/OFF" switch to the ON Position.
2. To Turn "OFF" press the "ON/OFF" switch to the OFF Position.

Switch the speaker to Bluetooth pairing mode -

1. Turn ON the speaker.
2. The LED display will show "bBLUE", the speaker is now in pairing mode.
(Note: Speaker will automatically pair with previously paired devices)

Pairing your device with Bluetooth Speaker –

Your **Bluetooth Speaker** can wirelessly stream audio from any Bluetooth enabled device within 10 meters. Simply follow the below steps.

1. Turn ON the speaker.
2. The LED display will show "bBLUE", the speaker is now in pairing mode.
3. Turn on the Bluetooth on your Mobile Phone or Tablet or Computer.
4. It will search for various devices.
5. The pairing name of our Bluetooth Speaker is "2BOOM-BX318", pair it with this device.
6. If required, enter the password '0000' to confirm to finalize pairing.
7. Once paired successfully, you would hear an indication tone.
8. If you fail to pair it within the time frame or you want to pair it with a new device please follows the steps outlined above.

Select your favorite song at the Bluetooth device and music would now stream through bluetooth speaker.

Listening to Music Wirelessly

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the Bluetooth Speaker to stream music wirelessly. Once it is paired, play music from your device.

| Function | Operation | Button |
|----------------------------|---------------|---|
| Increase / Decrease Volume | Playing music | Long press the + or - button to adjust the volume to your desired level |
| Pause | Playing music | Press once to pause the music |
| Play | Pause | Press once resume the music |
| Previous track | Playing music | Short press the ⏮ button to the previous track |
| Next track | Playing music | Short press the ⏭ button to the next track |

(Note: An indication tone will alert you when the volume is adjusted to the maximum level.)

4

Aux function of the Speaker (to play music from non-Bluetooth devices)

1. Turn on the speaker.
2. Press "MODE" button until Aux mode is selected; the LED display will show "Lod" first and then "LINE".
3. Plug the 3.5 mm auxiliary cord (included) in to the auxiliary port of the speaker. And, connect the other end of the cable to the audio device (such as MP3 Players / computer / tablet etc.).
4. Select your favorite song at the source device.

Note: Functions like Skip Backward, Skip Forward etc can be only controlled through source devices, while playing music in Auxiliary mode.

Listening to Music using Micro SD (TF) card / USB slot

1. Turn on the speaker.
2. Insert Micro SD (TF) card or USB flash drive into the Micro SD (TF) card slot or USB slot. The LED display will show "Lod" first and then "SD" or "USB". Music will stream automatically.
3. Press the **⏮** or **⏭** button to move forward or backward on your playlist.
4. Press the **||** button to Play or Pause a track.

Note: While using Bluetooth, if you insert Micro SD (TF) card or USB flash drive, speaker would disconnect the Bluetooth connection and switch to Micro SD (TF)/USB function. You can press MODE button again, to select the Bluetooth mode.

FM Radio

1. Turn ON the Speaker.
2. Insert the auxiliary cord (included) into the auxiliary port. Leave the other end of the cord open. Auxiliary cord serves as FM Antenna while in FM Radio mode.
3. Press "MODE" button until FM mode is selected; the LED display will show "Lod" first and then FM frequency.
4. Press the **||** button once and the device would automatically search and store all the FM Radio stations.
5. Press the **⏮** or **⏭** button to change the FM Radio stations.

Tips!!

1. Press the "MODE" button to switch different functions of the speaker. The modes appear in the following sequence – Bluetooth / SD-USB / FM Radio / AUX-In.
2. When the unit is not in use, turn OFF the device to save the battery power.
3. Do not overcharge the unit; every charge should not exceed 8 hours.

Colour changing LED lights at the back of speaker

1. Turn on the speaker.
2. Long press the "MODE" button can turn on/off the colour changing LED lights.

5

Using the Microphone

3. Turn on the speaker.
4. Insert the plug of the Microphone (not included) into the Microphone input of the speaker.
5. Turn on the Microphone
6. Long press the **⏮** or **⏭** button and press Mic volume button to adjust the desired output level.
7. You're now ready for Karaoke.

Do's and Don'ts

Do not play music at excessive levels as damage to hearing and/or equipment may result.

Do not use in wet or in damp surroundings.

Specifications

Bluetooth version : 2.1
Speaker Size : 6.5"
Speaker Output : 10 Watts
FM Frequency : 87.5 – 108MHz
Play time : Up to 1.5 hours at max volume & 2 hours at moderate volume
Charge Voltage : DC5V (USB)
Bluetooth Range : Up to 10 meters
Built-In Rechargeable Battery: 3.7V / 2000mAh
(Note: Battery life & charging time may vary based on usage & types of devices used.)

Troubleshooting

| Problem | Possible Cause | Solution |
|------------------|---|-------------------------|
| Low sound level | Source (Tablet, Mobile Phone, Laptop, etc.) volume too low. | Adjust source volume. |
| | Battery dead | Charge Battery. |
| Sound distorted | Battery nearly dead | Charge Battery. |
| No sound at all. | Source (Tablet, Mobile Phone, Laptop.) turned off. | Turn the source on. |
| | Speaker turned off. | Turn the speaker on. |
| | Volume turned down source. | Adjust volume source. |
| | Media paused on source. | Play media from source. |

Care and Maintenance

Clean the unit with a soft, damp cloth. Never use chemicals or hard abrasives. Keep this unit away from wet or damp surroundings.

6

FCC Warning :

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment .

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.