Bluetooth Speaker



Instruction Manual

## Important Safety Information

The lightining flash with arrowhead symbol, within a sequilatest triangle, is intended to after the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that maybo of purplicient magnitude to constitute a risk of electric distributions of the product of the product of the product is enclosured that maybo of purplicient magnitude to constitute a risk of electric distributions. Do not install near any heat sources such as radiators heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

Shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance. WARNING: TO REDUCE THE RISK OF FIRE OR FLECTRIC

SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR WARNING: This product contains lead, a chemical known to the State of California to cause cancer and birth defects or other reproductive harm. Wash hands after handling.

Page 2 Naxa Electronics

#### FCC NOTICE

Specifications

Operating Distance

Playtime

Charging Time

Accessories

1 x Owner's Manual

1 x USB Charging Cable 1 x Carabiner

1 x Bluetooth Portable Speaker

Bluetooth Version 2.1 + EDR

Speaker Output 3W

Charge Voltage DC 5V (USB)

Built-in Rechargeable battery 3.7V / 300 mAh

Specifications are subject to change without prior

8-10 Meters

3-4 Hours

This device complies with Part 15 of the ECC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must ac-cept any interference received, including interference that Note: This equipment has been tested and found to comply

11. Only use attachments/accessories specified by the manufurfacture.

12. Use only with the cart, stand, triped, bracket, or table specified by the manufacture, and the specified by the manufacturer, are sold with the apparature should be accessoriated by the samulation to asked large precised of girns of the specified by the samulation to asked large precised of girns or the samulation from the specified precise of girns, and the specified precise of girns and the specified precise of girns, and the specified precise of girns and the specified precise of girns, and the specified precise of girns,

- . Consult the dealer or an experienced radio/TV technician

#### CAUTION ON MODIFICATIONS

for help.

Any changes or modifications not expressly approved by the grantee of this device may void the authority granted by the FCC to operate the equipment.

# At a Glance Carabiner ON/OFF - Press & hold to turn on/off the unit. Play/Pause Press to pause or resume playback. 4. USB charge DC 5V USB Charge port Page 4 Naxa Electronic

#### Connecting to Power

Your speaker has an integrated rechargeable battery. Upon initial use, the battery should be fully charged to ensure optimal performance and battery life.

Use the included USB charging cable to connect the speaker to a USB power source to charge the

- 1 Connect the USB charging cable (included) to the DC 5V charging port of the speaker and insert the other end into a USB port on your computer or a similar power source.
- Red LED indicator signifies that the unit is charging. Once the unit is fully charged, the LED indicator will turn off

In order to extend the life of the battery, please do not charge more than 2 hours. Over charging the speaker can adversely impact the battery life.

#### **Getting Started**

Turning the Unit On and Off Press and hold the ON/OFF button for 2–3 seconds

Bluetooth® Mode

Your Bluetooth® sneaker can wirelessly stream audio from any Bluetooth® enabled device within the distance of 26-33 ft. Please follow the steps below to setup connection. 1 Turn ON the unit

 The Blue LED light will flash rapidly indicating your speaker is powered on and in "pairing"

3. Enable Bluetooth® on your Mobile Phone. Tablet, or Computer.

4. Scan for available devices and pair with "NAXA NAS-3090"

www.naxa.com

#### LED Light Indicators

Read these instructions. Keep these instructions Heed all warnings. Follow all instructions 5 Do not use this annaratus near water

Status of the Speaker

pilifers) that produce heat.

9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided prour safety. If the provided plug does not fit into your outlet, crossult an electrical for replacement of the obsolete outlet.

Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

### Music Playback

1. Once the speaker is connected via Bluetooth\* 2. Select the track you would like to listen to and

5. If your device requires a password, please

enter "0000" to confirm the pairing process.

6. You will hear a tone once you have paired

successfully and the Blue LED light will flash

7. If pairing was unsuccessful, please repeat the

it will be played on the speaker.

3. Adjust the sound volume from your device. 4. Should you encounter any problems, while streaming, please refer to your devices user's manual for further information.

# Troubleshooting Guide

Once the Speaker is Collinected via Discourse

This guide lists common problems and their solutions.

Select the track you would like to listen to and it will be played on the speaker.

A dijust the sound volume from your device.

Adjust the sound volume from your device.

Symptom	Possible Cause	Solution
Low sound level	Source (Tablet, Mobile Phone, laptop, etc) volume too loss. Battery dead	Adjust source volume Charge battery
Audio distorted	Battery nearly drained/ dead	Charge battery
No Sound at all	Source (Tablet, Mobile Phone, Turn the laptop, etc) turned off. Speaker turned off. Turn on Speaker Source Volumed turned down. Adjust volume s Media navaral on source.	

Page 6 Naxa Electronics

#### Support

If you have problems with your device, please re-view the instructions in this manual. Please also visit us on the web at www.naxa.com to get the latest news, alerts, and documentation for your device. For additional assistance, please contact Naxa Technical Support.

#### NAXA Technical Support

2320 East 49th St. Vernon, CA 90058 866-411-6292

http://www.naxa.com/naxa.sunnort/

Page :

#### Bluetooth Speaker



MANUAL DE OPERACIÓN FAVOR DE LEER ESTE MANUAL COMPLETAMENTE ANTES DE OPERAR ESTE PRODUCTO. CONSERVAR EL MANUAL PARA FUTURAS REFERENCIAS

#### Importante Información de Seguridad



ADVERTENCIA: PARA REDUCIREL RIESGO DE FUEGO O

protogo al producto de último delodos a los impero a sobim intense de poder.

Descrimenta el producto del terriscontrette de pared y limitendo del producto del terriscontrette del pared y limitendo del producto del producto del producto del catalogo la pola se apparente condicionen. Ciurno la dictipo la pola se apparente condicionen. Ciurno la del producto del producto, el el producto ha ados espuesto a el infortro del producto, el el producto ha ados espuestos a el infortro del producto, el el producto ha hadro espuesto a el infortro del producto, el el producto ha hadro el producto se ha cados o golpesado o el la colerta estal delidida; el el producto enhibe carbono en su funcionamiento norma.

NOTICIA FCC
Prote disnostitivo cumple con la parte 15 de las reglas FCC. La

Este producto ha sido probado y cumple con las limitaciones de un equipo digital Classe B, de acuirdo con la Parte 15 de las Normas PCCI. Estos limites actual nesiendos para para una protección razonable contra interferencia definira en un estabalción residencial. Este equipo genera, usa y puede entirá renergia de frecuenciar arabila y, de no se installados y autilizado de acuerdo con las installaciones, puede cauda cual productiones, puede cauda con la contra de contra de contra con las installaciones, puede cauda con la caracteriores, puede cauda caracteriores de caract

- - Consultar a su proveedor o a un técnico de Radio v

PRECAUCION SOBRE MODIFICACIONES
Cualquier cambio o modificación no expresamente
por la parte responsable del cumplimiento puede an
autoridad del usuario para operar este reproductor.

# Descrinción de Partes



- 11

## Conectando la Fuente de Alimentación

Insenter el conector micro USB del cable de carga USB incluido en el puerto de carga "CHARGE" de la botaca entroces insenter el conector USB del cable en el puert USB de la computadora o cargador USB. Al incibir ta carga de la botaria, el indicador led se encience en ropo; cuando la bateria se carga completamente, el indicador led se peaga.

Mo cargar la bateria por mida de 2 horas, la sobrenorgia acorta el fiempo de vista de la bateria. Mo dejer que la bateria el descargue compatiamente, mosinger la bateria instructulamente compatiamente, mosinger la bateria instructulamente Si la botian non sa or suado por un pariodo fargo de liempo, recorgar la bateria el memos conda 2 mesas, inclusio al la bocina no fue usuado.

## Iniciando

Presionar y sostener\* > #1/©\* por 3 segundos aproximadamento para Encender o Apager la bocin Modo de Operación Bluetooth®

Modo de Operación Bisutectorità 
con accidente del se il menso Simplemento del su 
destinación del se il menso Simplemento que del 
del contra del se il menso Simplemento segor les siguientes 
contra del contra del contra del contra del 
La la la del compara de della della contra del 
La la la del compara a destinativa del 
contra del contra del 
la contra del contra del 
contra della contra del 
co

Si la sincronia falla dentro del tiempo requerido o desea sincronizar un nuevo dispositivo, seguir los pasos indicados anteriormente.

Reproducción de Música

Led Indicador

Led Indicador	Estado de la Bocina
Led en rojo	Cargando la bateria
Led en rojo se apaga	Bateria cargada completamente
Led destellando en azul rápidamente	Modo de Sincronia (buscando dispositivos Bluetooth®
Led destellando en azul lentamente	Sincronía exitosa

#### Guía para la solución de problemas

Potencia bocina 3W Voltaje de carga 5 Voc Tiempo de carga de la 3 a 4 horas bateria Bateria recargable interna 3.7 Voc. 300 mAh

Las especificaciones y el diseño de este producto están sujetos a cambios sin previo aviso para mejoras de los mismos Accesorios

Limpieza y Mantenimiento

Apagar y desconictar la bocins de la fuente de altimentación antes de darle mantenimiento o limple El gabinete de la bocina debe limpianse con una tel sures, limpia, seca y litre de pelusa. Para manchas fuertes, humerdecer la tela con una solución de agua con jadón neutro; secar completa descués de la limpiezo.

na en un lugar libre de polvo, pelusa, Indicaciones sobre el medio ambiente

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the PCC. Rules. Those limits are designed all metal-models procession agrees the small enter for the large state of the process of the process of the process of the designed of the process of the process of the process of the designed of the process of the process of the process of the frequency energy and, if not intuited and used na eccordance with the instructions, year, usue harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. It this compressed to see such harmful interference made not after device recognition, which are proposed to be case harmful interference made not after device recognition, which are processed to the process of the pr

can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receive

Connect the equipment into an outlet on a circuit different from that to which the eceiver is connected. -Consult the dealer or an experienced radio/TV technician for help Changes or modifications not expressly approved by the party responsible for compliance

Catings of meanications not expressly approve only one party responsible for companies could would the user's authority to operate the equipment. This device complies with Part 15 of the PCC Roles. Operation is subject to the following two conditions: (1) this device must accept any interference and (2) this device must accept any interference that may cause undesired operation.