

Figure 7
Inside of the EUT

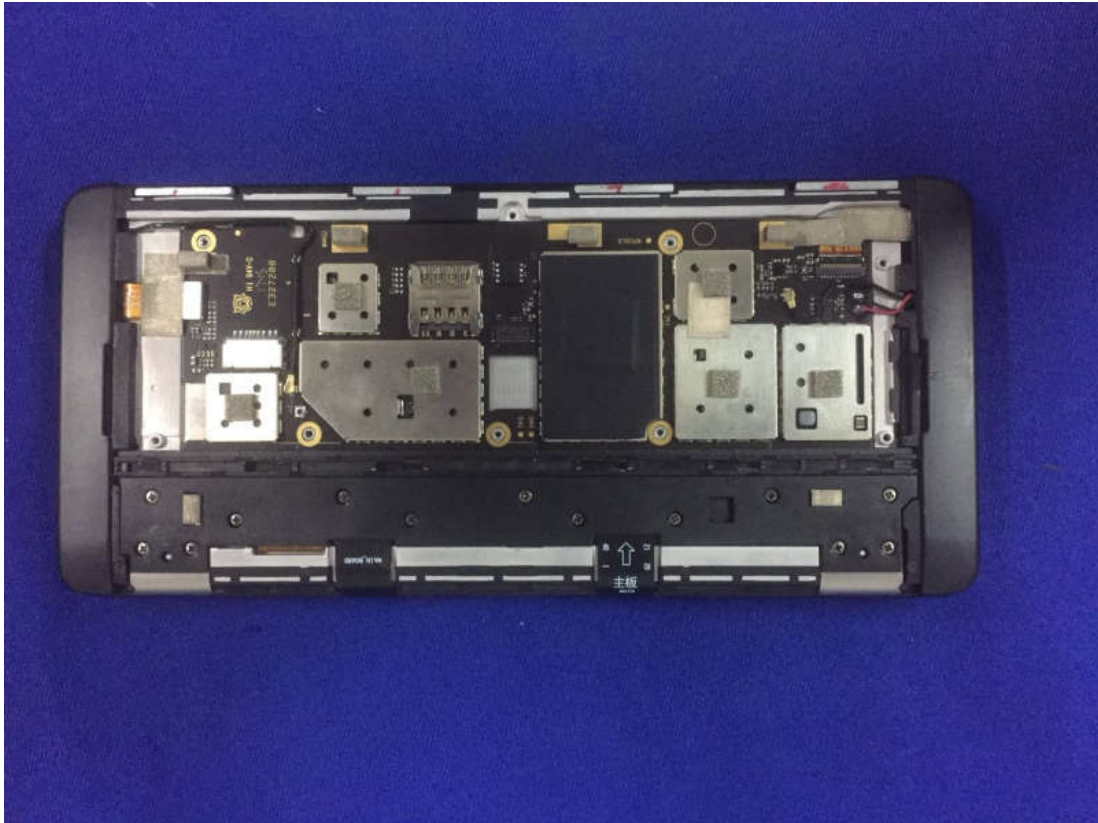


Figure 8
Inside of the EUT

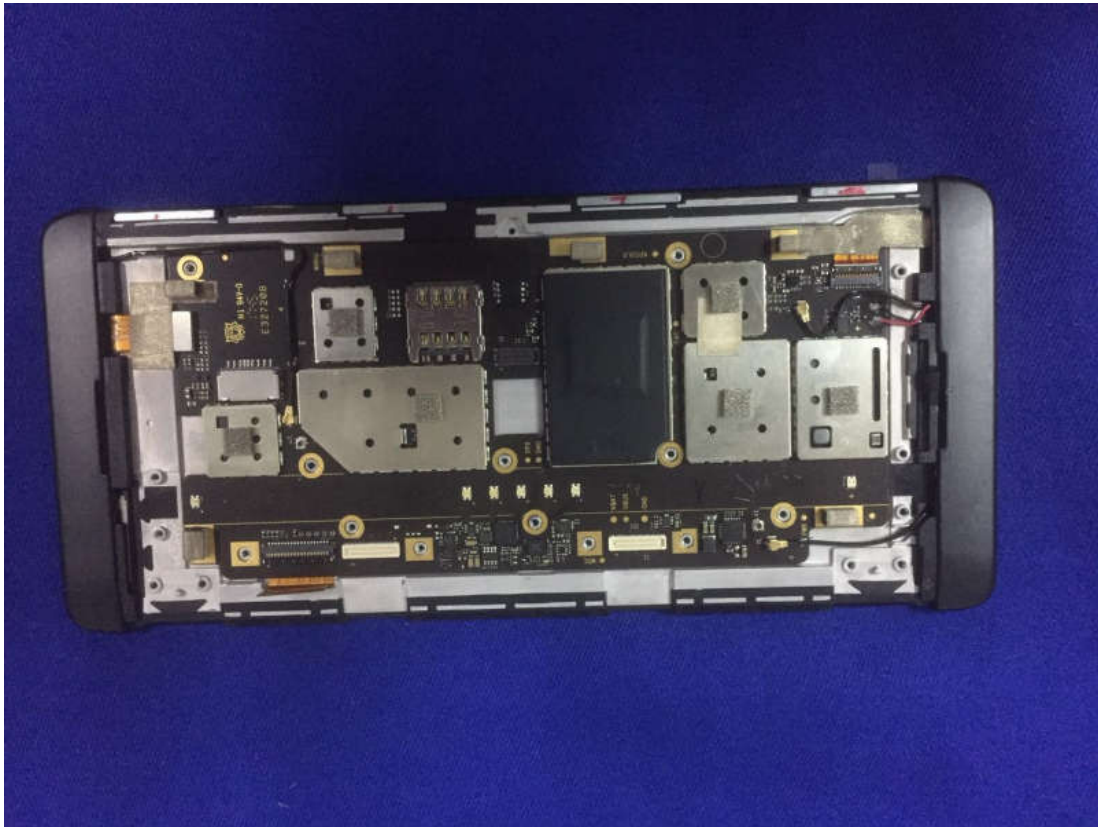


Figure 9
Inside of the EUT



Figure 10
Inside of the EUT

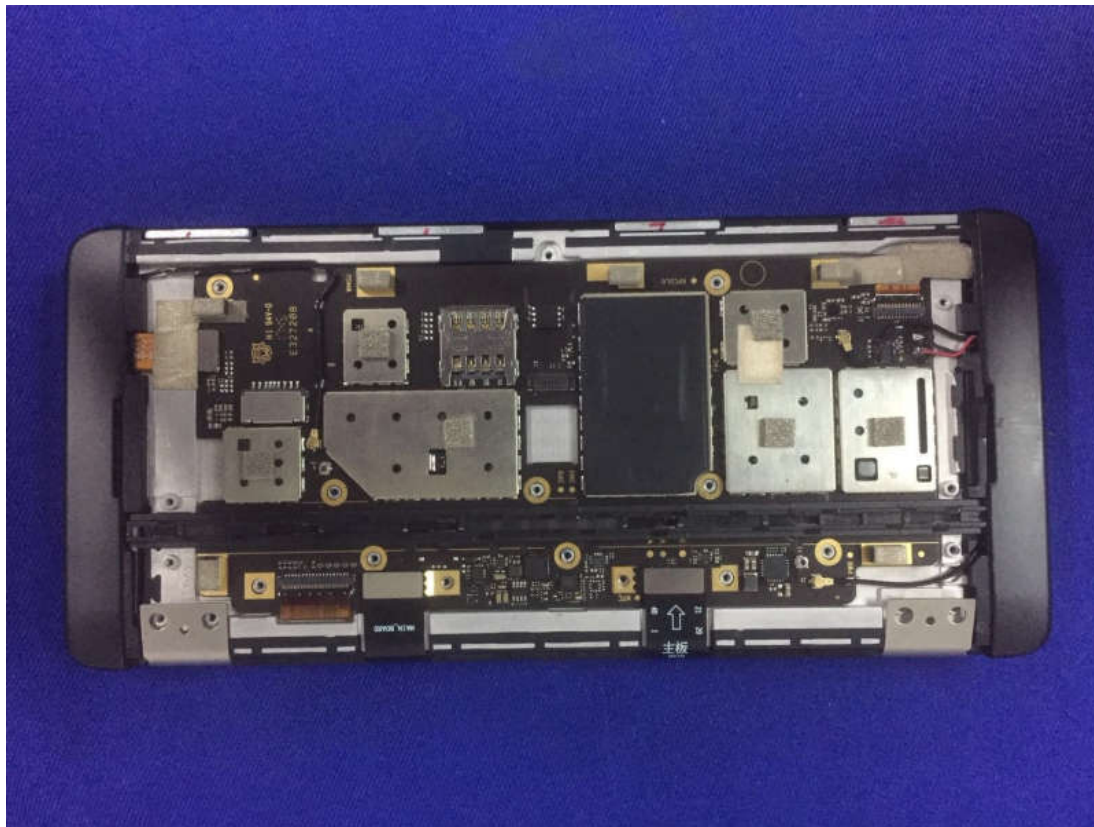


Figure 11
Inside of the EUT

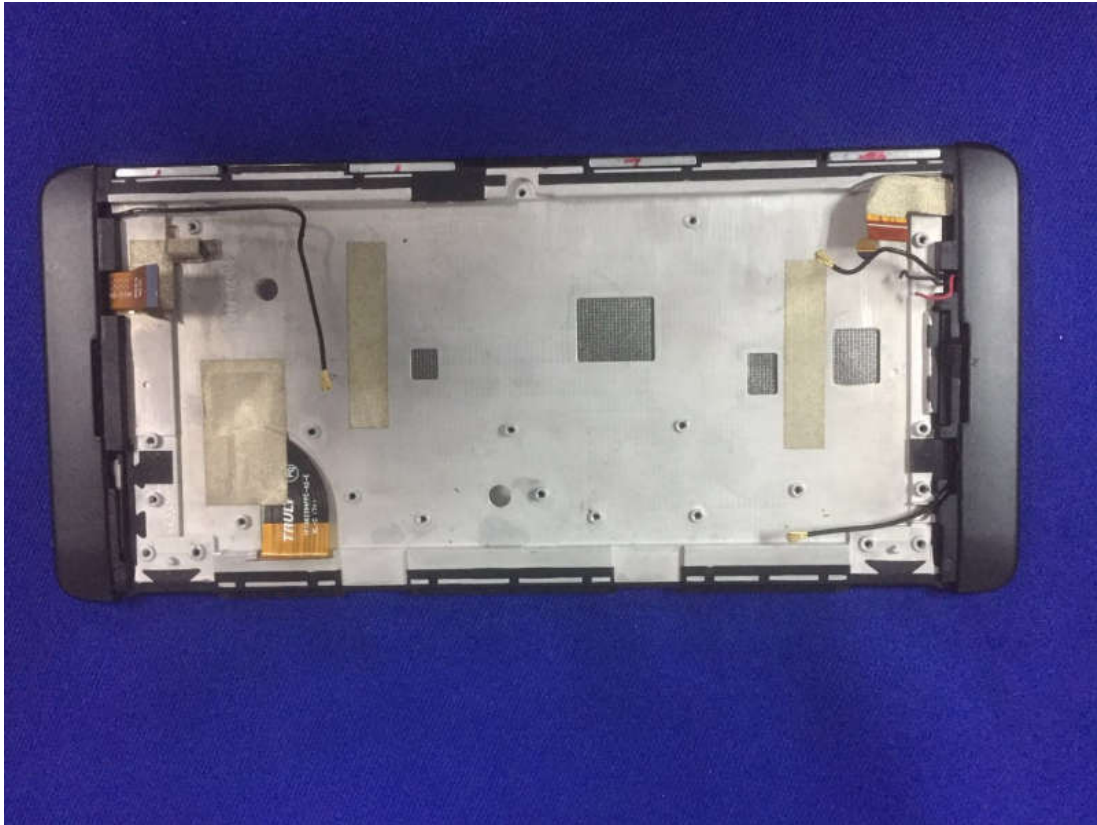


Figure 12
Inside of the EUT



Figure 13
Inside of the EUT

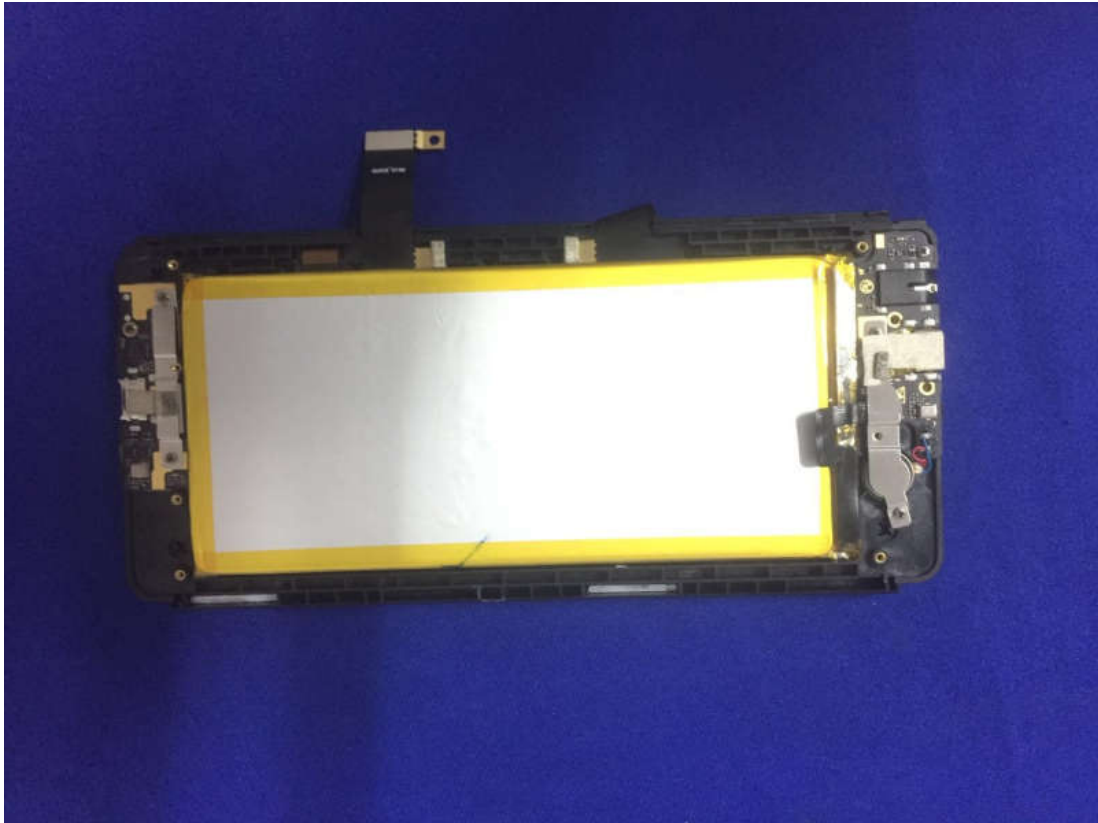


Figure 14
Inside of the EUT

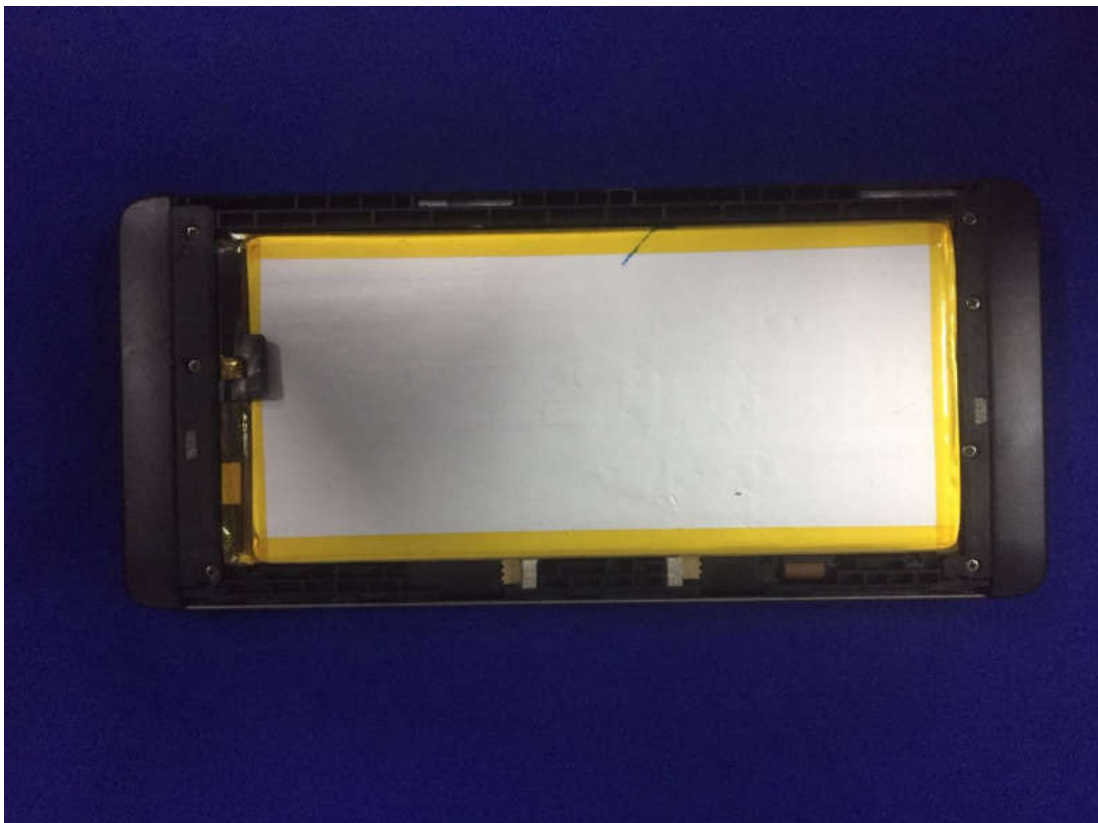


Figure 15
Inside of the EUT

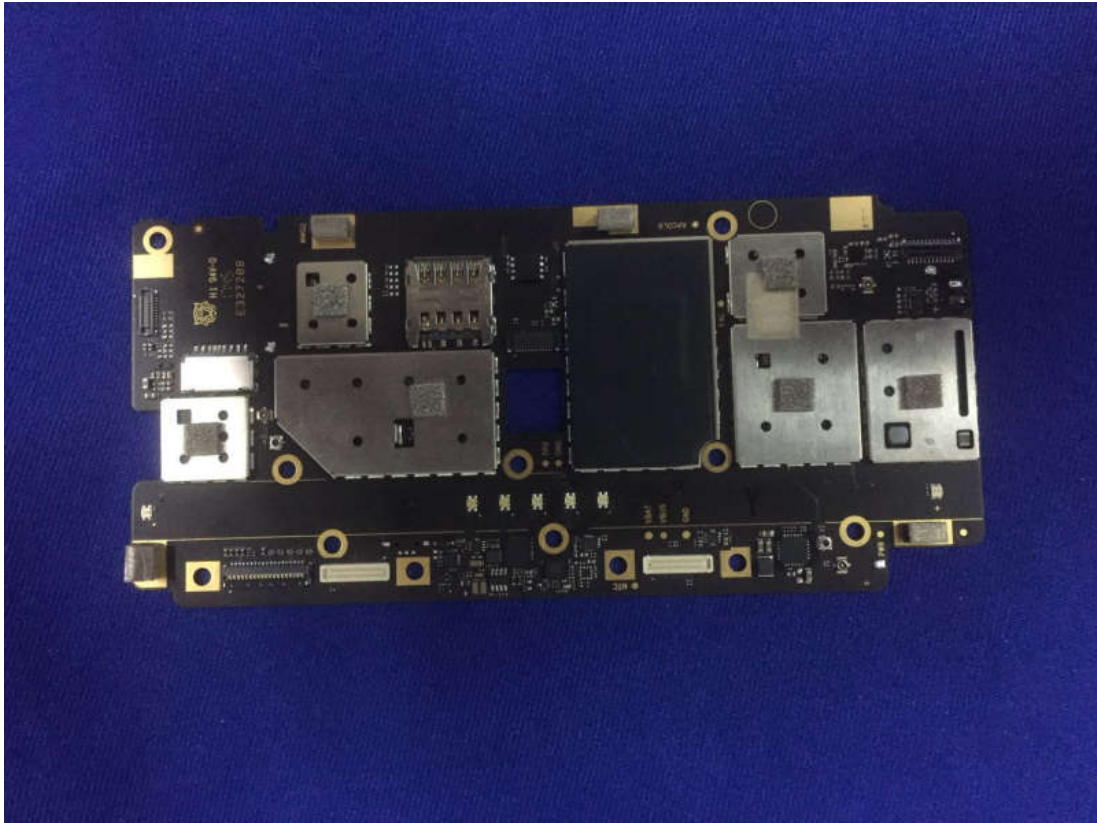


Figure 16
Inside of the EUT

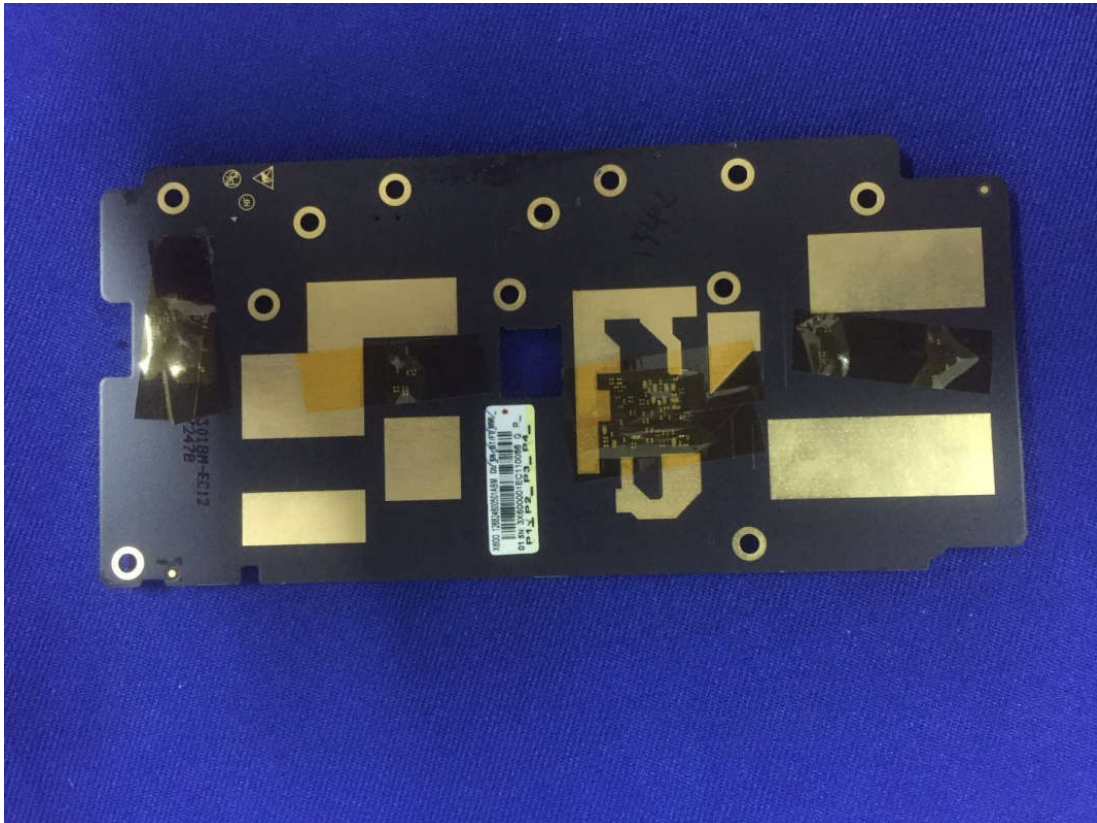


Figure 17
Inside of the EUT

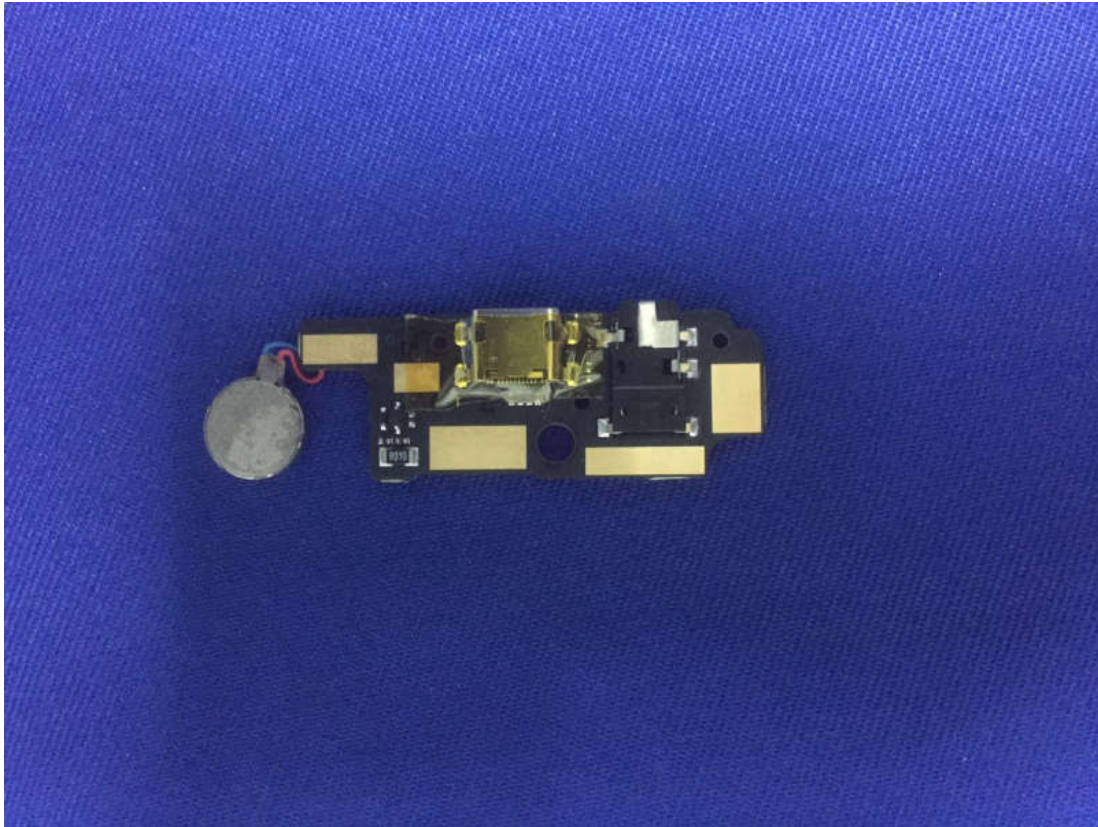


Figure 18
Inside of the EUT

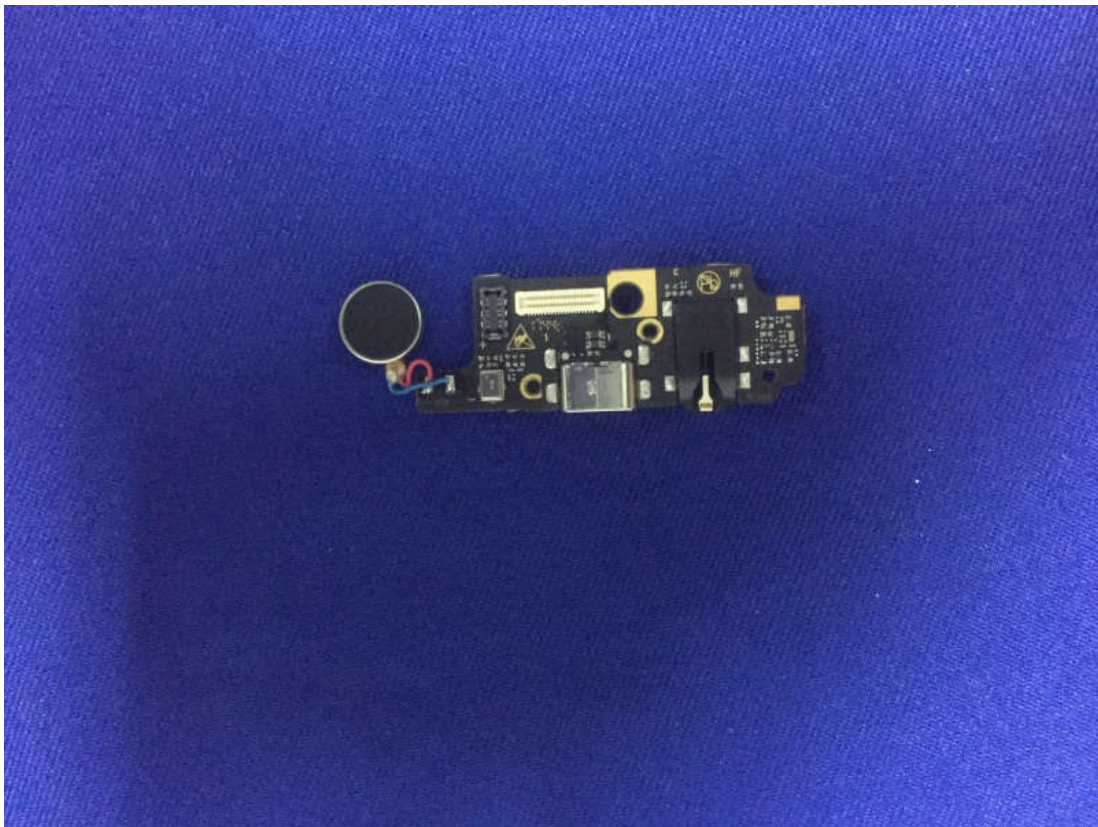


Figure 19
Inside of the EUT

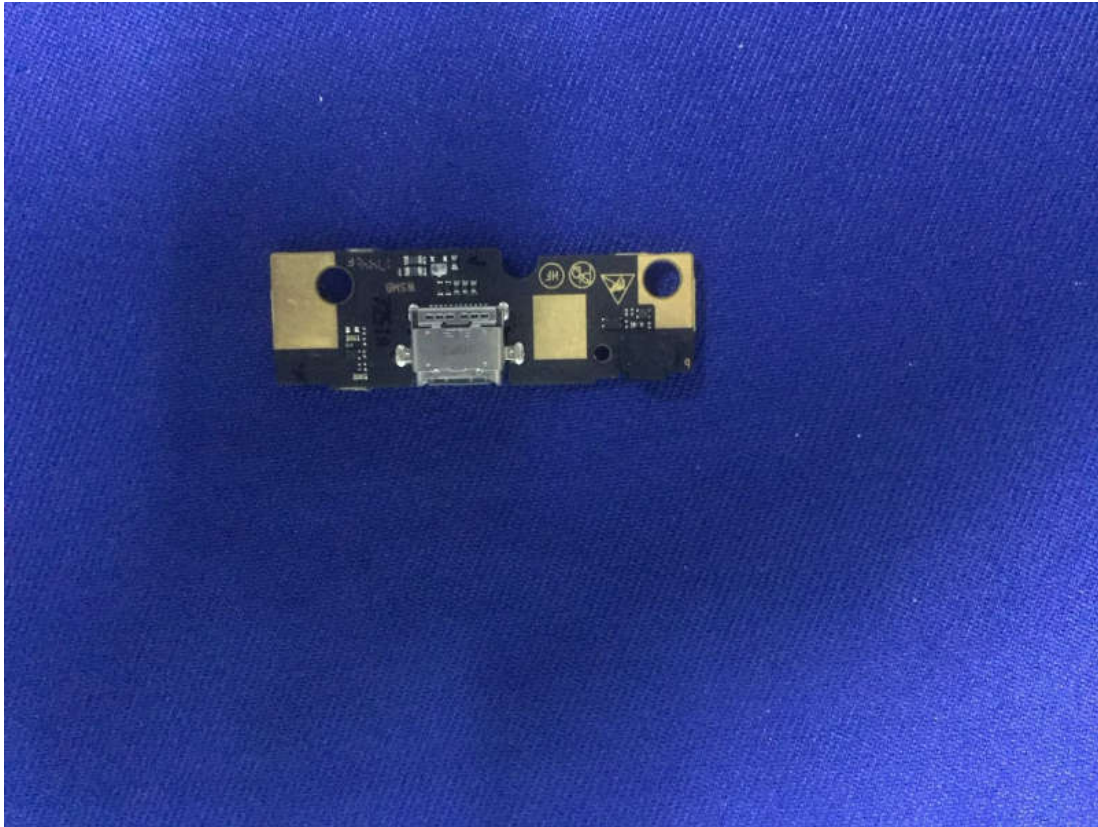


Figure 20
Inside of the EUT

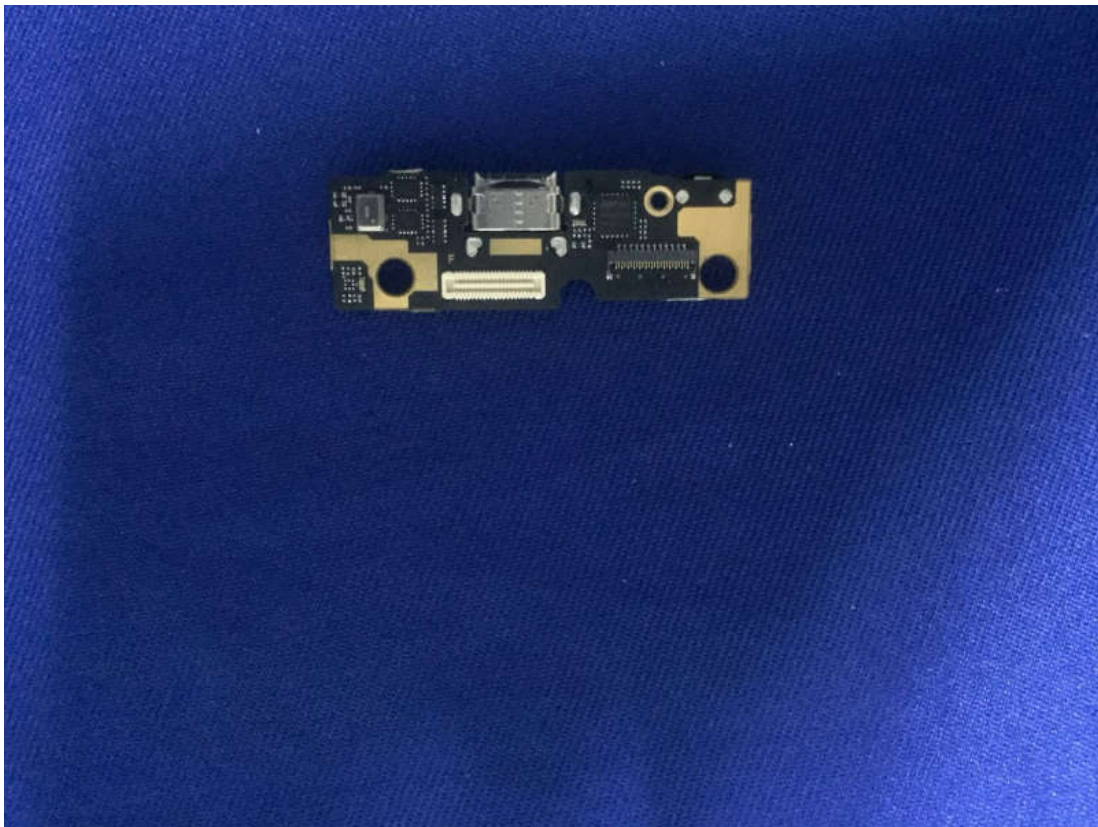


Figure 21
Inside of the EUT

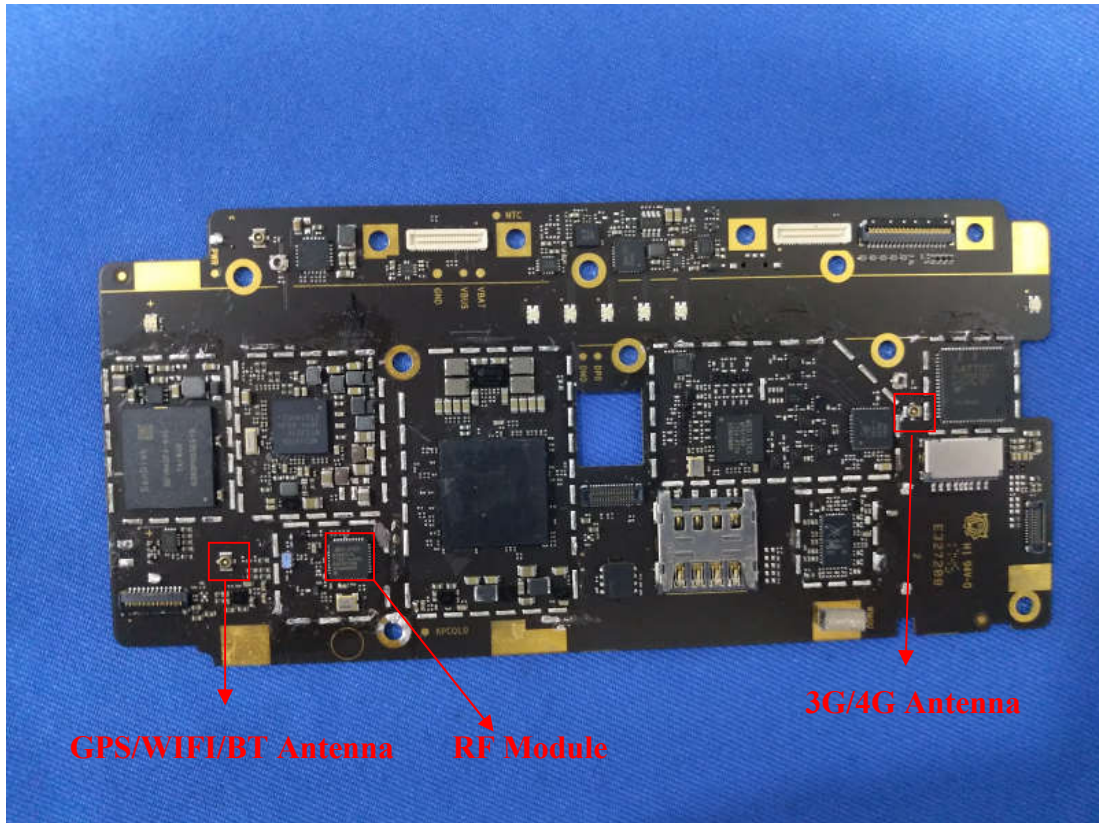


Figure 22
Inside of the EUT

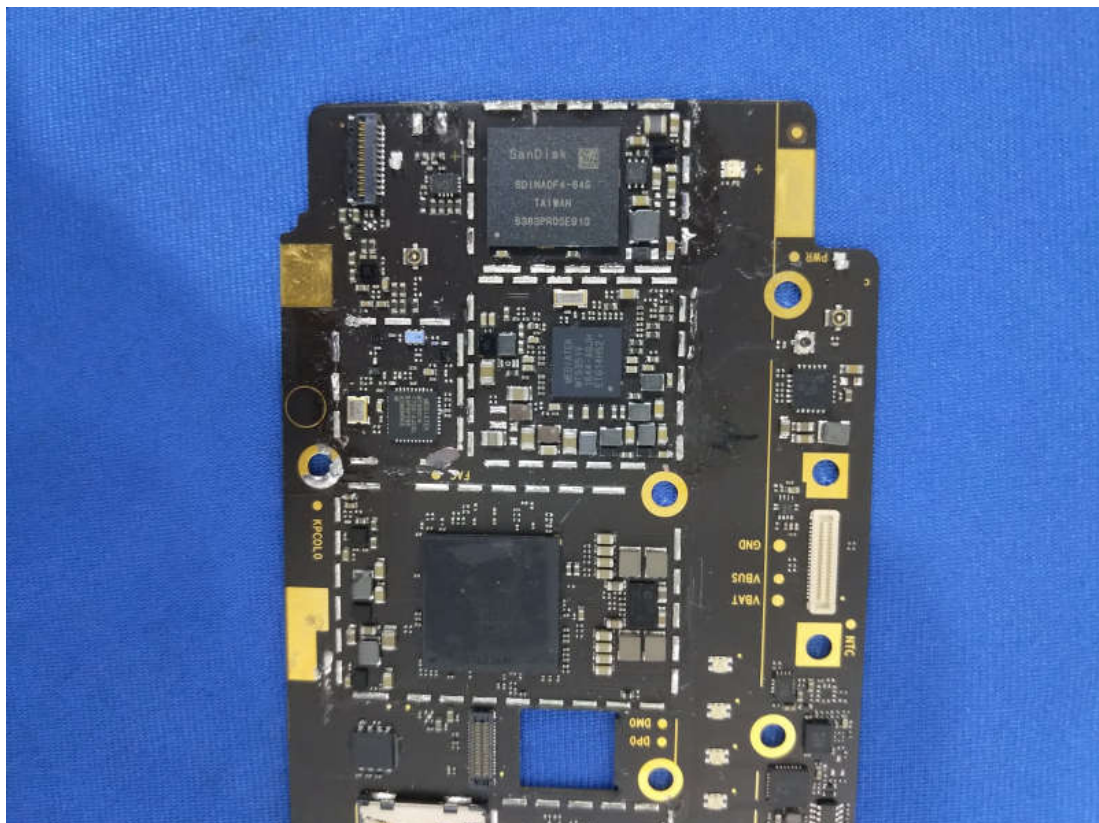


Figure 23
Inside of the EUT

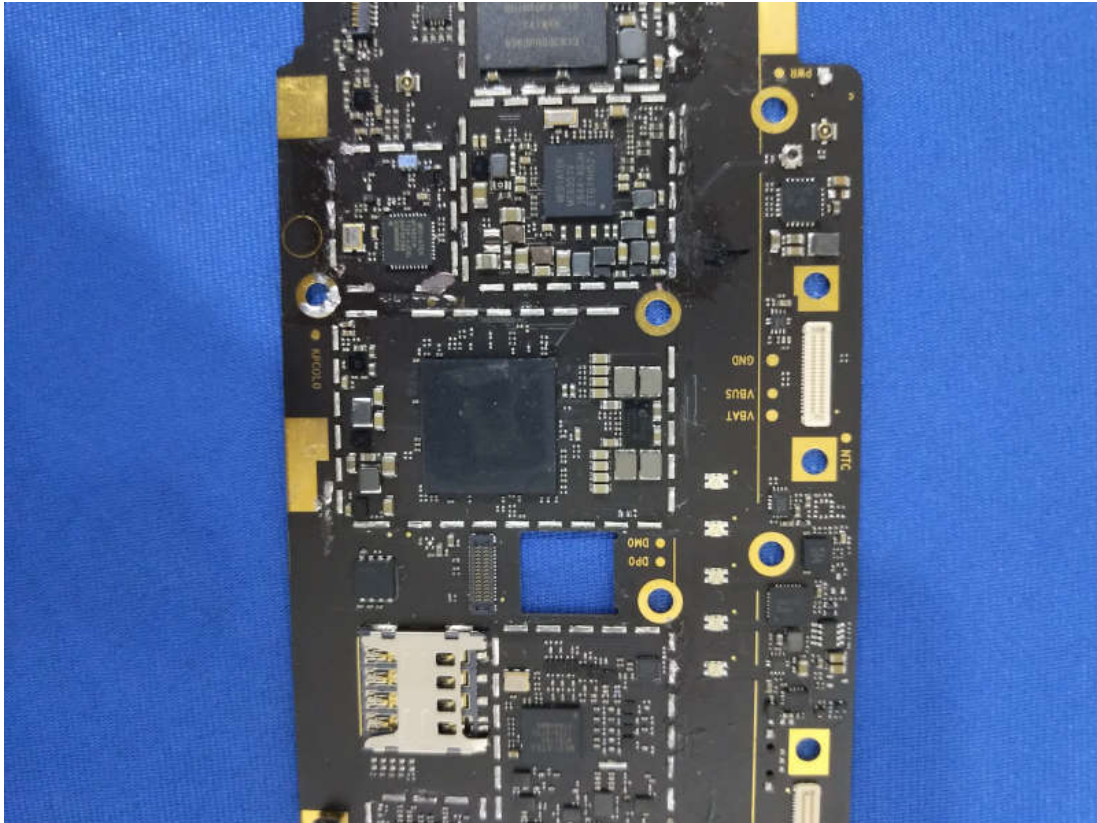


Figure 24
Inside of the EUT

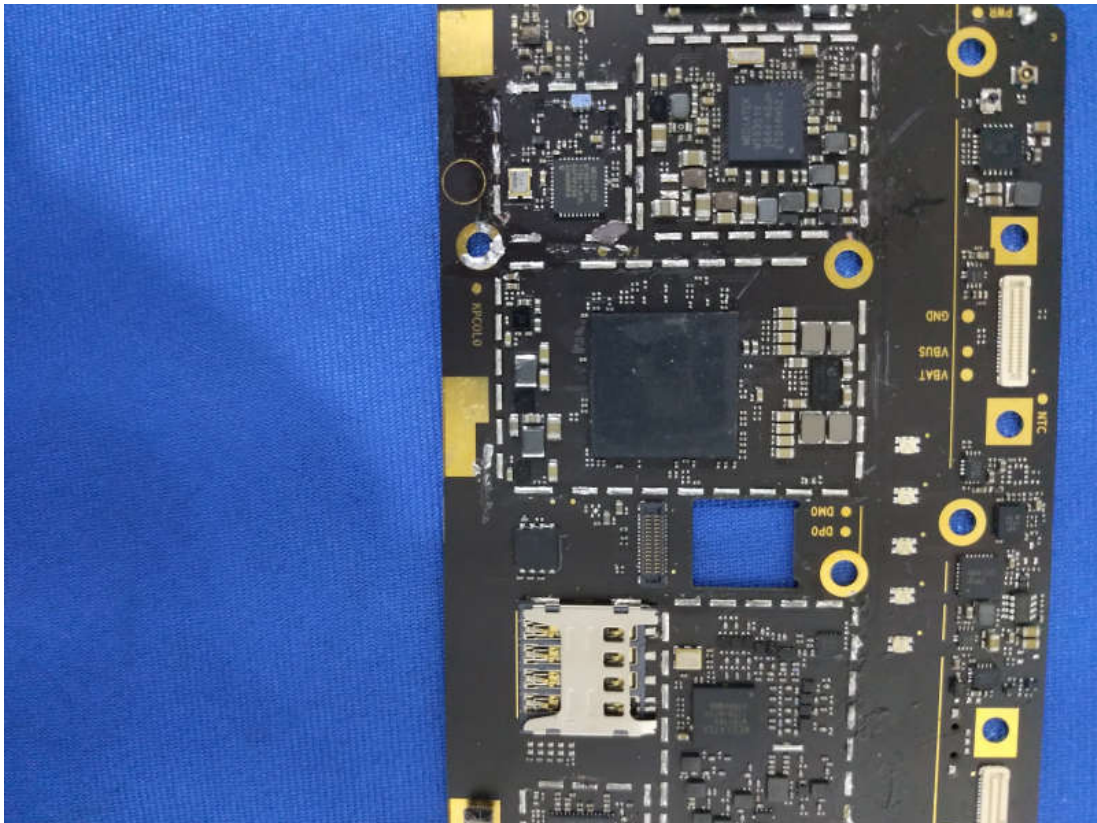


Figure 25
Inside of the EUT

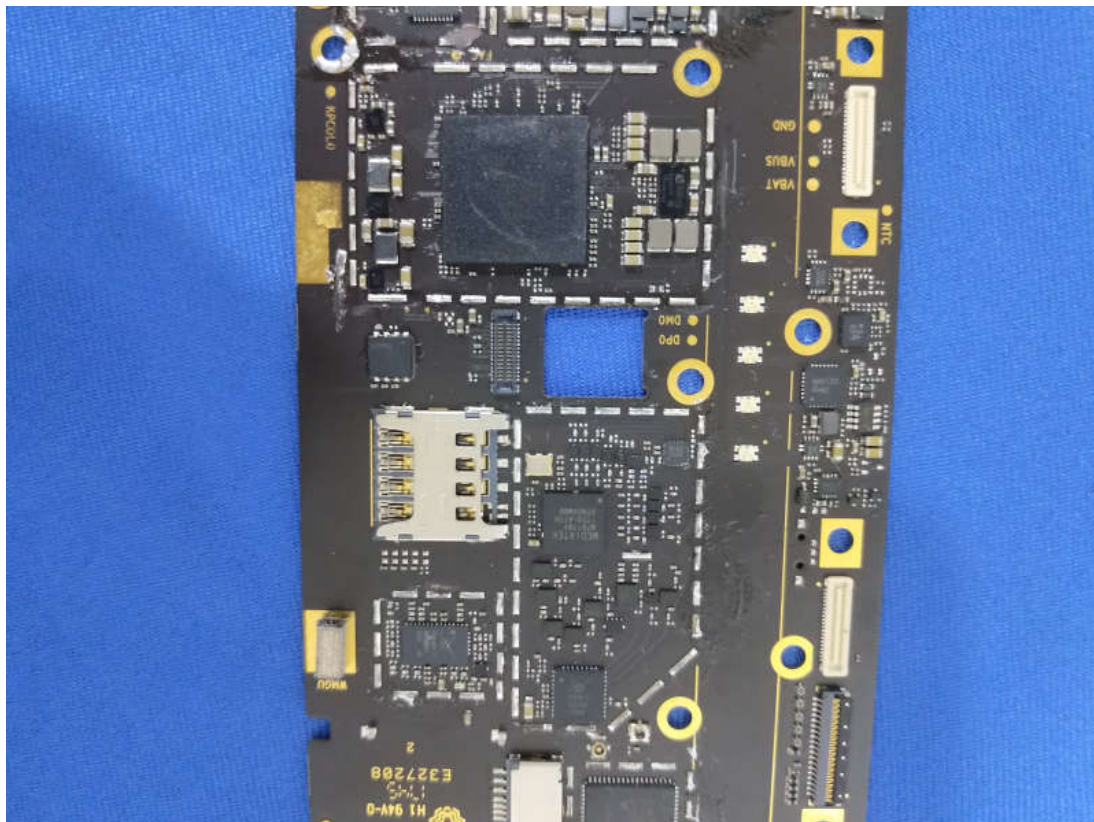


Figure 26
Inside of the EUT


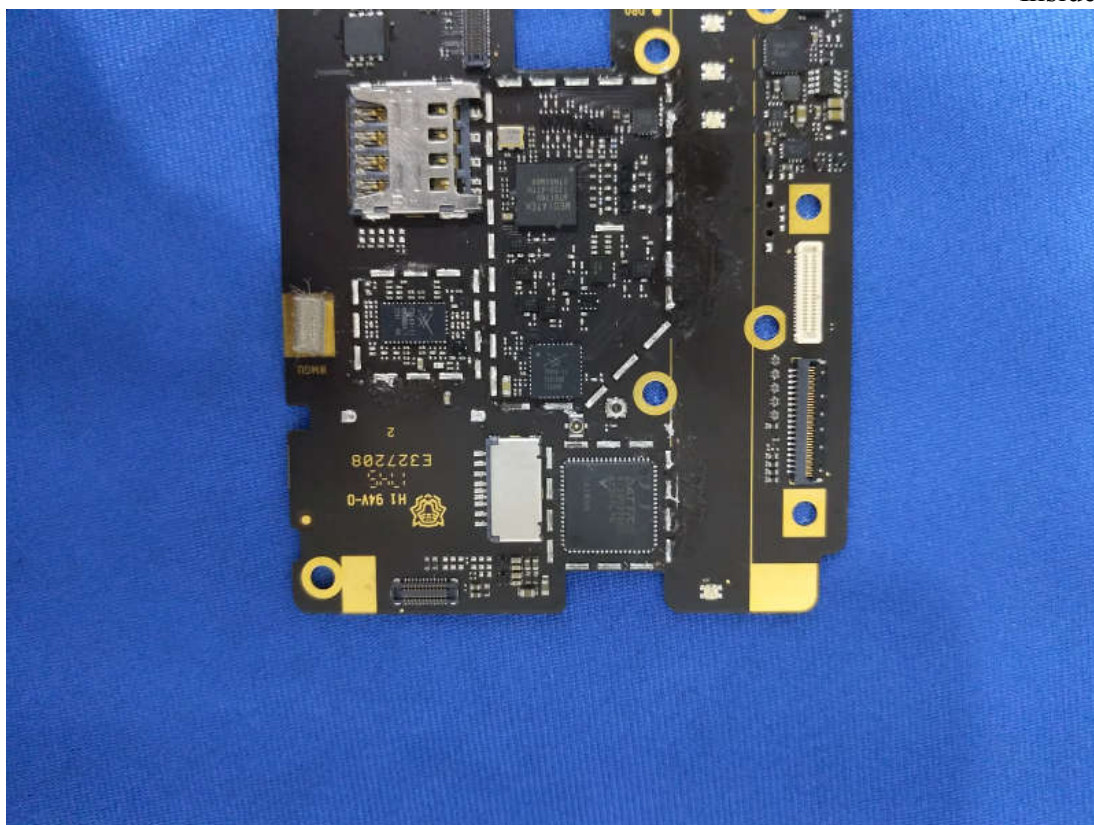


Figure 27
Inside of the EUT



Figure 28
Inside of the EUT

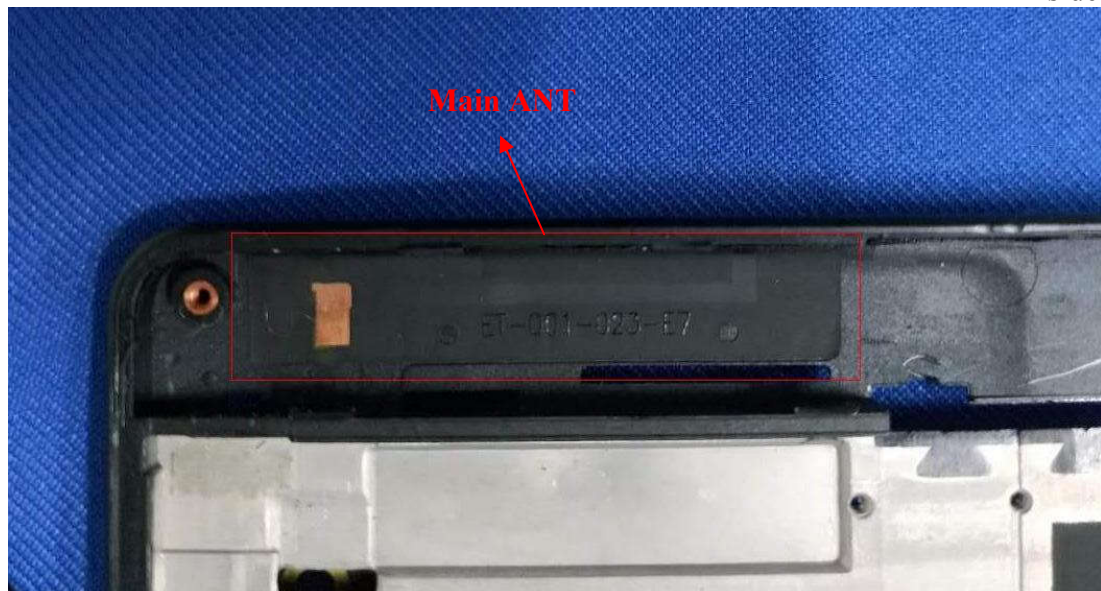

LTE Diversity ANT

Figure 29
Inside of the EUT

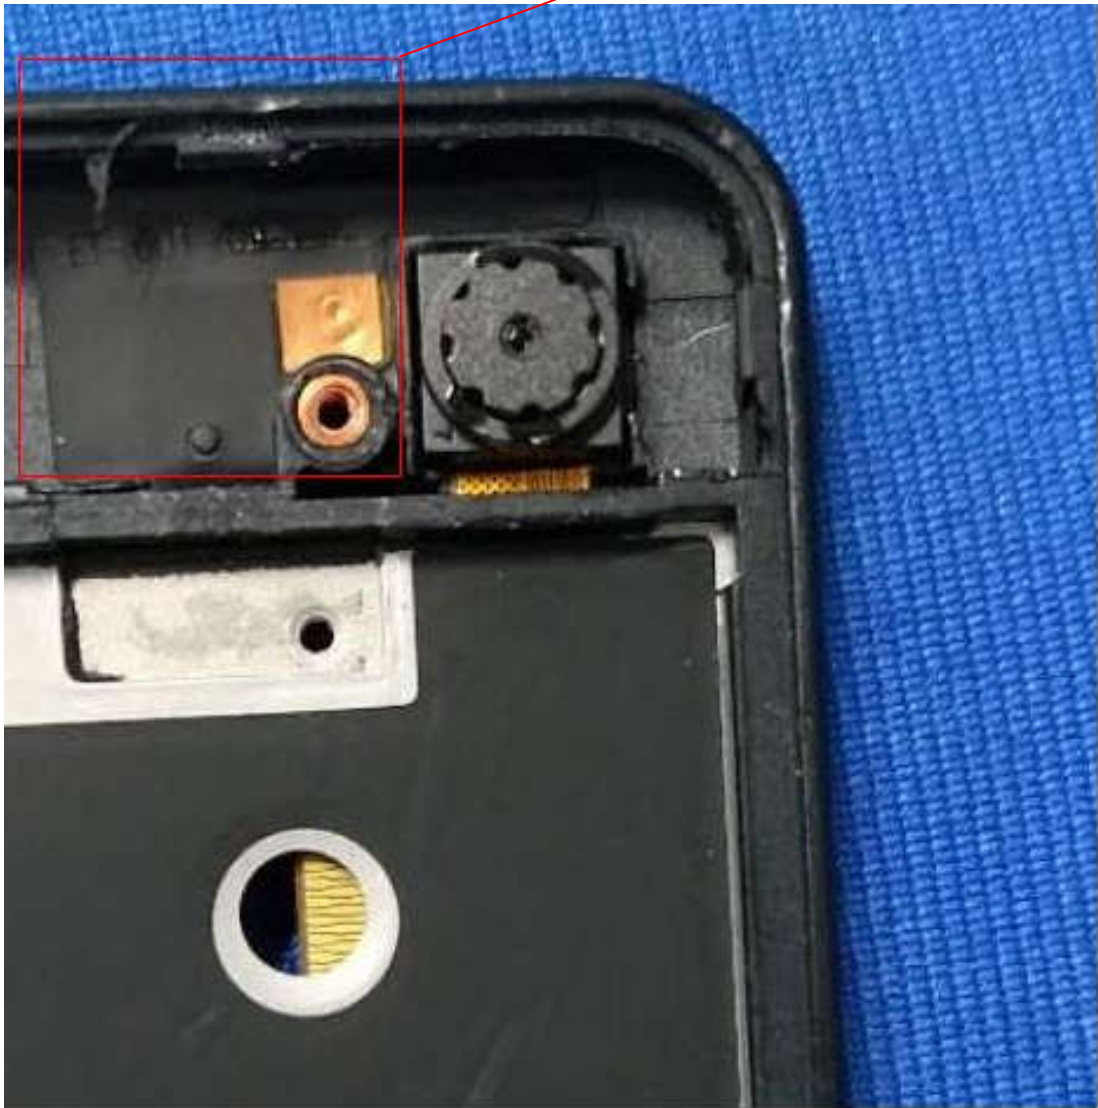


Figure 30
Power Adapter



Figure 31
USB Cable

