
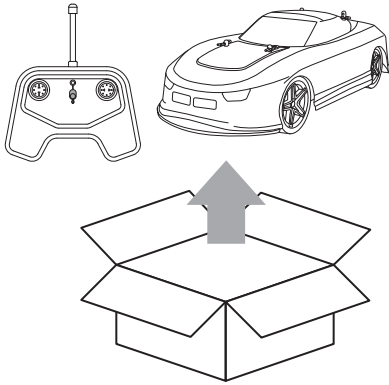



6+


## OPERATING INSTRUCTIONS


 Carefully remove items from package.




 Locate battery compartment cover on the underside of the car. Slide battery cover open, Insert six "AA" 1.5V batteries (not included) in the positions shown etched in the battery tray. Replace battery cover making sure to align all the tabs. Tighten the screw.

If present, the "Try Me" feature on the packaging should be disposed of with electronic waste as it contains a battery. Keep away from children.

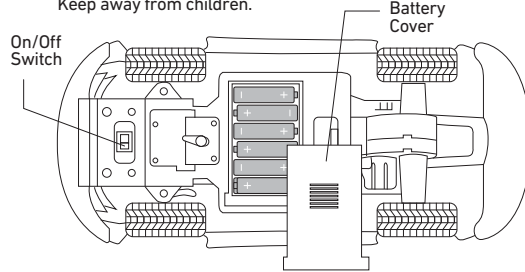



 Loosen the screw using a phillips or cross screwdriver to remove the battery cover on back of the remote. Insert the 9V battery (not included) according to the diagram inside the battery tray. Replace battery cover and tighten screw.

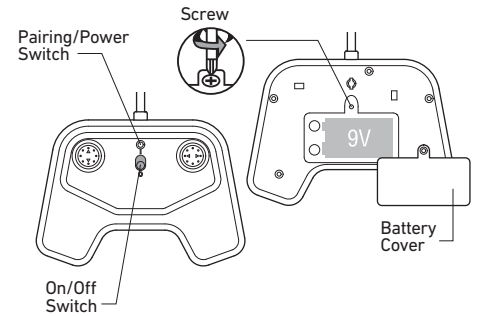



### Pairing:

Turn both the vehicle and the remote control on using their switches. The Pairing/Power Indicator light on the remote will flash until it pairs up with the Racer. Once paired, the light will remain on.



### Reverse

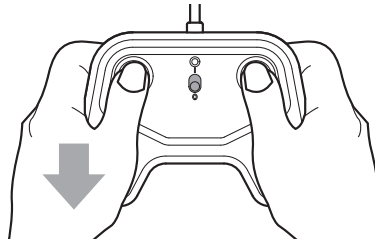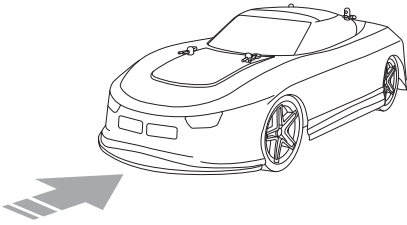



### Forward

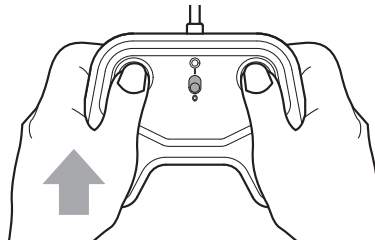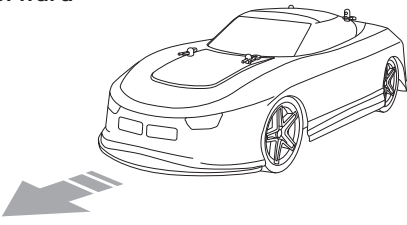


### Left Turn

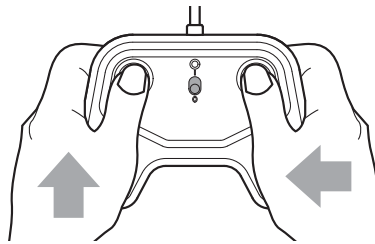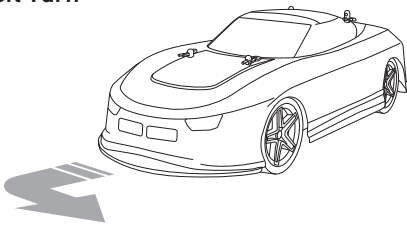


### Right Turn

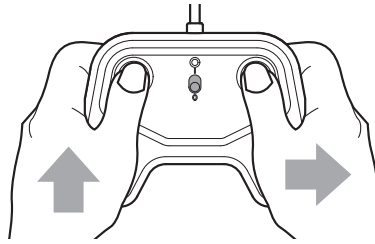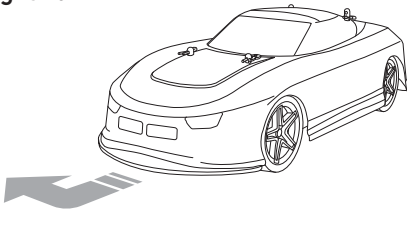

### Wheel Alignment

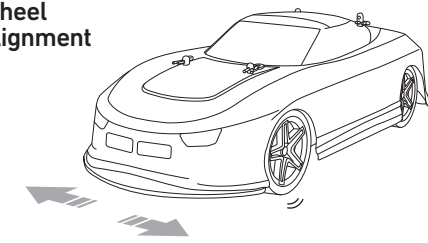

If the car does not drive straight, use the Wheel Alignment dial

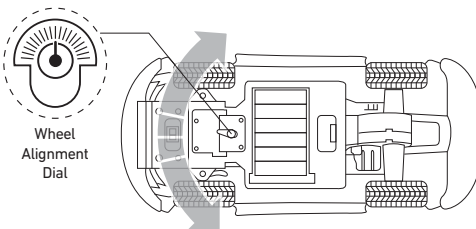

### SAFETY PRECAUTIONS

- Avoid water when operating.
  - Do not submerge car or controller in water.
  - Do not use people or animals as obstacles.
  - Do not run car into furniture objects or hard surfaces as this will cause damage to both the objects and car.
  - Keep fingers, hair and loose clothing away from the tires, gears and motor while car is switched to "ON".
  - Do not leave car or remote control near sources of heat or under direct sunlight for long periods of time.
  - Remove all batteries when not in use to avoid accidental operation.
  - Adult supervision is recommended when operating car.
  - Thoroughly inspect products before every use. If the product appears worn, frayed/splintered, cracked, or broken in any manner, discontinue use and discard immediately.
- Note: for best operation, use vehicle on hard surfaces

### BATTERY WARNING:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Alkaline batteries are recommended. Use only the specified voltage.
- Insert batteries using the correct polarity. Always use, replace, and recharge (if applicable) batteries under adult supervision.
- Do not charge with non-rechargeable batteries.
- Do not short-circuit the battery supply terminals.
- Do not dispose of batteries in a fire, batteries may explode or leak.
- Remove batteries before storing.
- Recycle or dispose of batteries according to federal, state, and local laws.
- Keep these instructions for future reference.

**WARNING:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**KEEP THIS INSTRUCTION MANUAL AS IT CONTAINS IMPORTANT INFORMATION FOR FUTURE REFERENCE.**

Due to continuous product improvements, the pictures on this manual may differ slightly from the actual product.

The artwork and design of this manual are protected by US copyright law and may not be reproduced, distributed, displaced, published or used for any purpose without prior written permission. Altering, removing or reproducing any of the trademark or copyright notices on this package is not permitted.

© 2019 MerchSource, LLC, Irvine, CA 92618. All rights reserved.  
Distributed by MerchSource, LLC, Irvine, CA 92618.

Printed in China

**FOR TECHNICAL SUPPORT,  
PLEASE CALL**

**1-800-374-2744**