




i DISPLAY Retail Tablet Wall Bracket


Product Specification & Assembly Instructions

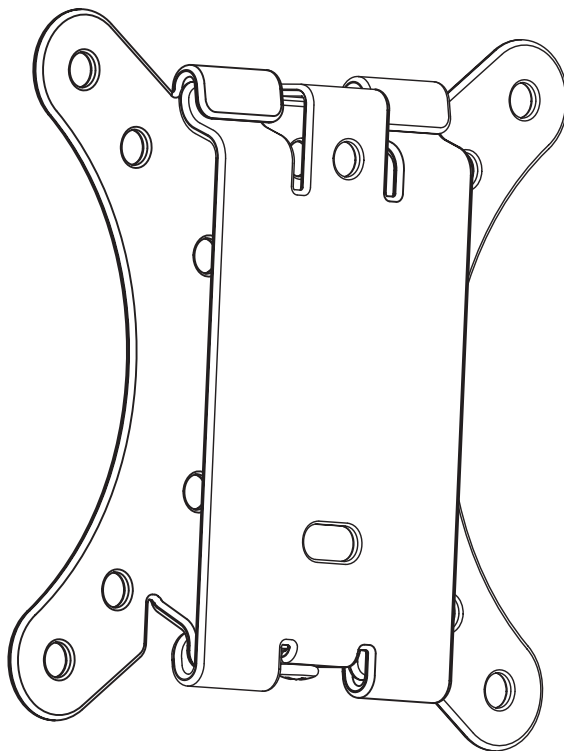



i Display's range of fixtures are the perfect retail accessory for your i Display Retail Tablet and Android Advertising Display.

The wall mount bracket gives you a complete solution to secure your display to any wall location within the store.


The i Display Retail tablet wall mount bracket is made from high-quality materials and is very simple to assemble.

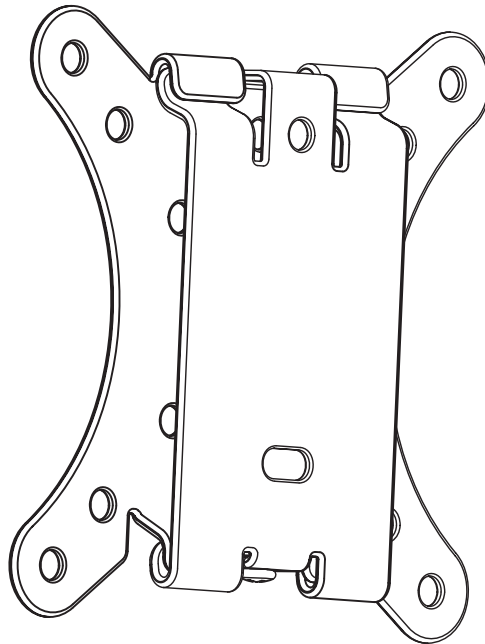

Product Specification

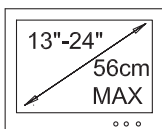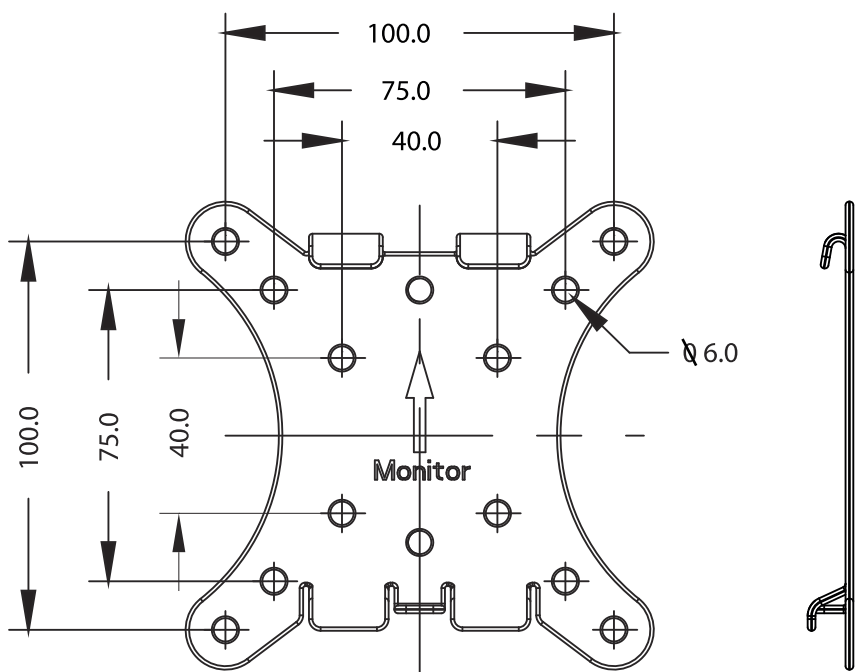


Components

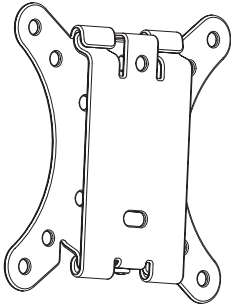


**Wall bracket assembly
(wall plate & front plate)**



Thumb screw M4*13 (4pcs)

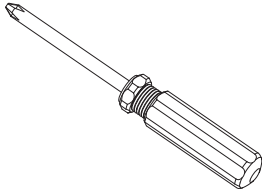


Screw driver

 

M6 screw (2pcs)



 
M4 screw (1pc)



Concrete anchor (2pcs)



 M6 washer (2pcs)




Leveler (1pc)

Assembly Instructions

Step 1


For concrete walls, mount the wall plate of the bracket to the wall using the concrete anchors, M6 screws and washers.

For Wooden walls, use only the basic screws.

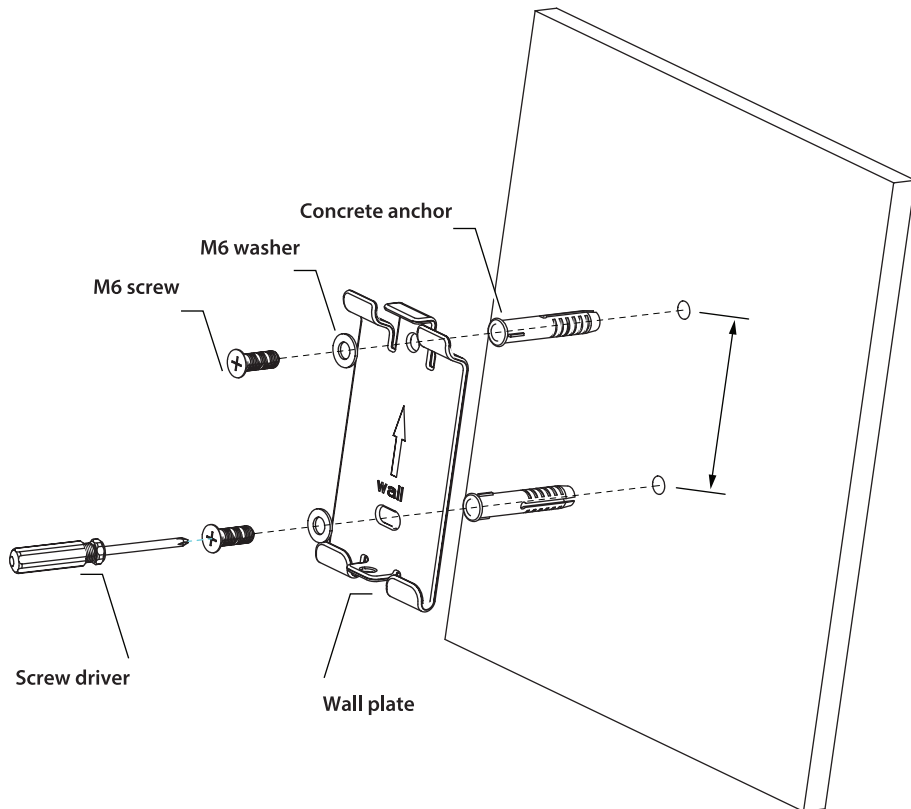


Step 2

Assemble the tablet with the bracket's front panel using 4pcs thumb screws.

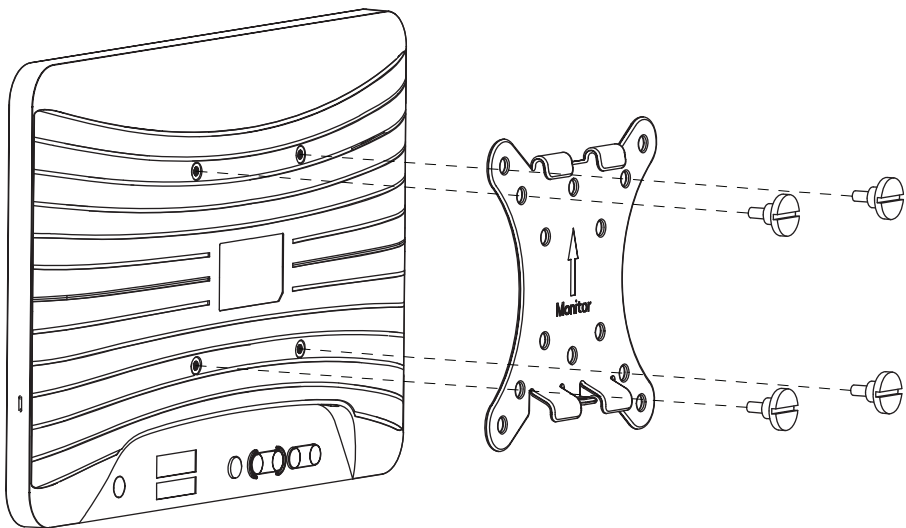


Step 3

Hook the front plate onto the wall plate. Four bracket parts should “click” when completely inserted.

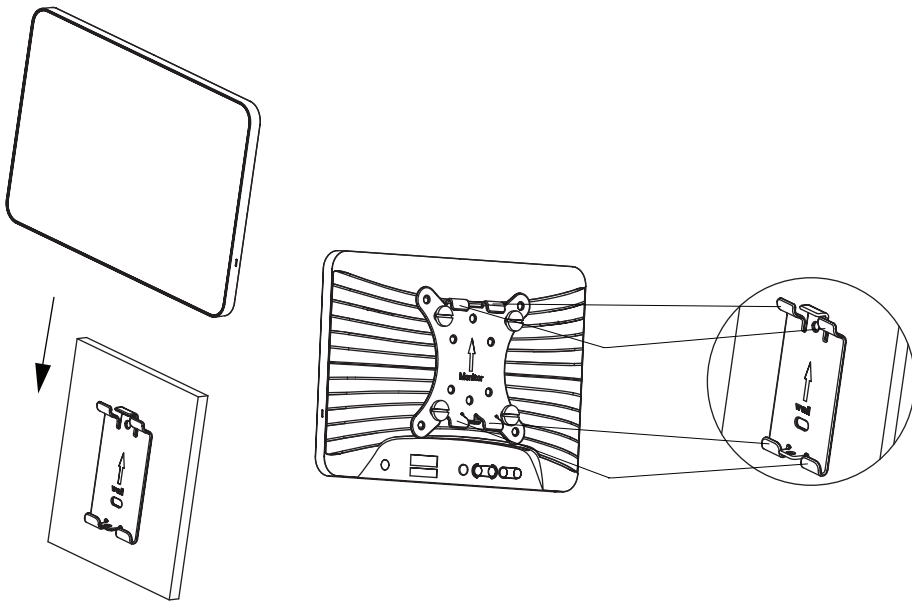

Step 4

Secure the tablet to the bracket from the bottom side using the M4 screw.

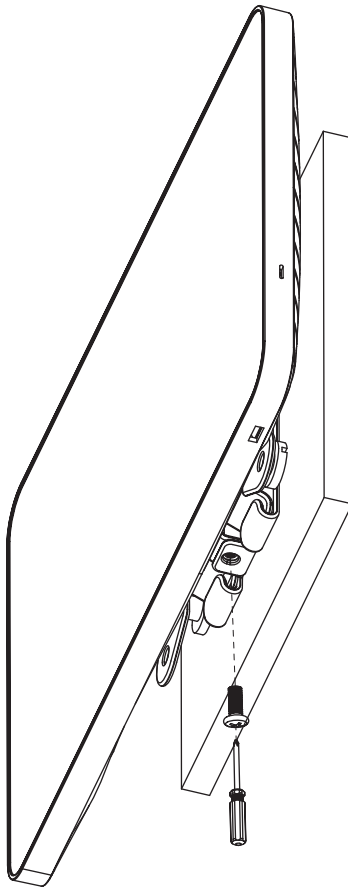



For further information or support,
please contact: <http://outform.com/support>