# Echo Audio Bottle **Sports Bottle**

Instruction Manual 1626-63



# Functions:

- Power Button 2. LED Indicator
- 3. Micro USB Input

# What's included:

- 1 x Echo Audio Bottle (1626-63) 1 x USB to Micro-USB Charging Cable
- 2 x Instruction Manual

## **Tech Specifications**

- Max 4hrs operating time
- Charging time: up to 2hrs
- · Pairing Name: "Echo Audio Bottle"

3.4 - 4.2 V Working Volume 5 V (CC)/500 mAh Charging Power Bluetooth Version RDABT host 4.0 Recharge Method Micro-USB Battery Capacity 3 W Rated Power 450 mAh Bluetooth Range < 7.5 m **Bottle Material** Tritan (sans BPA) Product Size 8,8 cm x 8,8 cm x 29,7 cm Product Weight 227 g 2AOAW-162663 FCC ID

#### Instructions:

(Be sure to fully charge the speaker before using for the first time).

# 1. Charging the Speaker

· Connect the provided charging cable to a power source and to the micro USB port on the speaker (3).

The LED indicator light will glow red when charging and turn off when fully charged.

#### 2. Bluetooth Setup:

- Press and hold Power Button(1) to turn ON the speaker, Bluetooth LED Indicator(2) will flash BLUE
- . Turn on the Bluetooth function on mobile device. Select "Echo Audio Bottle" pairing name, LED will slowly flash BLUE if successfully paired before.
- Press and hold the Power Button(1) to turn off the device.

#### 3 Music Control:

 Audio volume and track selection can be made by using the mobile device.

## SAFFTY PRECAUTIONS:

- · WARNING-When using this product, basic precautions should always be followed:
- Read all the instructions before use.
- 2. Never store or use this product in temperatures below 32°F(0°C) or above 115°F(45°C).
- 3. The unit's full performance is achieved only after 2 or 3 completed charge and discharge cycles.
- 4. To reduce the risk of injury, close supervision is necessary when the product is used near children.
- Do not expose the device to moisture.
- 6. Do not use the device in excess of its output rating. Overload outputs above rating may result in a risk of fire or injury.
- 7. Do not use the device if damaged or modified
- 8. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- 9. Do not disassemble the device. For repairs, seek a qualified service professional. Incorrect reassembly may result in a risk of fire or injury.
- 10. Do not expose the device to fire or excessive temperature. Exposure to fire or temperatures above 104°F may cause explosion.
- 11. Ensure that qualified service professionals use only identical replacement parts to ensure product safety

# CLEANING:

To clean the bottle, twist to separate the speaker lid from the bottle body. Clern the bottle separately avoid damage to the sperker.

- (1) Hand wash racommended
- (2) Use an non-abrasive cleaner
- (3) To clean the speaker, wipe with a damp

### FCC Statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

## Warning:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television. reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna. - Increase the separation between the equipment
- and receiver. -Connect the equipment into an outlet on a circuit
- different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference. and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

