
345*69MM

Front

BUTTON FUNCTIONS

- Press and Hold-Beginning of Track Single Press-Change LED Light Double Press-Turn On/Off Light
- Press and Hold-Previous Track Single Press-Volume down
- >|| Single Press-Pause/Play(Answer /End Call) Press and Hold-Refuse a Call Double Press-Call out the Last caller dialed from cellphone
- > Press and Hold-Next Track Single Press-Volume up

For some devices.speaker controls may function differently than advised herein. Refer to the functions and controls of your device.

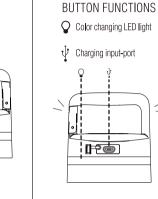


«K»O

CHARGING

Before first use, please charge the wireless speaker.

Plug the provided USB charging cable into the speaker and a powered

While charging, the LED light is red. Once fully charged, the light will turn off.

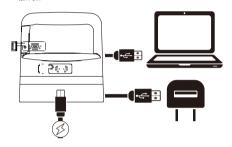

CLEANING

To clean the bottle, twist to separate the speaker lid from the bottle. Hand wash the bottle separately. To avoid damage to the speaker, use a non-abrasive cleaner.

To clean the speaker, flush with water directly for no longer than 3 minutes. Do not submerge under water.





Back

FCC Warning Statement:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no quarantee that interference will not occur in a particular installation. If this equipment does not cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to connect the interference by one or more of the following measures:

- -Reorient or relocated the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is
- -Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly a pproved by the party responsible for compliance could void the useauthority to operate the equipment. This device is measured RF output power is less than the SAR exclusion threshold value for human head and body. Therefore, SAR tes is not necessary.

WARNINGS

Please read all the instructions carefully before initial use.

Do not submerge speaker lid under water.

Charge speaker with provided power cables.

Charge speaker completely before initial use.

Do not disassemble item

Never throw item into fire

Never expose item to high temperature changes Hot/Cold or humidity or liquids

)) Speaker

Microphone

Keep away from children. This is not a toy.

Do not use if items or parts are damaged

Store in a clean and dry space

Always leave sufficient space around the item

Never use item in spaces with no air circulation.

The battery must be recharged every 3-6 months to avoid discharging (every battery self-discharges slowly) and damage of battery.


Use product with original accessories only.

Device disconnects or stops playing music if no action within 10 minutes.

Device will turn off automatically.

Turn off unit when not in use.

WHAT'S INSIDE

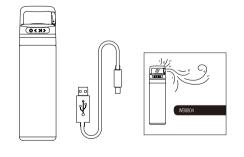

Bottle, Micro USB cable, User's Manual

TECH SPECIFICATIONS

Speaker	D45mm (150HZ-15KHZ)
Power output	3W 4 Ω
SNR	90±3DB
Wireless version	4.2
Wireless effective range	Up to 10meters
Polymer battery	400mAh
Charging voltage	DC5V
Charging time	around 1.5 hours
Playing time	around 2 hours
IP46	
	√







CONNECTING THE WIRELESS SPEAKER

- Make sure Bluetooth is activated on phone / music device.
- Select speaker's name "BT Water Bottle"
- Start playing music on your device. Make sure to keep the device within a 10m range of your Wireless speaker.
- The Wireless speaker can be used during charging.
- When low battery is detected, the lid makes a sound "DI DI"

