PrimeAudio®

Wireless Earbuds with Mic User Manual

PACKAGE WITH:

PATW-1005-SV

PATW-1005-PK PATW-1005-TL

DATE:

9/18/2020

DESIGNER:

Daniel dramos@iworldnyc.com

COLORS:





Artwork is 100% scale

Instruction Manual, 1 Sheet Folded **Printed Both Sides**

OUTSIDE PRINT



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can against normrul interference in a residential installation. In its equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Recrient or relocate the receiving antenna.
 Increase the separation between the equipment and receiver.
 Connect the equipment into an outlet on a circuit different from that to which the receiver is

onnected.

Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment. This device compiles with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in



177.8 mm

damage, open or dismantle the battery and do not use it in damp and/or corrosive conditions. Only use compatible chargers. Never dispose batteries in a fire and never expose them to high temperatures. Do not expose the product to

BATTERY DISPOSAL: The crossed-out wheelie-bin symbol means that you may not dispose of this product together with general household waste; instead, take it to a recycling point for electrical and electronic equipment. For more information about local recycling points, contact your local authority, civic amenity site or the business where you purchased this product. The separate collection and recycling of used items of electrical and electronic equipment prevents any harmful substances they contain from harming human health and polluting the environment.

Please keep this information for later reference.

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.

APPLE, IPOD, IPAO, IPHONE, AND SIRI ARE TRADEMARKS OF APPLE INC., REDISTERED IN THE U.S. AND OTHER COUNTRIES



INSIDE PRINT





INSTRUCTION MANUAL

Bluetooth® True Wireless Cord-Free Earbuds

TRUE WIRELESS EARBUDS

Stream audio wirelessly via Bluetooth technology in high quality from up to 33 ft. away
 Integrated rechargeable battery provides hours of playing time wherever you go.

CHARGING THE CHARGE CASE

To charge: 1. Insert the micro-USB connector of the included USB cable into the micro-USB charging input port on the charge

case.

2. Insert the larger USB end of the cable into the USB port of a computer OR into a compatible USB DC 5V wall charger.

not included) to charge through a standard wall outlet. The indicator light will blink red while charging and will turn a solid red when charging is complete. Unplug from the power source when charging is complete.

NOTE: If earbuds are inside the charge case, they will pause charging while the case is being charged.

The earbuds must be fully charged before first use. The charge case must also be fully charged for maximum

The earbuds must be fully charged before first use. The charge case must also be rully charged for maximum performance. To charge:

1. Insert each earbud into the charge slots, ensuring the charge contacts on the bottom of the earbuds line up and connect with the contacts within the charge slots. Press the power button on charge case to begin charging. The indicator light will float her during charging and will turn a solid blue when charging is complete. The light indicator on the charge case will turn a solid blue when earbuds are charging and will turn off when earbuds are fully charged.

2. Remove earbuds from the charge case when charging is complete.

NOTE: If earbuds are inside the charge case, they will pouse charging while the case is being charged.

NOTE: When battery power is low the LED may blink red and/or there may be an alerting sound, even while music is alreaded. Filly charges the battery are explained obove to resume normal operation.

playing. Fully charge the battery as explained above to resume normal operation. WIRELESS EARBUDS OPERATION

Make sure both earbuds are charged as explained above

1. Make sure both earbuds are charged as explained above.
2. Ensure the Bluetooth function on your mobile device is deactivated.
3. The earbuds automatically turn on when removed from the charging case. If necessary, they can be turned on manually-press and hold the power button on both earbuds for 4 seconds, After 3 to 5 seconds a tone will signal and they will sync with each other automatically. On one of the earbuds, the indicator light will blink red and blue – the other earbud's indicator light will blink slowly in blue.

NOTE: If auto-sync between earbuds is not successful, try manual-sync: make sure the earbuds are off (press and hold the power buttons on both earbuds for 4 seconds until the indicator lights go out). Press and hold both power buttons for 4 seconds again to turn them on and then double-click the power button of one earbud to manually sync the earbuds—this will be the left channel earbud.

4. To poir the synched earbuds to your audio device, activate its Bluetooth function – it should automatically recognize the earbuds and allow you to select it using the name "PrimeAudio". When successfully connected, a tone will signal and both earbud indicator lights will blink slowly in blue. You are now set to enjoy audio wirelessly within a 33ft range of the audio device.

NOTE: If you do not connect the earbuds with a Bluetooth device after 3 minutes of being turned on, the earbuds will NOTE: If you do not connect the earbuds with a Bluetooth device after 3 minutes of being turned on, the earbuds will turn off automatically. Restart from step 2 to try to connect again.

NOTE: When powered on, the wireless earbuds will automatically connect with the last successfully paired audio device.

5. Before playback, first adjust the volume of your audio device to medium level as a safe starting point. The volume will be controlled solely from your audio device.

6. To play audio, click the power button on either earbud once – click it once again to pause.

7. To answer an incoming call, click the power button on either earbud once – click it once again to end the call.

8. To reject an incoming call, press and hold the power button on either earbud for one second.

9. To disconnect and shut off the earbuds, press and hold the power button on either earbud for around four seconds.

9. To disconnect and shut off the edrouds, press and hold the power button on either edroud for around four seconds You can also deactivate the Bluetooth on your device — be sure to power off the edrouds when not in use.
10. To activate Siri, the Google Assistant or other voice assistants, press and hold the power/play button on either earbud for 1.5 seconds until a tone is heard. (Compatible devices only)
NOTE: If there is no signal or audio playback for 3 minutes, the earbuds will automatically shut off.
NOTE: Low earbuds power and/or low audio device power may cause poor operation and/or no Bluetooth connection

BACK INSIDE

BACK COVER

FRONT COVER

FRONT INSIDE