

User Manual

Door/Window Sensor 7 Pro



REVISION RECORD

Version	Date	Brief description of changes
---------	------	------------------------------


0.1	2021.10.08	First revision.
-----	------------	-----------------

Table of Content

1	OVERVIEW	1
2	SPECIFICATIONS	2
2.1	<i>Structural</i>	2
2.2	<i>Hardware</i>	2
2.3	<i>Software</i>	2
3	QUICK START	4
3.1	<i>Important safety information</i>	4
3.2	<i>Optimally placing the product</i>	4
3.3	<i>How to install the product</i>	4
3.4	<i>How to add the product</i>	4
3.5	<i>How to remove the product</i>	5
3.6	<i>How to manually trigger Wake Up</i>	5
3.7	<i>How to factory reset</i>	5
3.8	<i>Safety Warning for Batteries</i>	5
3.9	<i>Product Usage</i>	5
4	SOFTWARE FUNCTION DEFINITION	7
4.1	<i>User Behavior Interaction</i>	7
4.2	<i>Supported Command Classes</i>	8
4.3	<i>Basic Command Class mapping</i>	8
4.4	<i>Z-Wave Plus Info</i>	8
4.5	<i>Manufacturer Specific</i>	8
4.6	<i>Version</i>	9
4.7	<i>Association Group Info</i>	9
4.8	<i>Notification</i>	9
4.9	<i>Binary Sensor</i>	9
4.10	<i>CENTRAL SCENE</i>	10
4.11	<i>Wake Up</i>	10
4.12	<i>Battery</i>	10
4.13	<i>Indicator</i>	错误!未定义书签。

1 OVERVIEW

The AEOTEC Door/Window Sensor 7 Pro is a sensor, which detects if your window is opened, closed or tilted. The sensor is easily retrofittable. Furthermore, the AEOTEC Door/Window Sensor can include other sensors by being connected with other binary sensors like NTC contacts, microswitches or flood sensors. Thanks to its slim design the AEOTEC Door/Window Sensor 7 Pro can be installed unflashy on every window. The sensor just has to be installed on the window casement. Additionally, there has to be a slim magnet installed closely to the sensor at the window frame. By using a patented method the sensor can reliably detect the exact position of the window. With the potential free input, the Door/Window Sensor can also include other sensors in your Z-Wave system. For that, the binary sensor is connected to the potential free input of the sensor. Besides sensors, there can also be connected momentary switches, which control scenes in your gateway. Tripple clicking the tamper button includes (adds) and excludes (removes) the device. A single click on the button will wake up the device. The device supports the Z-Wave Security S2 framework with authenticated and unauthenticated network keys. Please follow the instructions on the central controller when including. The device also supports SmartStart.

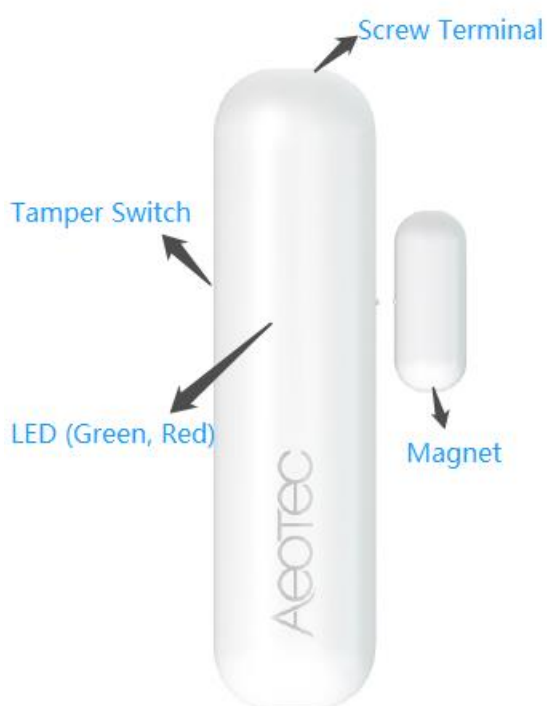

Terminology	Description
tamper switch	Used for networking ,resetting and protecte the device.
Led (Green, Red)	Used for indicating the current state of the product.
Magnet	Change the sensor state via making the Magnet away or near from Main Sensor.
Screw Terminal	Userd for the interconnection of external binary sensors as well as actuators and dry-contacts.

2 SPECIFICATIONS

2.1 Structural

Parameter	Value
Product Identifier	ZW012
Dimensions	28x95x35mm
Weight	Main Sensor: 20g Magnet Sensor: 3g
Color	White
Usage	For indoor use.
Operating Temperature	32~104°F (0~40°C)
Relative Humidity	8%~80%

2.2 Hardware

Parameter	Value
Z-Wave Module	ZGM130S
Z-Wave TX Power	Max: 13dBm
Z-Wave Antenna Distance	40m (Indoor) /150m (Outdoor)
Indicator Light Color	Green, Red
Buttons and Connectors	Tamper Button (x1), Magnet(x2)
Input Voltage	3.0V Lithium battery
Battery Type	1*1/2AA
Battery Included	Yes. 1pcs battery included.
Battery Required	Yes. 1pcs battery required.
Battery Info	Model: ER14250 1/2AA Capacity: 1200mAh Detachable: Yes Chargeable: No Endurance: 2 years
Working Current	30mA
Standby Current	5uA
Maximum Standby Power Consumption	0.03mW
Maximum transmission	5mW
Built-in Sensors	hall switch

2.3 Software

Parameter	Value
Wireless Technology	Z-Wave
Certification Type	Z-Wave Plus v2 Certification
Z-Wave SDK Version	7.15.2
Z-Wave Library Type	Enhanced 232 Slave
Z-Wave Role Type	Reporting Sleeping Slave[0x06]
Generic Product Type	GENERIC_TYPE_SENSOR_NOTIFICATION [0x07]
Specific Product Type	SPECIFIC_TYPE_NOTIFICATION_SENSOR [0x01]
Security Class	Non-Security, S2 Unauthenticated, and S2 Authenticated
SmartStart Compatible	Support. After powering on, SmartStart is auto activated.
Over The Air (OTA)	Support. Firmware can be updated via RF.
Multi Channel Product	No

Association	Support. Refer to Section 4.7 Association Group Info.
Factory Reset	Support. Refer to Section 3.7 How to factory reset.
Power-down Memory	Support. All command settings will stay unchanged even power down.
Sensor State Report	Support. Send out notification via Group 1 when Magnet is away or near.
Control other product	Support. Control other Z-Wave product directly via Group 2 when Magnet is away or near.

3 QUICK START

3.1 Important safety information

Please read this manual carefully. Failure to follow the recommendations in this manual may be dangerous or may violate the law. The manufacturer, importer, distributor and seller shall not be liable for any loss or damage resulting from failure to comply with the instructions in this manual or any other material. Use this equipment only for its intended purpose. Follow the disposal instructions. Do not dispose of electronic equipment or batteries in a fire or near open heat sources.

3.2 Optimally placing the product

This is a **secure Alarm Sensor**. To run this device please insert fresh **1 * 1/2 AA** batteries. Please make sure the internal battery is fully charged. The DSK for the S2 inclusion can be found inside the sensors packaging.


If your Z-Wave gateway supports SmartStart: scan the QR code on Door / Window Sensor 7 Pro using the gateway's app. Your sensor will join your Z-Wave network automatically.

3.3 How to install the product


The sensor can be mounted either on the moving part or on the fixed part of a door or a window. Mounting can be accomplished either using the tape by peeling off the protection foil or using two screws with the holes inside the battery compartment. If the tilt detection on a window (only normal windows, no roof windows) shall be used the sensor device must be placed on the moving part of the window and the magnet on the window frame.

The sensor comes with two types of magnets:

- The standard magnet covered by plastic part, mountable beside the sensor. Make sure the two indicating lines on sensor enclosure and magnet are opposite to each other. The image on the right-hand side shows the position of magnet and sensor body.
- A slim naked magnet to be mounted behind the sensor in case the sensor body is placed on the side of a window.
- To use the tilting function, the opening angle of the window must be at least 5°.

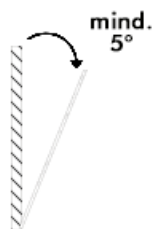

For German-style windows where the window sits on top of the window frame mounting on the side of the window is highly recommended. If no tilting detection is used, the sensor can be placed on any position of the door or the window. In case tilting detection is desired the sensor should be placed on the upper side of the window.

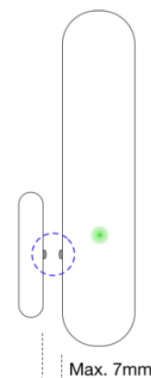

3.4 How to add the product

The following will step you through adding the product to your Z-Wave network.

1. Open the housing.
2. Remove the battery protection.
3. Press the tamper on the side of the appliance three times quickly.

If your Z-Wave gateway supports SmartStart: scan the QR code on Door / Window Sensor 7 Pro using the gateway's app. Your sensor will join your Z-Wave network automatically.

3.5 How to remove the product

1. Open the housing.
2. Press the tamper on the side of the appliance three times quickly.

3.6 How to manually trigger Wake Up

1. A single click on the button will wake up the device.
2. Repower on will wake up the device.

Note:

The Wake Up period starts when the node issues a Wake Up Notification and it ends either 10 seconds after the last received/transmitted frame or at the reception of a Wake Up No More Information Command by the Wake Up destination.

3.7 How to factory reset

This device also allows to be reset without any involvement of a Z-Wave controller. This procedure should only be used when the primary controller is inoperable.

Once Cover is removed and the tamper switch is tripped, push the tamper for 5 seconds until the RED LED blinks once. Then release tamper and push it again for 5 seconds while the RED LED is blinking until the GREEN LED blinks once.

3.8 Safety Warning for Batteries

The product contains batteries. Please remove the batteries when the device is not used. Do not mix batteries of different charging level or different brands.

3.9 Product Usage

Once installed the sensor will report "open" and "close" status changes to a central Z-Wave controller using notification commands. Additionally, the sensor can directly control other devices using association group 2. Using configuration commands the source of "open" and "close" events can be chosen between the internal magnet detector or external dry contact connected via the screw terminal. The device is protected by a tamper switch.

Tilt detection

The tilt detection allows reporting the way a window is opened. This is accomplished using the command class "binary sensor - tilt-type". The tilt function has 3 modes (mode 1 by default):

Mode 0: turn off the tilt function

Mode 1: Enable tilt function. It needs to be used with magnets. In case the magnet is far away and the tilt angle of the product is greater than 5 degrees, the tilt event is triggered. In case the magnet is near, the tilt event is released.


Mode 2: Enable tilt function. It can be used alone, but need to identify the current installation location. When this mode is configured or powered on (mode 2), it will enter the identification mode and the green light will flash. The product needs to stand still for 3-8 seconds. If the recognition fails, the red light will be on, and the tilt function is not available. It needs to be recognized again. If the recognition is successful, the green light will be on. In case the tilt angle of the product is greater than 5 degrees, the tilt event is triggered. In case the tilt angle of the product is less than 5 degrees, the tilt event is released

Screw Terminal

The product must support the interconnection of external binary sensors as well as actuators and dry-contacts. The product allows interconnection with external sensors/actuators via 3-pin screw terminals with the following pinout:

- #1: Ground
- #2: Digital Input
- #3: VCC (direct battery supply)

VCC + Ground terminals can be used to externally power the sensor with a 3.6V battery or special power adapter (which is not included in the scope of delivery). Digital + VCC is used to connect the external dry contact.

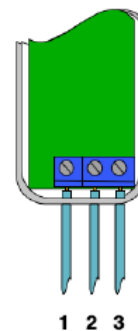

Link testing

When activated by configuration parameter #5 the device can perform a link test with device No.1. Double-clicking the tamper will start the process. As a result, the GREEN LED will blink two times in case of success and the RED LED will blink two times in case of failure.

4 SOFTWARE FUNCTION DEFINITION

4.1 User Behavior Interaction

User behavior	Out of the Z-Wave network	In the Z-Wave network
Power OFF	Cut the power.	Cut the power.
Power ON	<p>Send Inclusion Requests for SmartStart Learn Mode. LED will flash red 5 times, which means it's out of the Z-Wave network.</p> <p>If gateway is adding the device succeeds through SmartStart, LED will light up green for 2 seconds</p> <p>If Adding fails, LED will off. Device will auto-reset and then activate SmartStart Learn Mode again.</p>	<p>Send Wake Up Notification. LED will become flash green once, and device will wake up for 15 seconds.</p>
Make Magnet away or near	LED will flash red once.	<p>Trigger Association function. Refer to Section 4.7 and 4.14 for details about Association function. LED will flash red once.</p>
Click tamper switch once	<p>1.Reserved LED will flash green once.</p> <p>2.Exit Classic Inclusion Learn Mode: If tamper switch is clicked again during the Classic Inclusion Learn Mode, the Classic Learn Mode will exit. LED will turn off. Device will auto-reset and then activate SmartStart Learn Mode again.</p>	<p>1.Issue Wake Up Notification and stay awake for 15 seconds unless put to sleep by Wake Up No More Information frame. LED will flash green once.</p> <p>2.Exit Classic exclusion Learn Mode: If tamper switch is clicked again during the Classic exclusion Learn Mode, the Classic Learn Mode will exit. LED will turn off.</p>
Click tamper switch twice	Reserved	Start a link test with controller (When activated by configuration parameter #5). If succes, LED will blink green two times If failure , LED will blink red two times
Click tamper switch three times quickly	<p>1.Send Node Info for Adding. LED will blink green and red for 30s until it is added into the network.</p> <p>If Adding succeeds, LED will light up green for 2 seconds</p> <p>If Adding fails, LED will turn off. Device will auto-reset and then activate SmartStart Learn Mode again.</p> <p>2.Exit Classic Inclusion Learn Mode: If tamper switch is clicked again during the Classic Inclusion Learn Mode, the Classic Learn Mode will exit. LED will turn off. Device will auto-reset and then activate SmartStart Learn Mode again.</p>	<p>1. Send Node Info for Removing. LED will blink green and red for 30 seconds until it is removed from the network.</p> <p>If Removing succeeds, LED will light up green for 2 seconds</p> <p>If Removing fails, LED will turn off.</p> <p>2.Exit Classic exclusion Learn Mode: If tamper switch is clicked again during the Classic exclusion Learn Mode, the Classic Learn Mode will exit. LED will turn off.</p>
Click tamper switch 5 times quickly	Reserved	Toggle configuration parameter 1 setting value from 0/1
Press and hold tamper switch for 5 seconds	<p>Factory Reset. push the tamper for 5 seconds until the RED LED blinks once. Then release tamper and push it again for 5 seconds while the RED LED is blinking until the GREEN LED blinks once.</p>	<p>Factory Reset. push the tamper for 5 seconds until the RED LED blinks once. Then release tamper and push it again for 5 seconds while the RED LED is blinking until the GREEN LED blinks once.</p>

		The device will issue a Device Reset Locally Command via its Lifeline to notify the Lifeline destination that the device has been reset to its factory default state. And it will perform the reset operation regardless of whether or not the delivery of the Device Reset Locally Notification is successful.
--	--	---

4.2 Supported Command Classes

Command Class	Version	Not added	Non-secure added	Securely 2 added	
				Non-secure	Secure
ZWAVEPLUS_INFO	2	Support	Support	Support	
ASSOCIATION	2	Support	Support		Support
MULTI_CHANNEL_ASSOCIATION	3	Support	Support		Support
ASSOCIATION_GRP_INFO	3	Support	Support		Support
TRANSPORT_SERVICE	2	Support	Support	Support	
VERSION	3	Support	Support		Support
MANUFACTURER_SPECIFIC	2	Support	Support		Support
DEVICE_RESET_LOCALLY	1	Support	Support		Support
INDICATOR	3	Support	Support		Support
POWERLEVEL	1	Support	Support		Support
BATTERY	1	Support	Support		Support
SENSOR_BINARY	2	Support	Support		Support
CONFIGURATION	4	Support	Support		Support
CENTRAL_SCENE	3	Support	Support		Support
SECURITY_2	1	Support	Support	Support	
NOTIFICATION	8	Support	Support		Support
WAKE_UP	2	Support	Support		Support
SUPERVISION	1	Support	Support	Support	
FIRMWARE_UPDATE_MD	5	Support	Support		Support

4.3 Basic Command Class mapping

Basic Command Class is not mapped to any of the supported command classes.

4.4 Z-Wave Plus Info

Parameter	Value
Z-Wave Plus Version	0x02
Role Type	0x06 [ZWAVEPLUS_INFO_REPORT_ROLE_TYPE_SLAVE_SLEEPING_REPORTING]
Node Type	0x00 [ZWAVEPLUS_INFO_REPORT_NODE_TYPE_ZWAVEPLUS_NODE]
Installer Icon Type	0x0C00 [ICON_TYPE_GENERIC_SENSOR_NOTIFICATION]
User Icon Type	0x0C00 [ICON_TYPE_GENERIC_SENSOR_NOTIFICATION]

4.5 Manufacturer Specific

Parameter	Value
Manufacturer ID 1	0x03
Manufacturer ID 2	0x71
Product Type ID 1	0x00 [EU], 0x01 [US], 0x02 [AU]
Product Type ID 2	0x02 [PRODUCT_TYPE_ID_SENSOR]

Product ID 1	0x00
Product ID 2	0x0C

4.6 Version

Parameter	Value
Z-Wave Protocol Library Type	0x03
Z-Wave Protocol Version	0x07
Z-Wave Protocol Sub Version	0x0C
Firmware 0 Version	0x01 [Z-Wave Chip Firmware Version]
Firmware 0 Sub Version	0x00 [Z-Wave Chip Firmware Sub Version]
Hardware Version	0x01
Number of firmware targets	0x00

4.7 Association Group Info

Root product

ID	Name	Node count	Profile	Function
1	Lifeline	5	General: Lifeline (0x0001)	<p>Product Reset Locally Notification: Issued when Factory Reset is performed.</p> <p>Battery Report: Issued when battery becomes low.</p> <p>Sensor Binary Report: Issued when tilt angle is changed Issued when sensor state is changed.</p> <p>Notification Report [Type=0x06; Event=0x16]: Issued when sensor state is changed to be Open Status.</p> <p>Notification Report [Type=0x06; Event=0x17]: Issued when sensor state is changed to be Close Status.</p> <p>Notification Report [Type=0x07; Event=0x03]: Issued when tamper is tripped</p> <p>Central Scene Notification: Issued when the external dry contact is activated</p>
2	Control	5	Control: Key01 (0x2001)	<p>Basic Set: Control devices when a magnet or external dry contacts trips</p>
3	Alarm	5	Notification:Access Control (0x7106)	<p>Notification Report: Sends out alarm message when a magnet or external dry sensor trips</p>
4	Tamper	5	Notification:home Security (0x7107)	<p>Notification Report: Sends alarm messages when tamper is tripped</p>
5	Tilting	5	Control: Key02 (0x2002)	<p>Basic Set: Control devices when tilting sensor trips</p>

4.8 Notification

Notification Type	Notification Events		Description
Access Control	0x06	Window/Door is open	0x16 Open Status.
		Window/Door is closed	0x17 Close Status.
Home Security	0x07	Tamper Removed	0x03 Tamper removed
	0x00	State idle	0x00 Going to idle

4.9 Binary Sensor

Sensor Type	Sensor Value	Description
Door/Window	0x0A 0x00 / 0xFF	Door/Window State

Tilt	0x0B	0x00 / 0xFF	tilt event
------	------	-------------	------------

4.10 CENTRAL SCENE

When activated by configuration parameter #14 the device can perform as a scene controller. Digital + VCC is used to connect the scene button. The external dry contact will then act as a scene controller with a total of 7 scenes that can be activated:

- 1 - Contact Pressed 1 time
- 2 - Contact Pressed 2 time
- 3 - Contact Pressed 3 time
- 4 - Contact Pressed 4 time
- 5 - Contact Pressed 5 time
- 6 - Contact held down
- 7 - Contact released

Slow Refresh = 0, A new Key Held Down notification will be sent every 200ms until the key is released.

4.11 Wake Up

Parameter	Value	Time
Min Wake Up Interval Seconds	0x000E10	3600s [1 hour]
Max Wake Up Interval Seconds	0xEFF100	15724800s
Default Wake Up Interval Seconds	0x093A80	604800s [1 week]
Wake Up Interval Step Seconds	0x0000F0	240s [4 minutes]

4.12 Battery

1. The 2.90V or more battery voltage corresponds to 100% battery level, and 2.60V or less corresponds to 0%.
2. If send Battery Get to the device, it will issue Battery Report with battery level to the requester when waked up.
3. If waked up or power on, it will detect battery level, and issue Battery Report 0xFF via Lifeline when battery level is less than the value of configuration parameter 23.
4. If the battery level is less than the value of configuration parameter 23 , LED will flash red 3 times for each waked up.

4.13 Indicator

Indicator ID		Property ID	
Node Identify (Green Led)	0x50	On Off Period	0x03
		On Off Cycles	0x04
		On time within an On/Off period	0x05

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.