

490mm

70mm

70mm

70mm

70mm

70mm

70mm

70mm



HAUS JS301

User Manual

Table of Contents

- 1 Message.....2
- 2 Call center.....3
- 3 Contacts.....4
- 4 Tools.....5
- 5 Multimedia.....6
- 6 Camera.....8
- 7 Games.....8
- 8 Internet.....8
- 9 Settings.....9
- 10 Connections.....12

1 Message

The Messaging function is a network service. Sending and receiving Text can only be used if the service is proposed by your network operator.

The message will be directly stored in the SIM card if the capacity is not full. A blinking icon at the head row of the main screen will be displayed if the capacity is full.

If the Text message has been sent to the receiver, a beep will sound. (If the tone for Text messages and message report are activated).

Write message

New SMS

Send: Enter the appropriate number of the recipient or from the phonebook add

Insert template: to the content of the message currently being edited into the common language

Add contact info: Insert the contact person

Save as draft: will save the information to Drafts

Exit: Exit message

Inbox

Reply: reply to SMS to each other.

Delete: Delete short message

Forward: Insert the contact person

Call: choose a voice call.

Move: Move the message to SIM or phone

Copy: Copy the message to SIM or phone

Add sender to: add to new contact or add to existed contact.

Details: The detailed information

Outbox

Reading or processing stored in the Outbox of the SIM card message.

Delete: Delete short message

Resend: To send information

Delete repeated numbers: Remove the same number of information

Lock: Lock cannot be deleted

Move: Move the message to SIM or phone

Copy: Copy the message to SIM or phone

Mark: single marker or markers in whole or in text messages stored in SIM1/SIM2, mark or unmark after delete records

Sort: In accordance with time / contact / subject / message type sort

Drafts

Reading or processing stored in the Drafts of the SIM card message

Sent box

Read and process the mail stored in the SIM card has been sent information

Templates

Use the function of templates

Broadcast message

Use the function of broadcast message

Voice mail server

Use the function of voice mail server

2 Call center

Call logs

You can view your recent call situation.

[All Calls]: Check all call records

[Missed calls]: Show all missed calls list, select a view after a missed call occurred the date and time, phone number and times.

[Dialed calls]: Show all dialed calls list, select a view after a dialed calls occurred in the date and time, phone number and times.

[Received calls]: Show all answered the phone list, select a view after a phone that has the date and time of occurrence, telephone number, frequency

[Rejected calls]: Show all refused to answer the phone list, select a view after a missed call occurred the date and time, phone number and times.

Press the OK softkey to enter the options menu can be more than the number of call records in the following:

Details: View the current record date, time, type.

Call: Call the current number

New SMS: send the current record of SMS

Add to contacts: the number of the record the name added to the existing record which

Add to blacklist: the current record to reject a call which.

Delete: Delete the currently selected record

Delete all: Delete all call records

[Delete all]: Delete all call records

[Call times]: Last time zero starting time for last call statistics, a total of dialed calls, received calls, all calls total, all the time can also be zero.

[GPRS counter]: Display the SIM card GPRS data.

3 Contacts

You have 2 phonebooks in this mobile phone: SIM card and the mobile. The mobile can store 500 phone numbers and the SIM card's capacity depends on its type.

I In standby mode, enter a number, press the call key pieces to make a call, press the OK key to save

If "To SIM 1/2" is selected, users can edit name and number.

If "To phone" is selected, the user can edit the name, mobile number, image, ringtone, caller groups

Into the phone book list, the list on the left displays a small icon indicates that the record exists SIM card or mobile phone, the right is the record of the name and number information.

Standby mode, press the right soft key to enter into the address book or from the menu

Into the address book, do the following:

[New]: Create a record to phone or SIM

[New SMS]: Send a message

[Call]: voice call.

[Delete]: Delete the contact

[Delete multiple]: Choose one or more records to delete

[Import/Export]: Copy number to the mobile phone or SIM card

[Others]

[Memory status]: Query the current SIM card and mobile phone storage capacity.

[Add to blacklist] To add this to blacklist

4 Tools

Alarm

This machine has five alarm times available for your settings. Access any time, you can set its status to on / off, ring time, repeat mode, ring tones, alarm clock name, etc.

BT

[Open Bluetooth]: Choose to activate the Bluetooth

[Bluetooth visibility]: Bluetooth visibility set

[Paired device]: Search and paired Bluetooth devices

[Device name]: Local Bluetooth name

[Bluetooth file storage]: Storage location

[Help] Help Documentation

Calendar

Interface in the calendar, press the arrow keys on the date forward one week, press the arrow keys to move one week after the date, press the left arrow key date forward one day, press the right arrow keys to move the day after the date, select the date to a dark display

Standby mode, press the right soft key to enter into the address book or from the menu

Into the address book, do the following:

[New]: Create a record to phone or SIM

[New SMS]: Send a message

World clock

View the time of countries

Stopwatch

Use the function of Stopwatch

Torch

Opening and closing the flashlight

5 Multimedia

My Files

[MemoryCard]: SD card needs to support T card

[New folder]: Create a new folder.

[Delete]: delete the specified folder.

[Details]: View the folder or file for more information

[Rename]: the selected folder can rename

[Copy]: the file can copy to another folder

[Search]: Enter the folder name to find out.

[Sort]: By the way you choose to sort the files.

[Mark]: Select Mark / Unmark single / all

[Move]

Memory Card capacity: View the memory card capacity

Format MemoryCard: Format memory card

DV

Set the parameter of DV and then use the function

Image

View the image which in phone memory or T-card

Audio

Play audio files, MP3 songs; to play audio files, MP3 songs, press the up and down key pause to stop play, press the left and right keys to select the present, the next song, press OK key to enter option.

100mm

正面

70mm

70mm

70mm

70mm

70mm

70mm

70mm

100mm

Inserts earphone earphones when playing music also will stop

[Music list]: Into playlist interface. Can be added to the play list editing and other operations

[Add]: Add songs or music playlist bookmark

[Set as ringtone]: The song is set to call or alarm tone

[Repeat]: Choose one/all repeat

[Shuffle]: Choose shuffle to play the music

[Settings]:

Equalizer: Choose a variety of equalizer effects

BT stereo output: Set the BT output

BT stereo headset: Set the BT headset

[Open review]: Open the function of review

[Exit]: Exit menu audio player

Video

Use the function of video player

FM radio

[Auto search and save]: Channel auto search and save

[Channel list]: View channel list

[Save]: Save the channel to the channel list

[Manual search]: Manually enter the channel and find

[Open speaker]: Choose whether to open the microphone

[Background play]: Choose whether to open the Background Play

[Record]: Record the FM

[Timing record]: Set the time to record

[Record file list]: The list of FM record file

[Settings]: Set the location of storage

[Help]: FM Help

Recorder

[Start recording]: Start recording

[Record file list]: The memory card inside the recording file list

[Storage]: Set the locate of storage

[File format]: Set the format of record file

6 Camera

The phone supports photo, so you can capture your favorite scenes anywhere. Photos will be saved in the phone comes with a file system, photographs as JPG format, you can phone provides photographs sent to a computer via USB connection to view, can also be set Image for the standby

Note: This function can work without driver under Windows XP by directly connecting your mobile to the computer

7 Games

Snake

Provide the Snake game

8 Internet

Site

[Bookmark]: Website of interest can be saved in the bookmarks and the bookmarks can be edited or direct them to surf.

[History]: Mobile recently logged in the menu page is saved, you can directly select the records inside the surf

[Offline pages]: Throughout the course of mobile browsing, save the snapshot shown here

[Homepage]: Open the home page

[Settings]: Set account/homepage/content/restore default

[Exit]: Exit browser

9 Settings

[Dual-SIM]:

[Standby mode]: Dual SIM standby or standby only SIM1 or SIM2 only

[Reply by original SIM]: Reply the call/SMS by original SIM

[Set SIM name]: SIM1 and SIM2 in the card slot to set the display name

Phone settings

[Date & time]

Set time: set the phone to display the time

Set date: set the phone to display the date

Time format: Set the display time format

Date format: Set the date display format

Update time settings: Select open update time

[Language settings]: Select phone display language.

[Auto power on/off]: Set the time and frequency of Automatic Turning

[Shortcut settings]: Can set up shortcut functions

[Restore factory settings]: restore the factory settings

Display

[Animation effect]: Power/off display

[Wallpaper settings]: Set wallpaper

[Idle display setting]: Set the idle

[Brightness]: Adjust the screen's backlight brightness

[Backlight]: Set the time of display light

[Keypad backlight time]: Set the backlight time key

Security

[PIN]: Select open or modify the phone's PIN code

[Modify PIN2]: PIN2 choose to modify the phone code

[Phone locked]: Set the phone locked

[Change phone password]: Modify the password of phone

[Data protection]: set access to enter the password to view functionality. (Including: phonebook / messages call history / photo / video / music / file manager) and modify password

[Auto keypad lock]: Set the auto keypad lock

[Lock screen by end-key]: press the end key to select whether the off-screen function

[Fixed dialing]: Set the fixed dialing function

[Blacklist]: Set the blacklist with call or message

Call setting

[Dual-SIM]:

[Standby mode]: Dual SIM standby or standby only SIM1 or SIM2 only

[Reply by original SIM]: Reply the call/SMS by original SIM

[Set SIM name]: SIM1 and SIM2 in the card slot to set the display name

[Call divert]: transfer a call, respectively SIM1/SIM2

Call forwarding unconditional: Set a forwarding number, for forwarding all calls are

Call forwarding on busy: set the forwarding number, transfer calls when in busy

Call forwarding on no reply: Set a forwarding number, in case of no response transfer

Diver if unreachable: to set the forwarding number in the phone unable to connect the case of transfer

Cancel all divers: cancel all of the transfer

[Call waiting]: open call waiting, respectively SIM1/SIM2

[Call barred respectively SIM1/SIM2 call for restrictions

[Hide ID]: respectively SIM1/SIM2 to hide the machine when the power numbers.

[Advanced settings]:

[Call time minute reminder]: Select the open or closed during a voice call has prompted

[Auto redial]: Select whether to open automatically redial function

[Reply SMS after reject]: Select whether to reject messages or return after any key answer

[Auto call recorder]: Auto record the voice call

Profiles

[Add]: Add the new profile

[Delete]: Delete the profile

[Settings]: set the selected mode

[Rename]: Rename the profile

[Ring settings]

SIM call ring: set the SIM card of the ringing tone

SIM message ring: set the SIM card message tone

[Adjust volume]

Caller ringtone: set the ringing tone volume

Message ringtone: ring volume settings information

Alarm & calendar volume: set the alarm tone

Call volume: Set the volume of calls

Power ringtone: the voice of setting switch

[Ring type]

Call alert: ringtone and silent, two ways for you to choose

Message alert: ringtone and silent, two ways for you to choose

Alarm & calendar remind: ringtone and silent, two ways for you to choose

[Other alert rings]

Key tone: set the key tone of voice

Battery low alert: Choose open the alert of battery low

Power ringtone: Set the sound is turned Off

Dial tone: Activate dial tone

Flip tone: silent or rings

Flip on tone: silent or rings

10 Connections

[Network account]: Create or edit the network account

[New connection]: Create a new Internet account

[Add from list]: from the system built-in Internet account to add a new account

[Search]: from the current logged on to Internet search to the card account information, which added to the list after the selected

[Delete]: delete the selected account

[Edit]: edit the currently selected account

[GPRS service]: Choose open or close GPRS service

[Data connection settings]: The type of data connection

[Network selection]: Choose auto or manual select network



反面

S1861 WGI说明书,展开尺寸: 490*100mm,折后尺寸: 70*100mm,128g铜版纸,黑白双面印刷,风琴折

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

SAR Information Statement

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. * Tests for SAR are conducted with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output. Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is **0.741W/Kg** and when worn on the body, as described in this user guide, is **0.955W/Kg**(Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure. The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RFexposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on

FCC ID: 2AOII-JS301 Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) web-site at <http://www.wow-com.com>. * In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance

of 10mm must be maintained between the user' s body and the handset, including the antenna.

Third-party belt-clips, holsters,

and similar accessories used by this device should not contain any metallic components.

Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.