

Anker Innovations Limited. All rights reserved. eufy Security and eufy Security Logo are trademarks of Anker Innovations Limited, registered in the United States and other countries. All other trademarks are the property of their respective owners.

 


 
### QUICK START GUIDE

IndoorCam Mini



### / PRODUCT






Model: T8414

- 1 Lens
- Microphone
- SD card slot
- 4 Status LED

- Speaker
- 6 Power input
- SYNC button

# $2/_{\scriptscriptstyle{\mathsf{INDOORCAM}}}^{\mathsf{POWERING}}$

 

# 3 / ADDING TO EUFY SECURITY APP

I. Download and install the eufy Security app, then sign up for an account.







2. Follow on-screen instructions to complete the setup.

| Status LED           | Description  |
|----------------------|--|
| Blinking blue slowly | Ready for setup.   |
| Blue                 | Working properly.  |
| Blinking red slowly  | Disconnected from the Internet.                          |
| Blinking red once    | Motion or sound detected.                                |
| Red                  | Someone is watching a live stream or recording an event. |
| Purple               | Initializing system.                                     |
| Alternating blue and | Upgrading firmware.                                      |

red


# 4 / MOUNTING INDOORCAM

#### **Select a Location**

The camera can be placed on a table, shelf, or can be mounted on a wall or ceiling.




Keep the camera at least 0.7 ft / 20 cm away from walls or anything that may obstruct the view. Do this to avoid infrared reflection which can have a negative impact on the night vision performance.

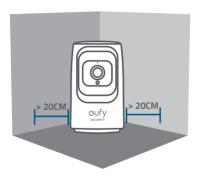

### **Ceiling Mount**

 
- I. Place the positioning card against the ceiling and then mark the points.
- 2. Drill holes with a 5/16" (8 mm) drill bit.





 3. Insert the anchors into the holes, align the holes on the mounting plate with those in the ceiling, and fix the screws with a Phillips-head screwdriver to fasten the mounting plate to the ceiling.





4. Align the grooves with the mounting plate and rotate the camera clockwise until it clicks into place.



#### Wall Mount

To mount the camera on a wall, we recommend using a mounting bracket (not provided) as illustrated below.



# 5 / SETTING ANGLES

Open the eufy Security app, and set a default angle and a privacy angle for the camera on Camera Settings > Angle Settings.



The camera will automatically rotate to this angle when turned on and when motion tracking ends.



If Privacy Mode (Camera Settings > Privacy Mode) is turned on, the camera will be turned off and automatically rotates to the privacy angle you set. If no angle is set and Privacy Mode is turned on, the camera will turn 180° from the Default Angle.

# 6/NOTICE

#### **FCC Statement**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: (1) Reorient or relocate the receiving antenna. (2) Increase the separation between the equipment and receiver. (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. (4) Consult the dealer or an experienced radio/ TV technician for help.

### **FCC Radio Frequency Exposure Statement**

The device has been evaluated to meet general RF exposure requirements. The device can be used in fixed/mobile exposure condition. The min separation distance is 20cm.

Notice: Shielded cables

All connections to other computing devices must be made using shielded cables to maintain compliance with FCC regulations.

The following importer is the responsible party.

Company Name: POWER MOBILE LIFE, LLC

Address: 10900 NE 8th St, Ste 501, Bellevue WA 98004

Telephone: I-800-988-7973

#### **IC Statement**

This device complies with Innovation, Science and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device

Le présent appareil est conforme aux CNR d'Industrie

Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (I) l'appareil nedoit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada

#### **IC RF Statement**

When using the product, maintain a distance of 20cm from the body to ensure compliance with RF exposure requirements.

Lors de l'utilisation du produit, maintenez une distance de 20 cm du corps afin de vous conformer aux exigences en matière d'exposition RF.

The adapter shall be installed near the equipment and shall be easily accessible. Do not use the Device in the environment at too high or too low temperature, never expose the Device under strong sunshine or too wet environment.

The suitable temperature for T8414 and accessories is -20°C-45°C (-4°F - 113°F). When supplying, please place the device in an environment that has a normal room

temperature and good ventilation. It is recommended to supply the device in an environment with a temperature that ranges from 5°C~25°C. Please ensure to use only the adapter offered by the manufacturer. Using unauthorized adapter may cause danger and violate the authorization of the device and the

This adapter is for indoor use only. The output voltage/current of the adapter is 5VDC/IA. The

guarantee article.

plug is considered as disconnect device of adapter.

#### Wi-Fi Operating Frequency Range: 2412~2462MHz;

This product is designed and manufactured with high quality materials and components, which can be recycled and reused.

### **Customer Service**

Warranty 12-month limited warranty

Call Us United States

+I (800) 988 7973 Mon-Fri 9AM-5PM (PT)

United Kingdom

+44 (0) 1604 936 200 Mon-Fri 6AM-11AM (GMT)

Germany

+49 (0) 69 9579 7960 Mon-Fri 6:00-11:00

Email Us

Customer Support: support@eufylife.com

Anker Innovations Limited Room 1318-19, Hollywood Plaza, 610 Nathan Road, Mongkok, Kowloon, Hong Kong







