如何打开钥匙 查看产品标签 How to open the shell and show the Label location



front cover
back cover

第一步: 用手摁下钥匙顶端的PUSH键,

Step 1: press the push button on the top of the key,

第二步:在第一步的基础上,用左手手指顺着钥匙壳缝隙扣动钥匙壳,这样就可以把这个遥控打开。

Step2:On the basis of the first step, use the fingers of your left hand to buckle the key shell along the gap of the key shell, so that you can open the remote control.





第三步,这样就打开了这个钥匙,很容易看到产品标签,这个钥匙不会经过超声波处理。

Step3: now the key was opened .and we can easy to see the label here. The key will not be processed by ultrasonic wave.

