

Cobra Bluetooth Earbuds Quickstart Guide

CYLO®

Bluetooth

Cobra
wireless earbuds


REGISTER
your product at
gocyl.com
you will be entered
to win one of our
amazing
power gifts!

IN THIS PACKAGE

- CYLO Cobra Bluetooth Earbuds
- 1 Replacement Eartips
- Micro USB Charging Cable
- Quickstart Guide

MICROPHONE + VOLUME/MEDIA CONTROLLER OVERVIEW

1. Power on/off. Phone answer-call button.
2. Press for previous song. Press and hold to lower volume.
3. Press for forward song. Press and hold to raise volume.
4. Microphone.
5. LED indicator.
6. Charge port.

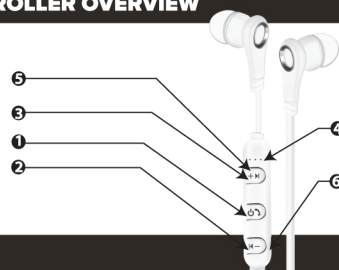

CHARGING DEVICE

This Bluetooth earbud has a 65mAh rechargeable battery. To charge earbud, follow steps below.

1. Insert USB end of micro cable, included, into computer USB port.
2. Connect micro end of cable into the media controllers micro port.
3. Red indicator light is ON when battery is charging.
4. Blue indicator light is ON when battery is fully charged.
5. Battery is fully charged in approximately 2 hours.

3 ways to recharge:
Wall outlet, car, computer.

OPERATING DEVICE

A. Power On/Off

Function	Operation	LED indicator
Power on	Press and hold the power button for 5 seconds	Blue LED is on
Power off	Press and hold the power button for 5 seconds	Blue LED is off

B. Pairing Earbud with Bluetooth Enabled Device

1. To enter pairing mode, press the power button for approximately 7 seconds until blue LED light blinks.
2. On your device's Bluetooth menu, find and select "CYLO Cobra". Your earbuds and device are now paired (you may be required to enter a password "0000").

C. Phone Calls

Press to answer and end incoming phone calls.

D. Playing Music

Function	Operation
	Press to Play/Pause
+	Press for next song. Press and hold to increase volume.
-	Press for last song. Press and hold to decrease volume

When volume is adjusted to it's minimum/maximum setting an indicator tone with sound.

FCC Notice:

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

WARRANTY INFORMATION: At CYLO, we're dedicated to making the highest quality products possible. In that, we provide a one-year limited warranty from the date of purchase. Keep a copy of your receipt as proof of purchase and register your product at gocyl.com and check for the latest product updates as they develop. Failure to register your product and/or to provide proof of purchase may void the warranty. Warranty instructions and information visit: gocyl.com/warranty and select your model.



INSTRUCTION SHEET
BACK