

Audiolux·XT

QIBE-6/1681

Qi STANDARD WIRELESS CHARGE BLUETOOTH EARBUDS



INSTRUCTION MANUAL

**PLEASE READ ALL INSTRUCTIONS CAREFULLY
AND RETAIN FOR FUTURE USE**

Getting started

- Remove the product from the box.
- Please retain all packaging after you have checked and counted all the parts and the contents against the Package Contents list.

Package Contents

- Wireless Charging (Qi) Standard Wireless Charge Bluetooth Earbuds
- Wireless Charging Pad
- USB charging cable
- 2 different sizes of ear tips included
- Instruction Manual

Key Features

- Wireless Charging (Qi) Enabled Bluetooth Earbuds
- Superior sound with passive noise cancellation & enhanced bass
- Connect and stream wireless music anytime, anywhere
- Built-in mic, never miss your phone calls - answer hands-free
- Your music & calls at your finger-tips
- Built-in rechargeable battery
- Easier recharging - no need for wires while recharging the headset. Just place it on the wireless charging pad
- Wireless Charging Pad included

Safety Instructions

Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.

Do not operate the unit if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the unit.

Do not use the unit if it has been dropped or damaged in any way.

Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.

Do not use the unit with wet hands.

Do not put objects into any of the openings.

Keep the unit free from dust, lint etc.


Do not use this unit for anything other than its intended use.

Keep the unit out of reach of children.

This product is not a toy.

Do not use the handset at excessive volume levels, as damage to hearing may occur.

Description of Parts:

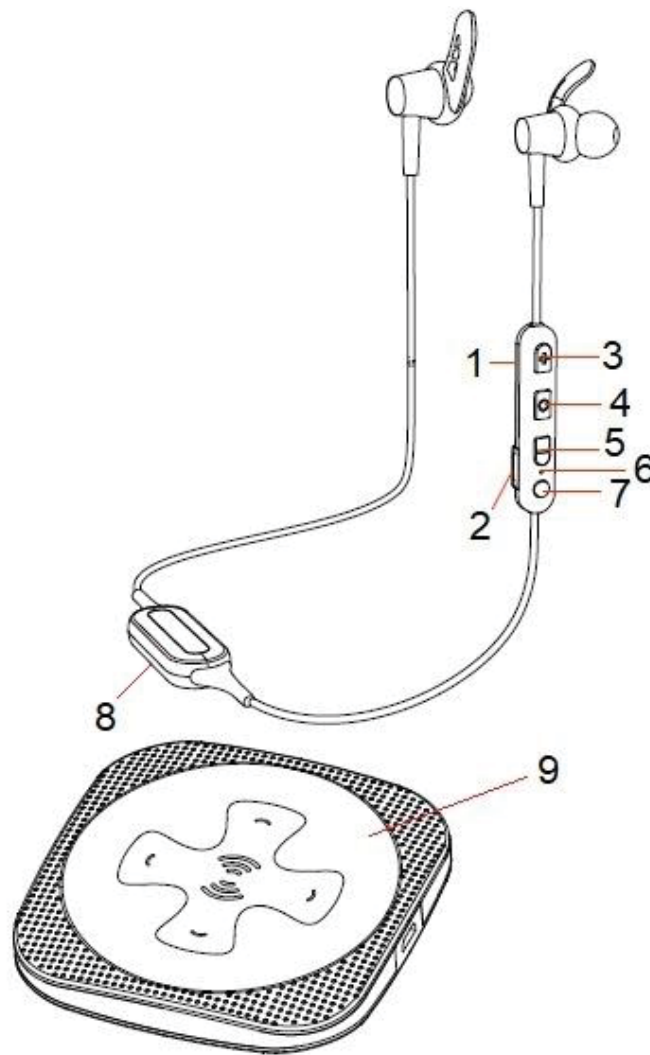

1	Built-In Microphone (located at the back of control panel)
2	Charging port (side)
3	Volume Increase (+) / Next Track
4	MF (Multi-Function) / Phone button
5	Volume Decrease (-) / Previous Track
6	LED Light Indicator
7	Voice Assistant Button
8	Wireless Charging Receiver (located at the bottom)
9	Wireless Charging Pad

INSTRUCTIONS FOR USE

Charging Instructions

The Earbuds has built-in rechargeable battery and wireless charging receiver. When the battery is drained out, it would turn OFF automatically. Please recharge the battery by following either methods, every time battery needs to be charged.

Method 1: Plug the Micro USB end of the included USB charging cable into the charging port. Plug the other end into a suitable USB source such as the one on your computer or other devices made for USB charging. Red LED Light illuminates, indicating that the earbuds is being charged.

It takes 1-2 hours to fully charge the Earbuds. Once the Earbuds is fully charged, LED Light would turn Blue.

Method 2: Connect the Wireless charging pad (included) with the USB cable (included), and the other end of the USB cable to a suitable power outlet rated DC 5V 2A. Red LED indicator light around the Wireless charging pad will turn on. Then, place the Earbuds on the Wireless charging pad in a way that it's Wireless Charging Receiver is in contact with the center of the Wireless charging pad. Red LED Light on the Earbuds illuminates, and the red LED indicator light around the Wireless charging pad will turn to auto-change of blue LED light, indicating that the Earbuds is being charged.

It takes 1-2 hours to fully charge the Earbuds. Once the Earbuds is fully charged, red LED Light on it will turn Blue.

Switching on/off the device

Press and hold the **MF** button for 2-3 seconds to turn ON the device, or 3-4 seconds to turn OFF the device.

Pairing the device with Bluetooth devices (phone or music device)

Ensure the Bluetooth Earbuds is turned off, then, press and hold the **MF** button for 2-3 seconds to turn on the device with an indication tone, the LED flashes red and blue and another indication tone would be heard. Place the Bluetooth Earbuds and Bluetooth source device (phone or music device) no further than 3 feet apart from each other;

Activate the Bluetooth function on your Bluetooth source device (phone or music device). Please refer to the manufacturer's instructions for instructions on enabling Bluetooth on your device.

Once you have activated Bluetooth on your device, select the “Qi Earbuds” from the list of available Bluetooth devices.

If required, enter the password ‘0000’ to confirm & finalize pairing.

Once paired successful, another indication tone would be heard, and the LED flashes blue slowly.

You can now start to use the device.

If pairing is unsuccessful, turn the Bluetooth Earbuds off and then re-pair following the above steps.

The Bluetooth Earbuds will attempt to automatically connect to the last device it was paired with when switched on. If you want to pair it with a new device, please follow the steps outlined above.

Once the Bluetooth Earbuds is paired with your source device, music will transmit through the Bluetooth Earbuds. Please refer to your device’s user manual for further information.

Function Summary

Listening to Music

Once the Earbuds is paired with your source device you can stream music wirelessly through the Bluetooth Earbuds. Should you encounter any problems while streaming please refer your device’s user manual for further information.

Control Function

Function	Operation	Button
Increase Volume	Playing music	Press and hold the + button will increase the volume
Decrease Volume	Playing music	Press and hold the - button will decrease the volume
Pause	Playing music	Short press on the MF button will pause the music
Play	Pausing	Short press on the MF button will restart the music
Previous track	Playing music	A short press on the Previous track button will return you to the previous track
Next track	Playing music	A short press on the Next track button will take you to the next track

An indication tone will alert you when the volume is adjusted to minimum or maximum level.

Making a call with the Bluetooth Earbuds in Bluetooth mode

Basic operation

Function	Operation	Button
Answer a call	Incoming Call	Press the Phone button once to answer an incoming call
Reject a call	Incoming Call	Press and hold the Phone button 2 second
End a call	Incoming Call	After your phone conversation, short press the Phone Button.
Increase Volume	During a call	Long press the + button will increase the volume
Decrease Volume	During a call	Long press the - button will decrease the volume
Redial last number	Standby mode and connected to a device	Short press the Phone Button twice

Please Note

- Not all mobile phones support all the functions listed above. Please refer to your cell phone's user's manual for further information.
- Certain functions and indication tone maybe vary depending on your mobile phone.

Voice Assistant Operation

Voice Assistant is a built-in interactive feature that allows you to Start Conversation with Your Siri or Google Assistant, with a click of a button on your device.

This feature enables you to ask questions and seek assistance on a number of things from your Voice Assistant, even when you're several feet away from your phone. Below are some of the many examples listed below.

Note: Google Assistant is available on eligible Android 5.0 devices or later. Works on Lollipop, Marshmallow and Nougat Android Phones with Google Play Services, >1.5GB of memory and 720P or higher screen resolution. Please ensure Google Assistant App is downloaded and made as default Voice Assistant on your mobile device.

While the earbuds are paired using Bluetooth, press the Voice Assistant button to start conversation with your Siri or Google Assistant. An indication tone would be heard before you speak into the earbuds.

- Example 1: Press the Voice Assistant button and then speak into the earbuds, how' s the weather today?
Voice Assistant will reply with something like: mainly cloudy with a few showers.
- Example 2: Press the Voice Assistant button, and then speak into the earbuds, what's the time now?
Voice Assistant will reply with something like: it is 8pm now.
- More examples:
Set an alarm for 7am tomorrow.
Play some music.
What's in the news?

LED indicator

Please refer to the below tables for a list of the LED statuses whilst using the Bluetooth Earbuds.

Charging Indication

LED indicator	Status of the BT Earbuds
Red LED	Charging
Blue LED	Charging Completed

LED Indication

LED indicator	Status of the BT Earbuds
LED flashes red and blue alternately	Pairing mode

Care and Maintenance

Read the following recommendations before using the Bluetooth Earbuds. Following these you will be able to enjoy the product for many years.

- Do not expose the Bluetooth Earbuds to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- Do not use abrasive cleaning solvents to clean the device.
- Do not expose the device to extremely high or low temperature as this will

shorten the life of electronic devices, destroy the battery or distort certain plastic parts.

- Do not dispose of the device in a fire as it will result in an explosion.
- Do not expose the device to contact with sharp objects as this will cause scratches and damage.
- Do not let the device fall on the floor. The internal circuit might get damaged.
- Do not attempt to disassemble the device as it may get damaged if you are not professional.

Specifications

Bluetooth specification	Bluetooth 5.0
Operating distance	Up to 33 feet
Working time	Up to 8 hours (moderate volume)
Charging input voltage	DC 5V
Charging time	1-2 hours
Speaker Power	2 x 5mW
Built-In Battery	90mAh

(Note: Battery life & charging time may vary based on usage & types of devices used.)

FCC Instructions

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.

NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the product and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Limited Warranty

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

WARRANTY DURATION: All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

WARRANTY COVERAGE: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in USA and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

WARRANTY DISCLAIMERS: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract. Under no circumstances will Manufacturer's / Distributor's maximum liability exceed the retail value of the product.

WARRANTY PERFORMANCE: During the above 90-day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 90-day warranty period and an additional

one-month period. No charge will be applicable for such repair or replacement.

SERVICE AND REPAIR: If service is required for this product, you should first contact Midwest Trading Group Customer Service at info@mtradinggroup.com or by calling 1 (866) 815-4714, Monday to Friday 10am to 6pm EST.

NOTE: Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.