

FRONT

ijoy PREMIUM TRUE WIRELESS EARBUDS BUDZ



USER MANUAL

for use with Bluetooth enabled devices

ijoy

FCC ID: 2AOKX-SS-TW188B

Distributed by Quest USA Corp.
495 Flatbush Ave, Brooklyn NY 11225

© GOIJOY & IJOY are registered trademarks of Quest USA Corp. All other trademarks and trade names are property of their respective owners. Designed by GOIJOY & IJOY in New York. All rights reserved Quest USA Corp. One (1) year limited warranty. To activate your product warranty go to our website www.goijoy.com & register this product.

Made in China.

•YOUR IJOY PRODUCT

Thank you for purchasing and using the "IJOY BUDZ" wireless bluetooth® earbuds with case. This product can provide a high quality listening experience for your mobile phone, computer and other media devices. Before using this product, carefully read this manual to correctly operate this device. Please ask your local dealer if you have any questions.

Mini Bluetooth Earbuds X 2
Charging Case X 1
USB Charging Cable X 1
User Manual X 1

•SPEC

- Model: IJFTW01-DG/IJFTW05-DG/IJFTW06-DG
- Chipset: AB5616T3
- Bluetooth Version: V 5.0
- Earbuds battery: 250mah + 30mah*2
- Play time: 2-3 hours
- Bluetooth Distance: 10 M
- Driver Size: 10mm
- Charging port: Micro
- Charging time: 1.5 hours

•BATTERY CAUTION

The battery used in this device may present a risk of fire, explosion or chemical burn if used incorrectly. Never use or charge the battery if it appears to be leaking, discolored, deformed, or in any way abnormal. Never disassemble the unit or attempt to remove the battery as that could cause leakage of alkaline solution or other electrolytic substance. Never expose the battery to any liquid. Never expose the battery to excessive heat such as direct light or fire. Always keep the battery out of reach of infants and small children.


•BATTERY DISPOSAL

Please do not attempt to change the battery yourself. If the battery has died, you should follow the disposal instructions listed here. Never dispose of used batteries/electronics with ordinary solid wastes. Always dispose of used batteries/electronics in accordance with the prevailing community regulations that apply to the disposal of batteries/electronics. If there are no local regulations concerning battery/electronics disposal, please dispose of the device in a waste bin for electronic devices. Many electronics retailers now recycle batteries and other electronic components at no charge.

BACK

•PAIRING YOUR PRODUCT

1. Open the case and take the earbuds out. You should see blue and red lights flashing from the earbuds.
2. Enable Bluetooth® on the device you want to connect the earbuds to and connect your device to IJOY BUDZ.

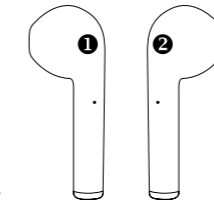


•DEVICE FUNCTIONS

CALL FUNCTION

- To answer or hang up the phone: tap either 1 or 2 once.
- To use intelligent voice assistant: Press and hold either 1 or 2 for 2 seconds.

ADJUSTING VOLUME AND CONTROLLING MUSIC PLAYBACK

- To play or pause music: tap either 1 or 2 once.
- To play the last song: tap 1 twice.
- To play the next song: tap 2 twice.
- To increase the volume: tap 2 three times.
- To decrease the volume: tap 1 three times.

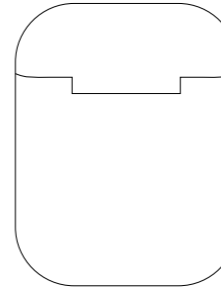

•OTHER IMPORTANT SAFETY INFORMATION

To avoid danger of choking, please keep cables away from babies and children. This product is not a toy. Do not treat this product as household waste. Dispose of this device properly by handing it over to local collection services for recycling of electronic equipment. By ensuring that this product is properly disposed of, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling. For more detailed information about this product, please contact your local household waste disposal service or the shop where you purchased this item.



•ONE (1) YEAR LIMITED WARRANTY

Our product is warranted for a One (1) year limited warranty from the date of purchase. The warranty is provided on all material defects and workmanship. Guarantee of 12 months does not apply to decrease in the accumulators effective capacity caused by its use or age. Effective capacity gradually decreases depending on the method of use of the accumulator. **WE RESERVE THE RIGHT TO CHANGE TECHNICAL SPECIFICATIONS.** For more information please visit, www.goijoy.com.

•INSTRUCTIONS

POWERING ON/OFF

- Take the earbuds out. Blue and red lights should be flashing from the earbuds. If this does not work, try charging the case with the earbuds inside. Connect the USB charger to the port on the bottom of the case and a power source.
- The earbuds will turn off automatically after being disconnected from the Bluetooth device for 5 minutes.

SKIPPING TRACKS

- To play the last song: tap 1 twice.
- To play the next song: tap 2 twice.

ANSWERING/ENDING PHONE CALLS

- To answer or hang up the phone: tap either 1 or 2 once.

CHARGING

- The earbuds will automatically charge when inside the case.
- Place the earbuds inside the case and close the case. Use the USB charging cable provided and connect it to the port on the bottom of the case and a power source to charge both the case and the earbuds.



IMPORTANT REMINDERS

This device can ONLY be charged by 5V adapters/USB ports only. Quick charging devices over 5V may cause heat and fire.

FCC STATEMENT :

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

PLEASE FOLD ON THE GREEN LINES AND PRINT DOUBLE SIDED. DO NOT PRINT GREEN LINES