




|   |  |                   |   |                      |   |                              |   |                             |   |         |   |                |   |             |   |                |   |                |   |
|---|--|-------------------|---|----------------------|---|------------------------------|---|-----------------------------|---|---------|---|----------------|---|-------------|---|----------------|---|----------------|---|
|   |  |                   |   |                      |   |                              |   |                             |   |         |   |                |   |             |   |                |   |                |   |
| <div>NEED HELP</div> <p>Please contact a SVINZ® customer support representative first regarding any additional information on product features, specifications or assistance with setup. Please contact us via EMAIL: <a href="mailto:support@viny.com">support@viny.com</a></p> <div>WARNING</div> <p>To reduce the risk of fire or electric shock, do not expose the appliance to rain or moisture.<br/>To prevent electric shock, do not use this plug with an extension cord receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.<br/>To prevent fire or shock hazard, do not install this product in a confined space such as a book case or similar unit.<br/>To reduce the risk of electric shock, do not remove cover or back. No user-serviceable parts inside, refer to qualified user personnel.</p> <div>CAUTION</div> <ol style="list-style-type: none"><li>1. Read these Instructions.</li><li>2. Keep these instructions.</li><li>3. Read all warnings.</li><li>4. Follow all instructions.</li><li>5. Do not use this product near water.</li><li>6. Clean only with a dry cloth.</li><li>7. Do not block any ventilation openings.</li><li>8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that product heat.</li><li>9. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.</li><li>10. Only use attachments/accessories specified by the manufacturer.</li><li>11. Unplug this apparatus during lightning storms or when unused for long periods of time.</li><li>12. Apparatus shall not be exposed to dripping or splashing, and that not objects filled with liquids, such as vases, shall be placed on the apparatus.</li><li>13. The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.</li><li>14. The product shall be connected to a mains socket outlet with a protective earthing connection.</li><li>15. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, curtains etc.</li><li>16. No naked flame sources such as lighted candles should be placed on the product.</li><li>17. Unwind and straighten the power cord before use.</li><li>18. Damage requiring service : unplug the power cord and refer servicing to qualified service professional under the following conditions :</li></ol> | <div>WARRANTY</div> <p>Thank you for choosing SVINZ. We guarantee your investment in our product is a solid one. Extensive thought, research, planning and design goes into every product we make. High quality components combined with precision manufacturing allows us to maintain the highest possible production standards. All items are guaranteed against defects in materials and craftsmanship.</p> <p>SVINZ products come with a complete one-year parts and labor warranty. This warranty is non-transferable and proof of purchase required when seeking warranty assistance. SVINZ has outstanding quality control. If something should go wrong with any of our products, we will repair it free of charge. If the product cannot be repaired, we will replace the product. If the product has been discontinued, we will replace the product with either the newest version of said product or current equivalent.</p> <p>This warranty shall not apply to:</p> <ol style="list-style-type: none"><li>1. Any defects caused or repairs required as a result of abusive operation, negligence, accident, improper installation or inappropriate use as outlined in the owner's manual.</li><li>2. Any SVINZ product tampered with, modified, adjusted or repaired by any party other than SVINZ.</li><li>3. Any cosmetic damage to the surface or exterior that has been defaced or caused by normal wear and tear.</li><li>4. Any damage caused by external or environmental conditions, including but not limited to transmission line/power line voltage or liquid spillage.</li><li>5. Any products used for rental or commercial purposes.</li><li>6. Any installation, setup and /or programming charges.</li></ol> <p>If any situation your purchase displays a manufacturer's defect during the warranty period and does not function correctly, please contact our service team via <a href="mailto:support@viny.com">support@viny.com</a></p>  |                   |   |                      |   |                              |   |                             |   |         |   |                |   |             |   |                |   |                |   |
| 2   | 11   |                   |   |                      |   |                              |   |                             |   |         |   |                |   |             |   |                |   |                |   |
| <div>PRODUCT INFORMATION</div>  <table><tbody><tr><td>1</td><td>Displays the hour</td></tr><tr><td>2</td><td>Displays the minutes</td></tr><tr><td>3</td><td>Displays the week of the day</td></tr><tr><td>4</td><td>Indicates time is set to PM</td></tr><tr><td>5</td><td>FM mode</td></tr><tr><td>6</td><td>Bluetooth mode</td></tr><tr><td>7</td><td>Aux-in mode</td></tr><tr><td>8</td><td>Alarm 1 is set</td></tr><tr><td>9</td><td>Alarm 2 is set</td></tr></tbody></table>   | 1  | Displays the hour | 2 | Displays the minutes | 3 | Displays the week of the day | 4 | Indicates time is set to PM | 5 | FM mode | 6 | Bluetooth mode | 7 | Aux-in mode | 8 | Alarm 1 is set | 9 | Alarm 2 is set | <div>INSTRUCTIONS GUIDE</div> <div>SETTING THE RADIO PRESETS</div> <ol style="list-style-type: none"><li>1. Press the <b>Q/M</b> button to switch to FM radio.</li><li>2. Press the <b>+/+</b> or the <b>+/+</b> buttons to select the desired radio station.</li><li>3. Press and hold <b>DATE/SET</b> button; "CH01" will blink in the display.</li><li>4. Use the <b>+/+</b> or the <b>+/+</b> buttons to toggle to the desired preset. "CH01-CH20" number.</li><li>5. Press the <b>DATE/SET</b> button again to set the preset.</li><li>6. Repeat steps 2 through 5 to set more presets.</li><li>7. To select a preset station, press the <b>+/+</b> or the <b>+/+</b> button until desired preset station appears on the LED panel.</li></ol> <p>The clock radio supports to 20 FM preset stations.<br/>Please ensure that the FM antenna is completely extended for best FM reception.</p> <div>LISTENING TO THE MUSIC</div> <ol style="list-style-type: none"><li>1. Press the <b>Q/M</b> button 2 times to switch to Bluetooth Mode.</li><li>2. Activating your phone's Bluetooth.</li><li>3. Go to your phone's Bluetooth settings, scan for new Bluetooth Devices.</li><li>4. When the device name "SINCOO7" appears, click the device name to pair.</li><li>5. After successfully pairing, the speaker will emit a prompting sound.</li><li>6. Use the <b>AL2/V-</b> button and/or <b>AL2/V+</b> button to adjust the speaker volume.</li><li>7. Use the <b>+/+</b> button to pause or play the music (when pause time is more than 10 minutes, the speaker will disconnect with the phone automatically).</li><li>8. Press and hold the <b>Q/M</b> button to quit Bluetooth Mode.</li></ol> <div>AUX-IN MODE</div> <ol style="list-style-type: none"><li>1. Press the <b>Q/M</b> button 3 times to switch to AUX-IN Mode.</li><li>2. Connect your device and the speaker by 3.5mm AUX cable (not included).</li><li>3. Use the <b>AL2/V-</b> button and/or <b>AL2/V+</b> button to adjust the speaker volume.</li><li>4. Use the <b>+/+</b> button to pause or play the audio source.</li><li>5. Press and hold the <b>Q/M</b> button to quit AUX-IN Mode.</li></ol> <div>NIGHT LIGHT</div> <ol style="list-style-type: none"><li>1. Press the <b>SNOOZE/LIGHTING</b> button to turn on the night light.</li><li>2. Press the <b>SNOOZE/LIGHTING</b> button to toggle between White Low-White High-Color Changing - Desired Color-Turn OFF.</li></ol> |
| 1   | Displays the hour  |                   |   |                      |   |                              |   |                             |   |         |   |                |   |             |   |                |   |                |   |
| 2   | Displays the minutes   |                   |   |                      |   |                              |   |                             |   |         |   |                |   |             |   |                |   |                |   |
| 3   | Displays the week of the day   |                   |   |                      |   |                              |   |                             |   |         |   |                |   |             |   |                |   |                |   |
| 4   | Indicates time is set to PM  |                   |   |                      |   |                              |   |                             |   |         |   |                |   |             |   |                |   |                |   |
| 5   | FM mode  |                   |   |                      |   |                              |   |                             |   |         |   |                |   |             |   |                |   |                |   |
| 6   | Bluetooth mode   |                   |   |                      |   |                              |   |                             |   |         |   |                |   |             |   |                |   |                |   |
| 7   | Aux-in mode  |                   |   |                      |   |                              |   |                             |   |         |   |                |   |             |   |                |   |                |   |
| 8   | Alarm 1 is set   |                   |   |                      |   |                              |   |                             |   |         |   |                |   |             |   |                |   |                |   |
| 9   | Alarm 2 is set   |                   |   |                      |   |                              |   |                             |   |         |   |                |   |             |   |                |   |                |   |
| 4   | 9  |                   |   |                      |   |                              |   |                             |   |         |   |                |   |             |   |                |   |                |   |
| <div>INSTRUCTIONS GUIDE</div> <div>CONNECTING POWER</div> <p>Pull out the insulated piece in the battery compartment then plug the connector into the back of the unit signed DC IN and plug the AC power cord to a household outlet.</p> <div>BATTERY BACKUP</div> <p>This Alarm Clock Radio is equipped with a battery backup feature. This feature will restore your alarm clock setting in the event of a power outage. The 3V CR2025 Flat Lithium Battery is pre-installed at the factory. However, should you need to replace the battery, please read the following instructions.</p> <ol style="list-style-type: none"><li>1. Using a small Phillips Head screwdriver, remove the screw from the battery panel on the back of the unit.</li><li>2. Pull out the battery compartment.</li><li>3. Remove/properly dispose of depleted battery and replace with a new CR2025 Flat Lithium battery.</li><li>4. Please be sure to follow the correct polarity when installing the battery. A reversed battery may cause damage to the alarm clock.</li><li>5. Close the battery compartment and put screw into place to secure battery compartment.</li><li>6. When not using the unit for a prolonged period of time, please remove the battery to avoid possible damage caused by leaking battery.</li></ol> <div>SETTING THE DATE &amp; TIME</div> <p>To set the Date/Time, press and hold the <b>DATE/SET</b> button 2 seconds and Hour numbers will begin to flash, press the <b>+/+</b> or the <b>+/+</b> button to increase or decrease numbers. Press the <b>DATE/SET</b> button to toggle the settings cycle in the following order: Hour &gt; Minute &gt; Year &gt; Month &gt; Day</p> <ol style="list-style-type: none"><li>1. Press the <b>+/+</b> button to increase numbers when the numbers begin to flash.</li><li>2. Press the <b>+/+</b> button to decrease numbers when the numbers begin to flash.</li><li>3. Press the <b>DATE/SET</b> button to confirm your selection.</li></ol> <p>* PM dot appears to the left of time indicating time is set to PM (For US/CA version).<br/>* Press the <b>+/+</b> or the <b>+/+</b> buttons once, decrease/increase one number at a time</p>  | <div>INSTRUCTIONS G UIDE</div> <div>SETTING ALARM 1</div> <p>To set ALARM 1, press and hold the <b>AL1/V-</b> button 2 seconds and BUZZ or FM will begin to flash. Press the <b>AL1/V-</b> button to toggle the settings cycle in the following order:</p> <p>AL1 Wake Options &gt; AL1 Hour &gt; AL1 Minute &gt; AL1 Volume &gt; AL1 Alarm Modes</p> <ol style="list-style-type: none"><li>1. Press the <b>+/+</b> or the <b>+/+</b> buttons to toggle between the wake options FM and BUZZ, press <b>AL1/V-</b> button to confirm your selection.</li><li>2. Press the <b>+/+</b> or the <b>+/+</b> buttons to decrease/increase the HOUR, press <b>AL1/V-</b> button to confirm HOUR. The MINUTES will begin to flash.</li><li>3. Press the <b>+/+</b> or the <b>+/+</b> buttons to decrease/increase the MINUTES, press <b>AL1/V-</b> button to confirm MINUTES. The VOLUME will begin to flash.</li><li>4. Press the <b>+/+</b> or the <b>+/+</b> buttons to decrease/increase the VOLUME(0-30), press <b>AL1/V-</b> button to confirm VOLUME. The ALARM MODES will begin to flash.</li><li>5. Press the <b>+/+</b> or the <b>+/+</b> buttons to toggle between the ALARM MODES 1-7 alarm, 1-5 alarm and 6-7 alarm. Press <b>AL1/V-</b> button to confirm your selection, and complete the ALARM 1 set up.</li></ol> <p>ALARM MODES allows you to set more than one alarm in a week. i.e. ALARM 1 set to wake you Monday-Friday and ALARM 2 set to wake you on weekends. The ALARM MODES settings are as following:</p> <p>1-7: Whole week      1-5: Monday to Friday      6-7: Saturday &amp; Sunday</p> <div>SETTING ALARM 2</div> <p>To set ALARM 2, press and hold the <b>AL2/V-</b> button 2 seconds and BUZZ or FM will begin to flash. Press the <b>AL2/V-</b> button to toggle the settings cycle in the following order:</p> <p>AL2 Wake Options &gt; AL2 Hour &gt; AL2 Minute &gt; AL2 Volume &gt; AL2 Alarm Modes</p> <ol style="list-style-type: none"><li>1. Press the <b>+/+</b> or the <b>+/+</b> buttons to toggle between the wake options FM and BUZZ, press <b>AL2/V-</b> button to confirm your selection.</li><li>2. Press the <b>+/+</b> or the <b>+/+</b> buttons to decrease/increase the HOUR, press <b>AL2/V-</b> button to confirm HOUR. The MINUTES will begin to flash.</li><li>3. Press the <b>+/+</b> or the <b>+/+</b> buttons to decrease/increase the MINUTES, press <b>AL2/V-</b> button to confirm MINUTES. The VOLUME will begin to flash.</li><li>4. Press the <b>+/+</b> or the <b>+/+</b> buttons to decrease/increase the VOLUME, press <b>AL2/V-</b> button to confirm VOLUME. The ALARM MODES will begin to flash.</li><li>5. Press the <b>+/+</b> or the <b>+/+</b> buttons to toggle between the ALARM MODES: 1-7 Alarm, 1-5 Alarm and 6-7 Alarm. Press <b>AL2/V-</b> button to confirm your selection, and complete the ALARM 2 set up.</li></ol> <p>To deactivate ALARM 1 and /or ALARM 2, press the <b>AL1/V-</b> button and/or <b>AL2/V-</b> button until the LED alarm sign no longer visible on the front LED panel.</p> |                   |   |                      |   |                              |   |                             |   |         |   |                |   |             |   |                |   |                |   |
| 6   | 7  |                   |   |                      |   |                              |   |                             |   |         |   |                |   |             |   |                |   |                |   |