

Enjoy your favorite media with clear visuals and portable convenience, whether it's video games, movies, or sports. The GOTheater is a compact, screen mirroring enabled LED projector that wirelessly connects to your mobile devices (smartphones, laptops, tablets, etc.) via WiFi, so you can enjoy a distinctive home theater experience wherever you want. Set the perfect scene in motion with the GOTheater!

Projection size up to 180".

SETTING UP AN iOS/MAC SCREEN MIRROR


- Bluetooth compatibility & multiple input ports.

HOW TO CONNECT THE GOTHEATER TO WIFI

On the projector's main menu, click Settings, or press the MENU button on the remote. Click --> ? --> Network Information --> Scan. Choose the home network and Wi-Fi name you wish to connect to, then input the network's password from the on-screen/soft keyboard Hit "Enter" on the keyboard to save the password. The GOTheater should then connect to the Wi-Fi network. Once connected, the name of the Wi-Fi network will be displayed on the



top-right corner of the screen.

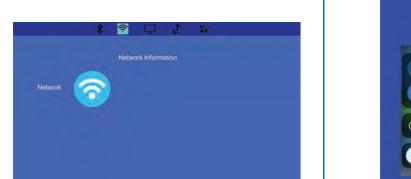

PLEASE READ THIS USER GUIDE CAREFULLY BEFORE USING OR SETTING UP THE GOTHEATER, AND KEEP IT HANDY FOR FUTURE REFERENCE.

• Mirrors your iPhone/Android smartphone screen via WiFi. Includes 120" screen for fun movie nights.

Built-in 3W speaker.

NOTE: Make sure the projector and your device are both connected to the same network. Click on the iOS Cast icon on the GOTheater's home page:

• Follow the instructions in the image below to mirror your iOS device's screen.



WELL WITH TEXT FILES.

WHAT'S IN THE BOX?

GOTheater LED Cinema Projector

120" Projection Screen

Wireless Remote

AC Cable

RCA Cable

User Guide



SETTING UP AN ANDROID SCREEN MIRROR

IMPORTANT NOTE: THE GOTHEATER'S MIRRORING FUNCTION WILL NOT WORK WITH DRM-ENABLED

DISTRIBUTORS. SOME OF THE SETTINGS AND VISUALS ON THE PROJECTOR AND PHONES MAY LOOK

PROGRAMS SUCH AS NETFLIX, AMAZON PRIME VIDEO, AND OTHER SECURED VIDEO CONTENT

DIFFERENT THAN ON THIS GUIDE DUE TO SYSTEM CHANGES AND UPDATES. THE GOTHEATER PROJECTOR IS DESIGNED FOR MULTIMEDIA AND ENTERTAINMENT PURPOSES, AND MAY NOT WORK

NOTE: Make sure the projector and your device are both connected to the same network. Click on the Android Miracast icon on the GOTheater's screen:

SPECIFICATIONS

Input: AC 90-260V

Projection Size: 24-180"

Input Ports: HDMI/VGA/USB/MicroSD/AV

Follow the instructions in the image to mirror your Android device's screen. PLEASE NOTE: Different brands of droid phones have different names or Miracast. These include Smart /iew, Multi-screen, etc. You can also

download the app "Miracast Shortcut" rom the Google Play Store, which is a quick launcher for the Miracast unctionality.

USING THE GOTHEATER BLUETOOTH FUNCTION

Go to the Settings page and Select Bluetooth.

Transmit mode allows you to use an external speaker to play the projector's audio. • Make sure your speaker is Bluetooth compatible, and that its Bluetooth function is on

and ready to pair • Click on Transmit Mode and turn Bluetooth ON. Click "Search" and select your device from the list. The projector will pair to your device and will be ready to use.

Receive Mode allows you use the projector as a Bluetooth speaker for any compatible device.

- Turn your Bluetooth speaker ON and ensure it is in Pairing Mode.
- Click on Receive Mode on the projector. Search and select "Tzumi Theatre" in your Bluetooth settings. Your Bluetooth speaker's name will appear on the screen and will be ready to use.

CONNECT TO AN EXTERNAL SPEAKER

• To connect the projector to an external speaker via the Line-Out port, plug one end of a 3.5mm AUX cable into the Line-Out port on the projector, and the other end into your speaker.

Display Native Resolution: 1280 x 720p • Place the GOTheater projector on a flat, stable surface, making sure there is at least 6 in. of free space on each side for ventilation purposes. Max Supported Resolution: 1920 x 1080p

LET'S GET STARTED

 
- Plug one end of the AC power cable into the side of the GOTheater, and the other end into an AC 3 MicroSD Card Slot wall outlet. Once the projector is plugged in, its LED indicator light will glow red. • Press the POWER Button on either the GOTheater or the remote to turn the projector on.
- The projector's LED indicator light will glow green. A loading image will display on the screen while the GOTheater warms up. It won't respond to any commands while it is warming up.
- To adjust the image/focus, turn the knob just above the lens while observing the on-screen pixels near the center of the screen. Optimal focus occurs when the on-screen pixels are clearly visible. Depending on how large your (projected) screen is, the focus near the edges of the screen
- may be less sharp than at the center of the screen. Projecting the GOTheater's beam at an angle can result in a distorted, trapezoidal image. Turn the Keystone adjustment knob located behind the Focus knob to adjust the angle of the projection and restore the distorted screen to a rectangular or square shape.

- 1 3.5mm Line-Out Port 2 AV/RCA Port

 - 5 USB Port

to bring up the Settings menu.

factory reset, and more.



1 Up/Last

2 Down/Next

• Press the Menu button on the remote, or click on the Settings icon on the GOTheater's Home page

• The Settings menu will let you change your Wi-Fi, Bluetooth, Picture, Sound, and Projection options

You can also adjust the aspect ratio and OSD language, check for a software upgrade, perform a

OSD Language English

4 Right/Fast Forward



Focus Knob 1

Keystone Knob 1

LET'S TAKE A LOOK AT THE REMOTE

HOW TO SET UP THE PROJECTION SCREEN


• Make sure the wall is clean and free of dirt, dust, or other debris.

• Stick each of the included hooks onto a piece of adhesive tape.

Mark the position of each grommet on the wall.

PROJECTION DISTANCE & SIZE

*NOTE: Insert two AAA batteries into the battery compartment on the back of the remote before using. (AV, HDMI, VGA, Media, Bluetooth)

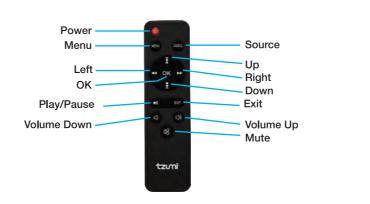

• Remove the projection screen from the plastic bag, and lay it flat up against your wall of choice.

• Place the projection screen flat on the wall, and hang the grommets on the hooks.

• Use the included rope to hang the projection screen from a space with no walls.

• Stick the pieces of adhesive tape with the hooks onto the positions marked with grommets on the wall

GOTheater HOME SCREEN

IMPORTANT SAFEGUARDS

1. Only use the projector for its intended use.

3. Do not cover the projector's ventilation holes.

1-855-GO-TZUMI or support@tzumi.com.

2. Do not look directly into the lens while the projector is on.

6. Unplug the projector from the outlet when it is not in use.

it yourself. Contact tzumi Technical Support for assistance.

4. This projector is not waterproof. Do not use or place it near water.

5. The projector should only be used and stored in a dry, clean place.


If you have any questions about using your GOTheater, we are here to help.

7. If the projector is malfunctioning or acting abnormally in any way, do not attempt to repair

8. Do not disassemble or modify the projector in any way to avoid the risk of electric shock.

Call or email us, and an experienced customer support representative will be happy to assist you:

When the GOTheater powers on, the main screen will display as shown below. You can use the arrow buttons on either the remote or the GOTheater itself to make the appropriate selection:

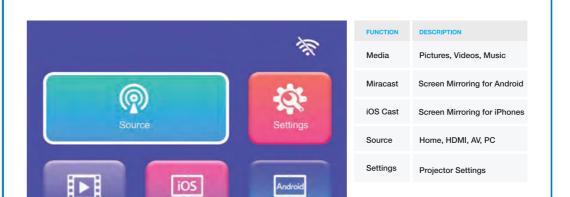


ISING HDMI DEVICES

Use an HDMI cable to connect any compatible HDMI device to the projector.




 Plug one end of a VGA cable into a laptop or desktop PC, and the other end into the VGA port on the projector.




USING AN AV/RCA CONNECTION


(yellow/red/white) inputs. You should use the included AV/RCA cable when connecting

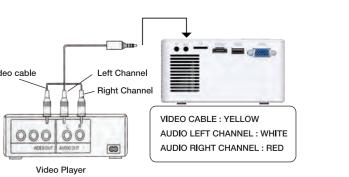

the GOTheater to compatible AV devices.

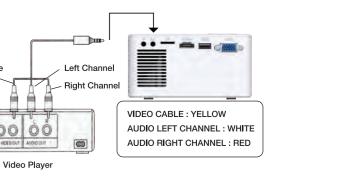

Follow the diagram below to connect the GOTheater to a device that has RCA

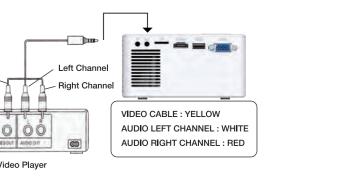

Insert a USB or MicroSD card with media into the USB socket or TF card slot located on the side of the GOTheater. When you select the Media icon, you'll see the GOTheater's screen as shown below. Choose the type of media you want to play.

USING A USB/MICROSD CARD TO PLAY MEDIA

The USB media port supports the following formats:



Videos MPEG-2, MPEG-4, Div3/4/5/6, H. RM.RMVB, Sorenson Spark, FLV, MOV, MKV, MPG, Music MP1, MP2, MP3, WMA, M4A, AAC, WAV Photos JPEG, BMP, PNG, JPE, TIF, GIF

This device complies with Part 15 of the FCC Rules. Operation is subject to the following

(1) This device may not cause harmful interference, and

Consult the dealer or an experienced radio/TV technician for help.

(2) This device must accept any interference received, including interference that may cause undesired operation.

could void the user's authority to operate the equipment.

protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the

following measures: Reorient or relocate the receiving antenna.

 Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

FCC Radiation Exposure Statement

This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction

with any other antenna or transmitter.

Warning: Changes or modifications not expressly approved by the party responsible for compliance

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable

equipment off and on, the user is encouraged to try to correct the interference by one or more of the All Rights Reserved. Made in China. All other trademarks and trade names are the property of their respective owners. All pictures shown are for illustration purposes only. Actual product may vary due to product







enhancement. Subject to change without prior notice.



GOTheater LED Home Cinema Projector. Distributed by tzumi Inc. NY, NY 10016. @Copyright 2024 tzumi Inc.