






SPECIFICATIONS

Name	Plush Pet Toy
Model	Wagging Squirrel
Dimension	350 x 80 x 150mm
Weight	160 g
Battery	Litium-Ion / 500mAh / 5V
Content	Lobster Toy, Micro-USB cable, 2x Catnip, Manual

CHARGING

- The toy is fully charged in one hour
- One charge provides 150 dancing cycles
-  Charging  Fully Charged

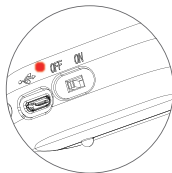

CATNIP

- Only use catnip that is sealed into a porous bag e.g. teabag (2 bags included)
- Insert catnip bag into the pouch provided and close with the velcro.

 **IMPORTANT:** Do not use loose catnip as this can damage the mechanism.



8

CAT TREATS




- Pack dry cat treats into the front mouth opening of the Squirrel (treats not included).
- These either fall out when the toy is moved or the cat pops the treats out of the mouth opening of the toy (depending on how far the treats are pushed into the mouth opening)



HOW TO PLAY / USE

- Open the Squirrel on the belly by pulling apart the Velcro.
- Fully charge the dancing Squirrel with the supplied Micro-USB charging cable until the LED turns green.
- Insert the catnip into the pouch on the side, move the switch to the ON position and close the Squirrel.
- The motion sensor will activate when moved, cycling through 3 types of realistic movements sequentially.
- No need to turn off the toy unless you don't want it to move on touch. The toy goes into sleep mode once it isn't being touched.

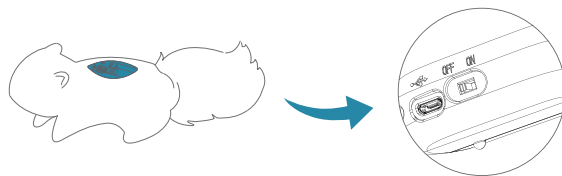

9