FCC ID: 2AOPF-433-3

Model: 433-3

Product Manual

RF Remote Control used for Christmas trees, wreaths or garlands

4	D	. 1	1		
1	Remove	the	hattery	111511	lation
т.	1 COLLIO V C	LIIC	outler,	IIID W.	iuuoii.

- 2. Red OFF key: close
- 3. Green ON key: open
- 4. FN key: auto switch mode
- 5. 5 English descriptions represent 5 modes
- (1).Demo (Loop all functions)
- (2). Twinkling (5: 1. Bubble flashing)
- (3). WW Steady (The white light is always on)
- (4).WW Flashing (White light flashing)
- (5). WW Slow Fade (White light breathing flickers)
- 6. 6H key: Timed Christmas lights on for 6 hours, off for 18 hours, infinite cycle for 24 hours
- 7. 8H key: Timed Christmas lights on for 8 hours, off for 16 hours, infinite cycle for 24 hours

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.
- *RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Product: RF Remote Control used for Christmas trees, wreaths or garlands

Model No: 433 -3