

Product Manual

RF Remote Control used for Christmas trees

1. Remove the battery insulation.
2. Red OFF key: close
3. FN key: auto switch mode
4. Green ON key: open
5. 9 English descriptions represent 9 modes



- (1).Light Show (Loop all functions)
- (2).Twinkling (5: 1. Bubble flashing)
- (3).WW Steady (The white light is always on)
- (4).WW Flash (White light flashing)
- (5).WW Slow Fade (White light breathing flickers)
- (6). MLT WW Steady (The color light is always on)
- (7).Slow Color Variable
- (8).Slow Fade Multi
- (9).Fast Flip (Fast Flip Warm White to Multi)
- (10).Slow Flip (Slow Flip Warm White to Multi)
- (11).Slow Fade (Slow Fade Warm White to Multi)

6. 2H key: Timed Christmas lights on for 2 hours, off for 22 hours, infinite cycle for 24 hours
7. 4H key: Timed Christmas lights on for 4 hours, off for 20 hours, infinite cycle for 24 hours
8. 6H key: Timed Christmas lights on for 6 hours, off for 18 hours, infinite cycle for 24 hours
9. 8H key: Timed Christmas lights on for 8 hours, off for 16 hours, infinite cycle for 24 hours

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.