
#### **X9S User Instruction**

### 一、X9S Features

- 1. After connected "Wi-Fi", Interacting a speaker with voice
- 2. The smart speaker included Bluetooth functions
- 3. The speaker can be shared together by some users, two or more speakers can be controlled anytime, Free connected.
- 4. The speaker has exclusive APP to play the cloud music, Such as daily music, Shrimp music.
  - 5. Log in your amazon account, The speaker can be control by networking appliance to choose the songs, news, shopping
  - 6. The speaker can be wireless speakerphone function.

#### 二、Button instructions overview

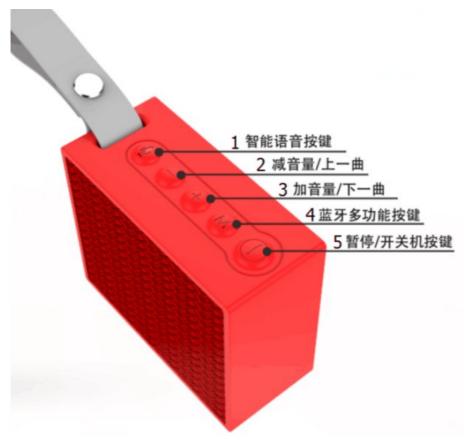

- 1. Smart voice button: On "Wi-Fi" mode, Short press to enter the voice prompt, On "Bluetooth" mode, Short press to answer/end a call, Long press for 2 seconds to reject a call.
- 2. Volume reduce/previous song: Short press to Volume down, On "Bluetooth" mode, Long press to previous song
- 3. Volume increase/next song: Short press to volume up, On "Bluetooth" mode, Long press

to next song

4. Multi-function button: Short press to switch "Bluetooth" and "Wi-Fi".

On "Bluetooth" mode, Long press for 2 seconds, The current Bluetooth device will be disconnected.

On "Wi-Fi" mode, Long press for 2 seconds to connect network, Long press about 10 seconds, the wifi will be restore factory setting.

- 5 Pause/On/Off button: Long press for 3 seconds to turn on/off, On "Bluetooth" "Wi-Fi" mode, Short press to play/pause.
- 三、Interfaces and Indicator light overview



- 1. Working Indicator light: "WIFI" mode for white light, "Bluetooth mode" for blue light
- 2. Charge Indicator light: Red light
- 3. Line port: External sound source
- 4、USB port: Change

## 四、Operation instruction:

#### On/Off:

Long press for 3 seconds, White LED indicator blinking with "beep".

On power on status, Long press for 3 seconds, Working indicator turn off with "beep".

### Charge

The speaker charged by micro USB cable, the red indicator blinking, Indicator will turn off when it fully charge.

Charge voltage: 5.0V ±0.2

Charge adapter output current: 1A.

#### Bluetooth mode.

- 1. Short press "M" button on standby mode, blue indicator blinking, Switching to Bluetooth mode
  - 2. Turn on your phone's Bluetooth mode to pair.
- 3. Your phone's Bluetooth can be re-connected for previous paired speaker, blue indicator is on.
  - 4. On Bluetooth mode, Short press "ON" button to switch play or pause.

- 5. Adjust volume: Short press "+" button to increase volume, Short press "-" button to reduce volume
- 6. Change songs: Long press "+" button for 2 seconds to previous song, Long press "-" button for 2 seconds to reduce volume.
- 7. Long press "M" button for 2 seconds to cancel connected Bluetooth device, Blue indicator blinking
  - 8. Turn on other Bluetooth device to pair.

## LINE IN:

- 1. On power on mode, Connect 3.5mm Audio Cable and the speaker, Switch to Line in mode automatically, the white and blue indicator blinking together
  - 2. Short press "+""-" button to adjust the volume
  - 3. Short press "on/off" button to play or pause

## 五、Wi-Fi Mode

- 1. Turn on your cellphone WIFI, connected successfully with the wireless router, remember the password
  - 2, APP download address

iOS: https://dln.bz/l/eson/1.0.4725

Eason: https://dln.bz/a/eson/2.8.0.170825

Scan & install

IOS system install APP





# Android system install APP






扫一扫安装

Install the Android system app successful




## Turn on "App" installation steps

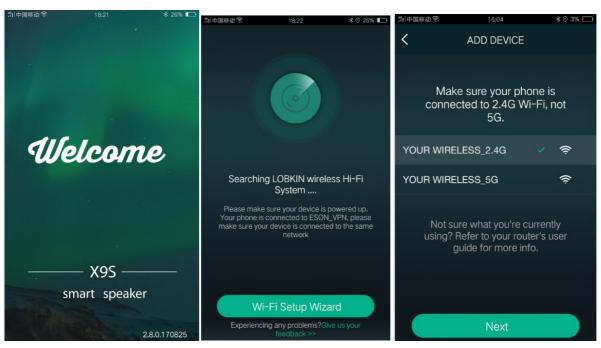

Picture 1 Picture 2 Picture 3


Screen No.2 Clicking the "WI-FI setup wizard" Screen No.3 Clinking"NEXT"

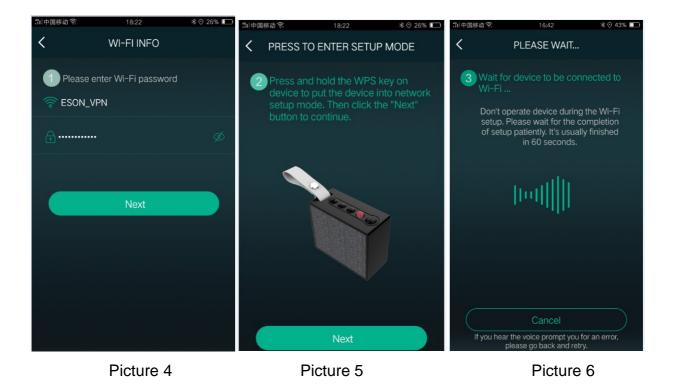

Picture 4: The APP Wi-Fi name is as same as your cellphone, please enter Wi-Fi password, Clinking the "Next" button

Picture 5: Long press the speaker "M" button for 3 seconds till you can hear the voice prompts, Then clinking the "Next" .


Picture 6: The speaker will connect successful with voice prompts after about 1 minute

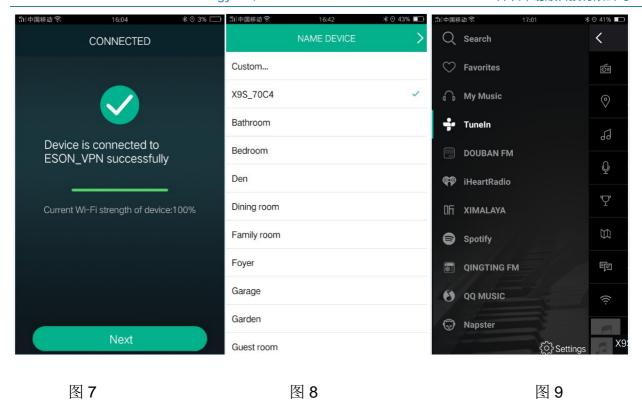

Picture 7: After device is connected to Wi-Fi successful, then clinking "Next" to switch picture 8

Picture 8: The APP list is used to assign a smart speaker placement.

Picture 9: Entering the page, choosing other voice platform freely.

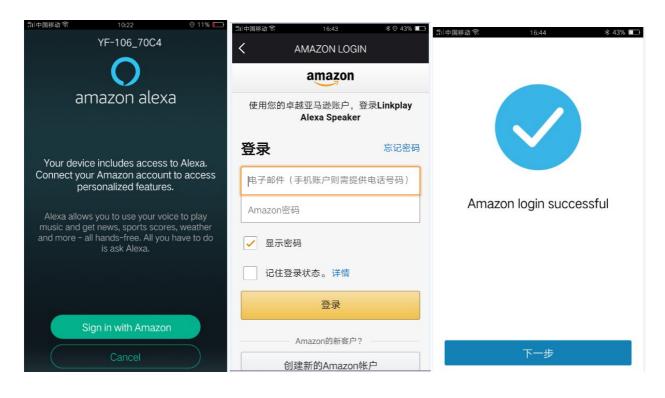

Picture 10 Picture 11 Picture 12

Picture 10: Clinking "Sign in with Amazon" to log in your amazon account to switch picture 11 page

Picture 11: Entering the Alexa account and password to access to Alexa service.

Picture 12: Sign in amazon successful.

#### 六、Amazon use instruction

1. Log in Amazon successful, Interacting with a voice speaker.

Short press "Microphone" button with voice prompt, then white LED indicator is on ,Taking with Alexa freedom, The white LED indicator blinking fast, The speaker will ready to answer your questions.

2. The speaker can be control with voice when it connected the smart home appliances

## 七、Product specifications

Wireless standard: 802.11b/g/n,1T1R Support: IOS/Android/Windows7/8

Bluetooth version: 4.2

Battery capacity: 3.7V 1000mAH

Speaker Driver: 4 Ω5W

Charge time: 2h

Network work time: about 4h

x9 smart speaker streams music to your sound system. Enjoy listening to your music from cloud music service providers and online radio without connecting your phone to speakers. Just connect x9s speaker and use the ESON player app to play music wirelessly over your WiFi Network.

#### X9S Features

- 1. After connected "Wi-Fi", Interacting a speaker with voice
- 2. The smart speaker included Bluetooth functions
- 3. The speaker can be shared together by some users, two or more speakers can be controlled anytime, Free connected.
- 4. The speaker has exclusive APP to play the cloud music.
- 5. Log in your amazon account, The speaker can be control by networking appliance to choose the songs, news, shopping

6. The speaker can be wireless speakerphone function.

Get a x9 smart speaker at www.esontech.com

## Stay Tuned

We will be updating the app regularly to introduce new music service providers and features. Sign up your email address to get updates at <a href="https://www.esontech.com">www.esontech.com</a>.

### FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.