

Wireless Bluetooth Speaker

 
Model Number: 53351



Instruction Manual

What's In The Box

Wireless Bluetooth Speaker



Micro USB Cable For Charging



3.5mm Aux Cable



Specifications

Output Power: 3W*2 Frequency Response: 100HZ-180KHZ Input Power: DC 5V/ 500mA Battery Capacity:2000mAh Estimate Battery Charge Time:4h Estimated Play Time On Full Charge:16h

Pairing With A Bluetooth Device

Ensure that the mobile device you are trying to pair to supports Bluetooth. Specific pairing steps may vary on the device you are trying to pair with. Please refer to your device's user manual for detailed information.

- 1. Press the power button for 3 seconds on the speaker.You will receive an audio prompt from the speaker.The Speaker Status LED will turn blue and flash quickly.
- 2. On your mobile device's Bluetooth menu search for"Staples BT Speaker 53351" and select it.
- When pairing is complete you will receive another voice prompt from the speaker. The Speaker Status LED will turn steady blue.
- 4. To power off the speaker press and hold the power button for 2 seconds.The Speaker Status LED will turn off.
- The speaker will now automatically connect to your mobile device when they are powered on and in range. The Speaker Status LED will turn steady blue after be paired and flash slowly when music playing.
- When battery is low, a "Low Battery" voice prompt will remind you to charge the battery.

Playing Music

While the unit is connected and paired to your device,navigate to the music app and select a song to begin playback. You can use either the playback controls on the app, or the controls on the speaker. Long press the previous/next buttons on the speaker to increase/decrease volume. When the speaker reaches max volume, the speaker will emit an audible beep tone. You can also use the play/pause button to answer and hang up phone calls.

AUX Mode

Insert a 3.5mm audio cable into the speaker's AUX port and the speaker will enter AUX mode to play back audio from an external wired source. You can also use the "M" button to switch the speaker from AUX to Bluetooth mode. When in Bluetooth mode, pressing the "M" button will repair the device. Press the previous/ next buttons to increase/decrease volume.

Charging

Use the included micro-USB cable to charge the device through a standard USB charger. The Charging Indicator LED will turn red when charging and turn off when charging is complete.

Note: If the speaker does not detect a connection to a device, the speaker will automatically shut down after 10 minutes to save power.

FCC Statement

Caution: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Aultes. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment of fland on.

the user is encouraged to try to correct the interference by one or more of the following measures: -Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and the receiver.

-Connect the equipment into an outlet on a circuit

different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1)This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

Product Support

Contact us:

1-800-425-0049

SBProdsupport@Staples.com

www.productsupport.staples.com