 
Wireless Bluetooth Speaker Model Number: 55943

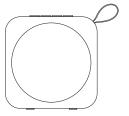

 
Instruction Manual

Specifications

- Working distance: 10M
- SNR: ≥85db
- Battery:3.7V 600mAh
- ■Normal playing time: 2H 70% Vol
- •Speaker: Ø 52 mm
- Power: Max 3W
- Frequency response:
 - 120 Hz-20KHz
- Unit size: 95 × 46 × 96mm
- Unit weight: 255g
- Charging: 5V/500mA

What's In The Box

Wireless Bluetooth Speaker

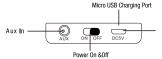

Micro USB Cable For Charging



3.5mm Aux Cable



Pairing With A Bluetooth Device



- : When play music (LINE IN/BT), press short to switch FM/BT. (switch to line in, if via AUX cable to audio device).
- : When play music, press short for last song, press long to turn down the volume
- 台: When play music, press short for next song, press long to turn up the volume.
- : When play music (LINE IN/BT), press short for "play/pause". under BT mode with mobile paired, press short to answer a call, press again to hand up. In FM mode, press short to search station automatically, press again to stop searching). Note:Under FM mode, put in the AUX cable to get better FM radio station.

Playing Music

While the unit is connected and paired to your device,navigate to the music app and select a song to begin playback. You can use either the playback controls on the app, or the controls on the speaker. Long press the previous/next buttons on the speaker to increase/decrease volume. When the speaker reaches max volume, the speaker will emit an audible beep tone. You can also use the play/pause button to answer and hang up phone calls.

AUX Mode

Insert a 3.5mm audio cable into the speaker's AUX port and the speaker will enter AUX mode to play back audio from an external wired source. You can also use the "M" button to switch the speaker from AUX to Bluetooth mode. When in Bluetooth mode, pressing the "M" button will repair the device.

<u>Charging</u>

Use the included micro-USB cable to charge the device through a standard USB charger. The LED will turn red when charging and turn off when charging is complete.

Note: If the speaker does not detect a connection to a device, the speaker will automatically shut down after 30 minutes to save power. To extend the service time, please turn the power switch to OFF position

FCC Statement

Caution: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment,

NOTE: This equipment has been tested and found to comply with the limits for Class B digital device. pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no quarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and the receiver.
- -Connect the equipment into an outlet on a circuit
- different from that to which the receiver is connected
- -Consult the dealer or an experienced radio/TV technician for help
- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1)This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired
- operation.

Product Support

Contact us:

1-800-425-0049

SBProdsupport@Staples.com

www.productsupport.staples.com