

Safety Precautions Place your phone on the middle of wireless Warranty Policy At iClever, we pride ourselves on our high-quality, damage-free products. All products are covered by an **18 month warranty** upon purchase. Do not place metal on the charging plate pad correctly to get charged Keep the charger dry. If it comes into contact with any moisture, immediately wipe it off with a dry cloth. Note Stop using the charger immediately if it is damaged. Warranty coverage starts when package is delivered. Do not use the charger for anything other than charging small electronic devices. Do not use this charger to charge incompatible devices. This may cause fire, explosion, and personal injury. The warranty policy covers mechanical and electrical failure caused by normal use. Any problem occurs within warranty period, please contact us at iclever@support.com. Our customer service staff is always happy to assist you within 24 hours. Attention Do not charge a device with a cracked or otherwise damaged battery. Don't expose to liquids or fire Do not use or store the device in extremely hot or extremely cold places. 🖤 🛛 Avoid dropping Statement Avoid extreme temperatures If you purchase the product from a third-party retailer, contact the retailer for refunds or replacements. Don't disassemble (\mathbf{I}_c) Do not disassemble or repair the device by yourself. Doing so will void the warranty. Under the fullest extent of the proper law and under any circumstance, our company and other permitted retailers bear no responsibility for any data and income loss caused by any special, incidental reason. Keep product out of reach of children Don't use if any · Do not place any heavy objects on the charging plate. liquid leaks Do not drop, knock, or shake the device, because rough handling can damage the inner circuit board and structure. Troubleshooting Pictures involved in user manual are schematic diagrams. iClever reserves the right to amend or retrieve this user manual at any time without prior notice. If your device does not charge, take the following steps: Unapproved modifications will damage the device and violate radio equipment regulations. Turning the second proof therefore, the second proof therefore, the second proof therefore the second proof therefore the second proof the sec Make sure the charging plate is free of foreign objects and Proper Disposal This device cannot be disposed with general household waste. Contact your local authorities for ordinance information. Make sure the charging plate is cool. If the charging plate is hot to touch, remove the phone and try again when the charging plate has cooled. Wireless devices & Implanted Medical Devices Contact customer service if your charger does not work after following the above measures. To avoid interference with medical devices (pacemakers, implanted cardioverter defibrillators, implanted cochlea, etc.), stay at least 8 inches away from the charging plate. - C FCC I This Do not put your wireless device inside your breast pocket. • Turn off the charger if there is a potential disturbance Follow the manufacturer's instructions for your implanted devices.

▶3

▶4

▶5