



Bluetooth® Speaker

SC-2318BT



Media Player

To assure the product to work in best status

Please read the users manual carefully before operation and keep it well for future use

Table of Contents

Table of Contents.....1




Operating Instructions.....2-3

BT.....4

Specifications..... 4

Warranty Card.....5

   Operating Instructions

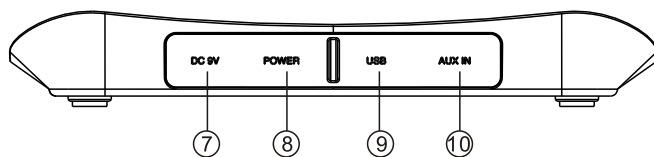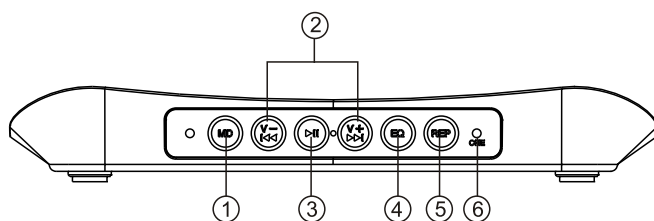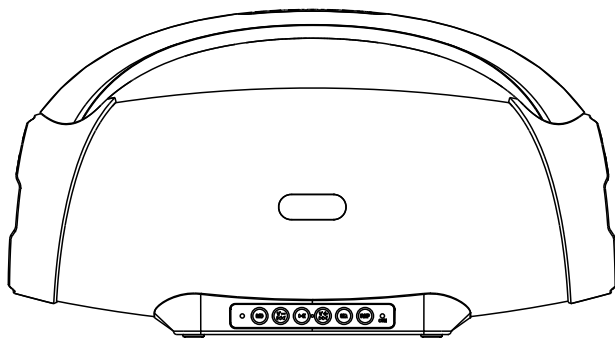

1. MODE

Press to switch between FM/AUX/USB/BT mode.

2. PREV/VOL- /NEXT/VOL+

1. In FM mode, press once to return to the previous station or skip to the next station; press and hold to reduce or increase the volume.
2. In USB and Bluetooth mode, press once to return to the previous song or skip to the next song; press and hold to reduce or increase the volume.
3. In AUX mode, press and hold to reduce or increase the volume.

3. PLAY/PAUSE

1. In FM mode, press once to automatically search for the FM stations.
This unit can save up to 20 stations.
2. In USB/BT mode, press once to pause a song, press again to return to playback.
3. In AUX mode, press once to mute the sound, press again to cancel mute mode.

4. EQ

In USB mode, press once to switch between: ROCK/POP/FLAT/CLASS/JAZZ.

5. REPEAT

1. In USB mode, press once to repeat all songs, press again to repeat only a single song.
2. In AUX/BT mode, this button has no function.

6. CHRG

Charging indicator.

7. DC 9V IN

8. POWER

9. USB

Press MODE to select USB mode, or insert a USB into the USB slot.

10. AUX IN

Use the auxiliary input to connect an external audio source (MP3 player) to the unit.

Bluetooth

1. Press MODE on the unit to select BLUETOOTH mode.
2. Turn BT on on your mobile phone and search for SC-2318BT
3. Once found, click on it.
4. You will hear a small sound indicating that the pairing has been successful.
5. You can now play music from your mobile phone via the unit.

Specifications

Power Rating: 2x8W

SN: 65dB

FM Frequency: 87.5-108MHz

AC In: AC 100-240V~ 50/60Hz DC 9V

Lithium Battery - Voltage: 7.4V, Capability: 1800mAh

USB Max Capacity:32G

Warranty Card

Warranty

Basic Warranty Statement

Supersonic Inc. ("Supersonic") warrants this product to the original purchaser ONLY, to be free from defects in materials and workmanship under normal use, for ninety (90) DAYS from the date of original purchase. Proof of purchase (receipt) required.

Please visit <http://www.supersonicinc.com/warranty> for additional information.

Garantía

Declaración básica de garantía Supersonic Inc. ("Supersonic") garantiza este producto al comprador original SOLAMENTE, para estar libre de defectos en materiales y mano de obra bajo uso normal, por noventa (90) DÍAS a partir de la fecha de compra original. Se requiere una prueba de compra (recibo). Visite <http://www.supersonicinc.com/warranty> para obtener información adicional.

What Is Not Covered by Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

What To Do When Service Is Required

When returning your defective product (postage pre-paid) for service, your package should include:

1. Copy of original bill of sale
2. A detailed written description of the problem.
3. Your return address and telephone number (Daytime)

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

* RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.