


## KDH139 User Manual

### 1、stem connection diagram

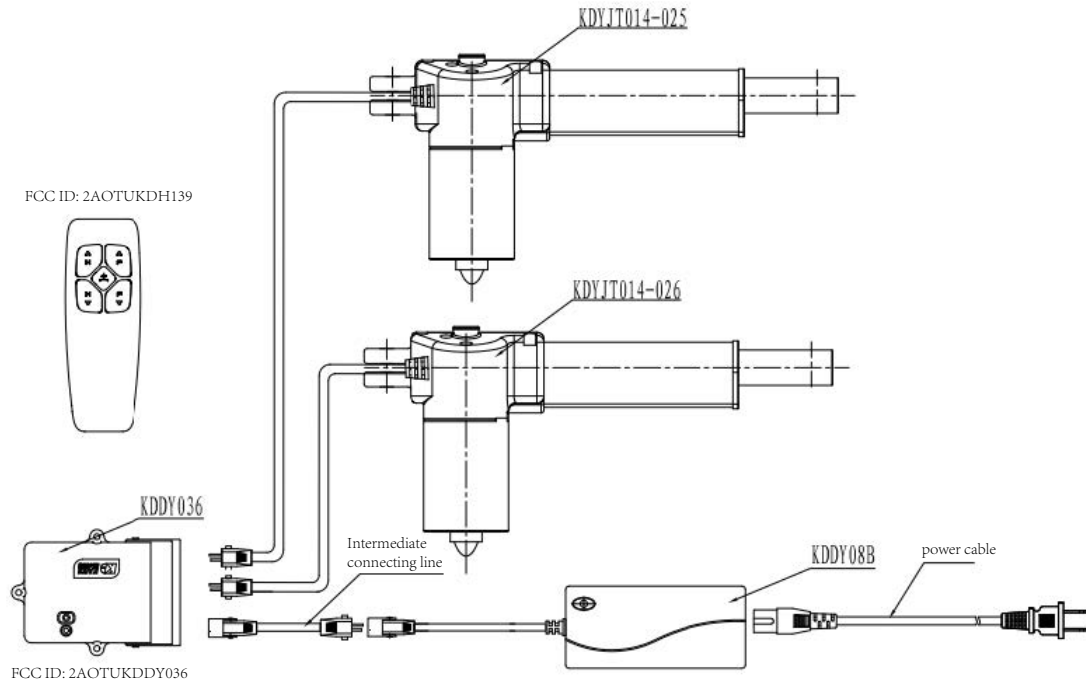

### 2、Product list


Mane	Model	quantity	Remarks
Control Box	KDDY036	1	
power	KDDY08B	1	Optional matching
Actuator 1	KDYJT014-025	1	Optional matching
Actuator 1	KDYJT014-026	1	Optional matching
Handset	KDH139(433.92MHz)	1	

### 3、Matters needing attention






- 1、 Before use, please make sure to wire correctly according to the system connection diagram, and then connect the main power;
- 2、 Children, the elderly and people with disabilities, please use under supervision;
- 3、 Do not plug or unplug any cables while the power is on, it may cause malfunction of the operation function. If this happens, you can cut off the main power, and then reconnect it after about 30s to recover;
- 4、 Before using for the first time, you should pair the wireless hand controller with the control box. The specific method is as follows:
  - 1) Press the pairing button on the control box and hold 3S, The indicator light is flashing quickly, release the button;
  - 2) Press any key on the hand controller within 10s, the control box indicator light stops flashing, The pairing is successful, and the control box indicator is always on;  
If no key is pressed within 10s, the control box indicator stops flashing,  
The original paired hand controller is not cleared, and the control box indicator light is always on;
  - 3) After the pairing is successful, press the button to start the corresponding function.
- 5、 The control box can be paired with two hand controllers. If paired with a third, the first will be cleared.
- 6、 It is not recommended to operate multiple faders at the same time, except for special functions;
- 7、 Please replace the battery of the controller in time. When not in use for a long time, remove the battery.
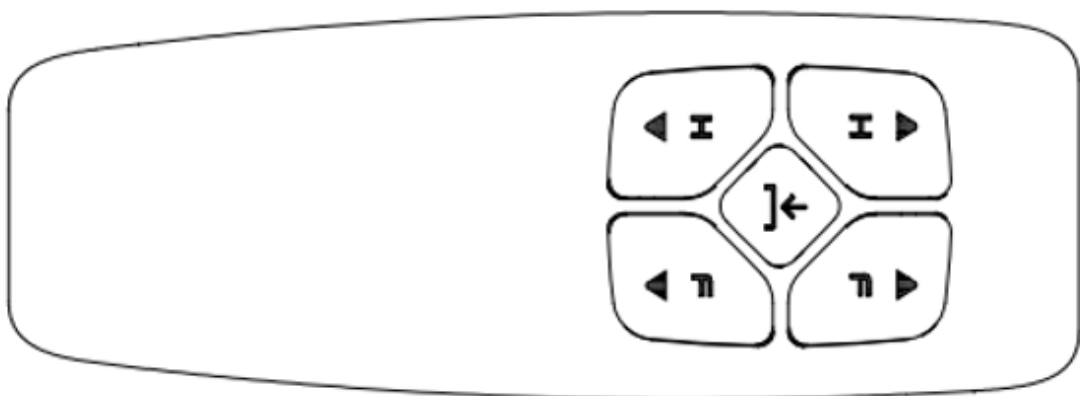
### 4、 Key function description

- 1、 Hand control panel diagram



## 2、 Hand control button menu

Key symbol	Key Function	Note
key1 	Press and hold pusher 2 to extend, release and stop	
key2 	Press and hold pusher 2 to retract, release to stop	
key3 	Press and hold pusher 1 to extend, release and stop	
key4 	Press and hold pusher 1 to retract and release to stop	
key5 	Press and release. Push rod 1 and push rod 2 are fully retracted and stop. Press any key to stop during operation.	
<b>Remark:</b> If the battery is used for a long time and the function is abnormal due to insufficient power supply, please replace the battery with a new one		

## 5、 Use environment

- 1、 Environmental illumination:  $200 \pm 50$ Lx of natural light or fluorescent lamp;
- 2、 Power: AAA 1.5V\*3;
- 3、 Temperature: 0—50℃;
- 4、 Relative humidity: <90%;
- 5、 Atmospheric pressure: 86KPa—106KPa

### FCC Statement:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.