


User Manual

1.Performance parameter

Voltage	4.5VDC (3AAA 1.5V battery)
Current	MAX 50mA
Keys	7
Protection class	IP42
Main material	HIPS-2230
RF	2420MHz

2.Key function description

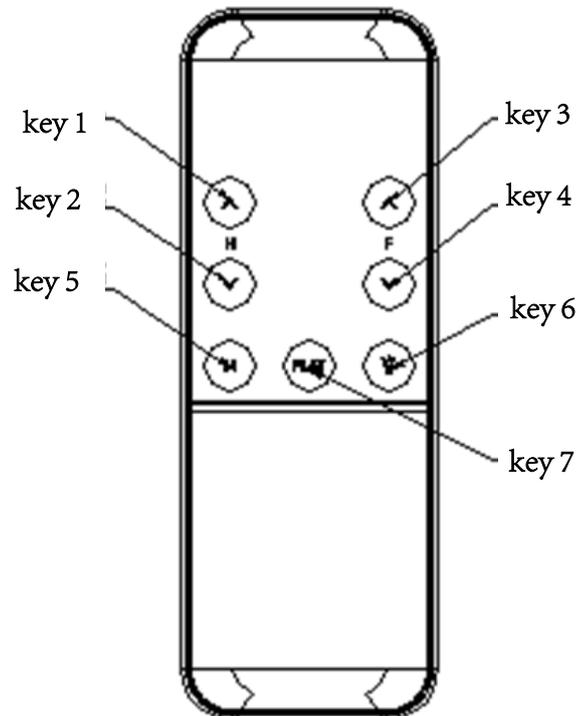

1. Pressed Key 1, actuator extended;
2. Pressed Key 2, actuator retracted;
3. Pressed Key 3, actuator extended;
4. Pressed Key 4, actuator retracted;
5. Press key 5 for 3s and release it to memorize the current position. Press key 5 and release it immediately. The head and foot fader will return to the memory position. (Note: before the memory position, reset the fader to the end before running to the memory you want. s position);
6. Pressed Key 6, Flashlight is on;
7. Pressed and released key 7 at same time, Head and foot pushers are executed to the lying position at the same time.

3. Notes

1. Before use, please make sure to wire correctly according to the system connection diagram, and then connect the main power;
2. Children, the elderly and people with disabilities, please use under supervision;
3. Do not plug or unplug any cables while the power is on, it may cause malfunction of the operation function. If this happens, you can cut off the main power, and then reconnect it after about 30s to recover;
4. Before using for the first time, you should pair the wireless hand controller with the control box. The specific method is as follows:
 - a. Press the pairing button on the control box and hold 3S, The indicator light is flashing fast, release the button;
 - b. Press any key other than Key 6 on the hand controller within 10s, the control box indicator light stops flashing, The pairing is successful, and the control box indicator is always on.
If no key is pressed within 10s, the control box indicator will stop flashing, the original paired hand controller will not be cleared, and the control box indicator will always be on;
 - c. After successful pairing, press the button to start the corresponding function.;
5. The control box can be paired with two hand controllers. If paired with the third, the first one will be cleared.
6. It is not recommended to operate multiple faders at the same time, except for special functions;
7. Please replace the hand controller battery in time. When not in use for a long time, remove the battery.

FCC Statement :

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undeundesired operation.

RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirment. The device can be used in portable exposure condition without restriction.