


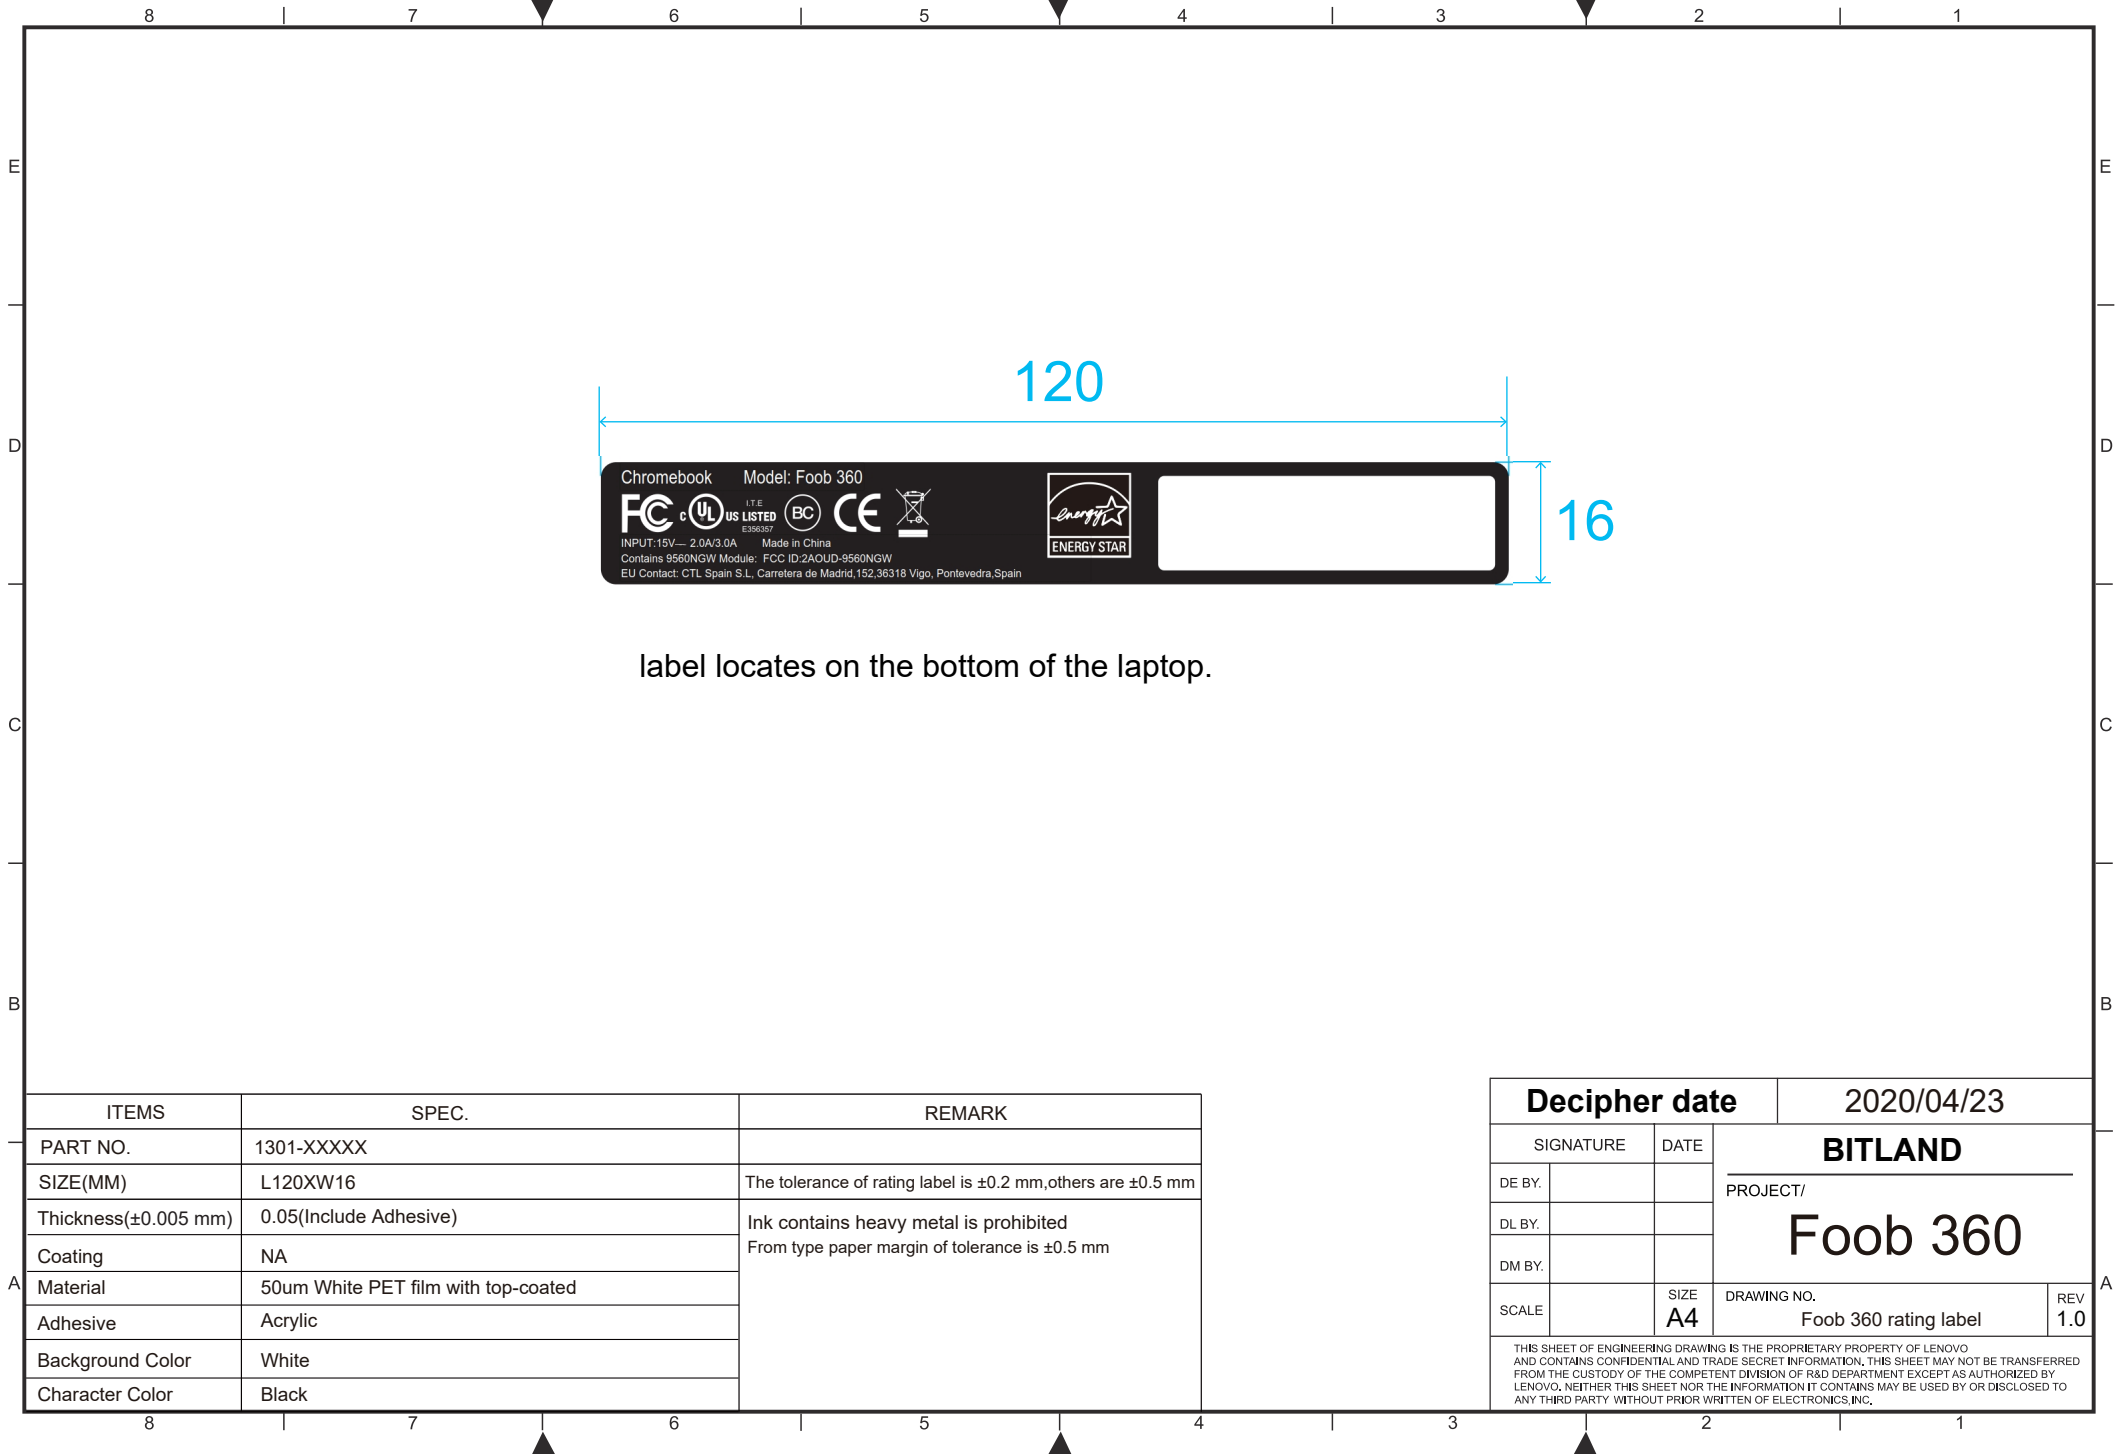



Label locates on the bottom of the laptop

The label will permanently affixed to the equipment ,and label located on the undetachable part of the equipment