 


size:105X145mm

**SYLVANIA**

**16" Long Bluetooth Speaker**

Model: SP-055

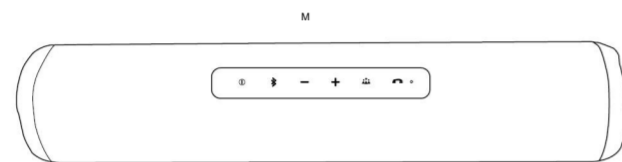

Please read these instructions thoroughly before use and retain for future reference

SYLVANIA is a registered trademark of OSRAM Sylvania Inc. used under license.

**Instructions for use**

Please read all instructions carefully

**Getting started**

Remove the Portable speaker and accessories from the box  
Remove any packaging from the product.  
Place the packaging inside the box and store for safekeeping

**In the box**

Portable Bluetooth speaker  
USB charging cable  
Aux cable  
Instruction Manual

**Features**

 
- Bluetooth wireless connection functionality
- Built-in rechargeable battery
- AUX IN connection for devices without Bluetooth
- With FM radio
- Supports TF card and U disk play
- Built-in microphone for hands free call answering

**Safety Instructions**

- Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Do not put objects into any of the openings.
- Keep the unit free from dust, lint etc.
- Do not use this unit for anything other than its intended use.
- Keep the unit out of reach of children.
- This product is not a toy.
- Do not use abrasive cleaning solvents to clean.
- To minimize the risk of fire or electrical shock, avoid operating in wet conditions such as rain or humidity.
- Do not operate around water (e.g. bathroom, swimming pool etc.)
- Do not expose to excessive heat such as sunshine, fire etc.
- Never immerse the unit in water or any other liquid for cleaning purposes.
- This product with Max voltage 5.25V, and electric current 2A for charging, and it will be damaged if charging is done beyond this max voltage and current.

1


**Product Diagram**

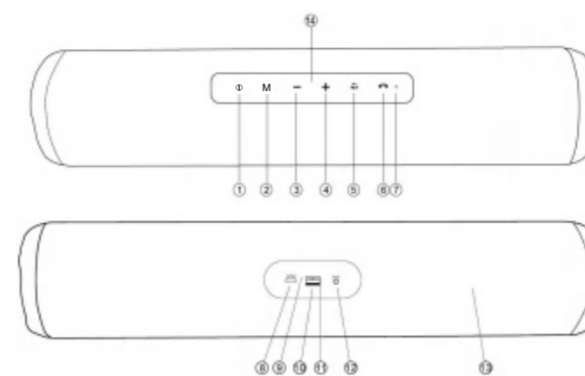

1	Power switch ON/ OFF	Hold the power button for 3 seconds to turn ON / OFF
2	Mode Switch button	To switch Bluetooth / Radio / TF card / U disk /AUX mode
3	Previous track /Volume down	Short press this button to switch to the previous song Long press this button to reduce the volume
4	Next track / Volume Up	Short press this button to switch to the next track Long press this button to increase the volume
5	Bluetooth	Short press this button can switch to Bluetooth mode .
6	Answer / end a call / Play / Pause / Auto scan and store all FM stations	Once call coming, long press the button to refused the call. A short press the button to play / pause / answer / end calls. Press the button twice to redial the last call. Short press the button, it can scan all FM stations and store.
7	MIC	Microphone
8	USB charging port	Used to charge the battery
9	Indicator LED light	The Red light illuminated during charging. Once full charge, the red light will be off
10	U disk port	U disk play music
11	TF card slot	TF card play music
12	AUX IN jack	AUX IN play music
13	Speaker	speaker
14	Bluetooth indicator light	Turn on, the LED light is quickly flashing Once Bluetooth connected devices, the LED lights will be solid blue. Play music, LED light will be flashing slowly.

2

**Direction of the TF card**

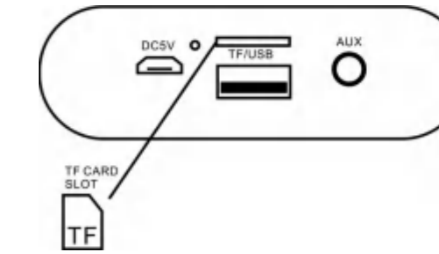 

**INSTRUCTION FOR USE**

**Charging Instructions**

This portable Bluetooth speaker has a built in rechargeable battery.  
Before using it for the first time we recommend you use the USB cable to charge the battery fully.  
Connect the USB cable to the computer USB port or USB wall charger (Not included).  
Connect the other side to the USB charging slot of the portable Bluetooth Speaker. The red LED indicator light will be illuminated whilst the speaker is being charged.  
When the battery is fully charged, the red LED indicator will switch OFF.

**Pairing the portable Speaker with Bluetooth devices (phone or music device)**

Press the Power switch (1) button for about 3 seconds you will hear a tone and it will turn ON in the Bluetooth pairing mode. The LED indicator light (14) will quickly flash.  
Place the speaker and Bluetooth device (phone or music device) so that they are no further than 30 feet apart.  
Activate the Bluetooth function on your Bluetooth device (phone or music device). Please refer to the manufacturer's instructions for instructions on enabling Bluetooth on your device.  
Once you have activated Bluetooth on your device, select the pairing name 'Sylvania SP667' from the list of available Bluetooth devices.  
If required, enter the password '0000' to confirm to pairing.  
Once paired successfully, you will hear a tone indicating pairing has been successful.  
You can now start to use the portable speaker.

Once you have paired the portable speaker with a device, the portable speaker will remember this device and will pair automatically when the device's Bluetooth is activated and in range. You do not need to re-pair any previously connected devices.

The speaker will attempt to automatically connect to the last device it was paired with when Bluetooth mode turns on. If you want to pair it with a new device, please turn off from the Bluetooth device then use your new device to search and select the pairing name.  
Once the speaker is paired with your device the music will transmit to the speaker directly. Please refer to your device's user manual for further information.

3

**Function Summary**

**Listening to Music**

Once the speakers are paired with your device, it can stream music wirelessly through the portable speaker. Select the track you wish to listen to and it will be streamed to your Bluetooth speaker, and you can use your device to control the Volume and skip tracks.

**Using the FM radio**

Turn on the unit, and press the Mode button to select the FM radio mode. Must be inserted the charging cable as an antenna.

- 1) A short press on the Phone button, FM radio will automatic searching and can automatically save;
- 2) A short press on the Volume up & Volume down button to select the desired radio station.

**TF card playback**

After the portable speaker is turned on, insert the TF card to the card slot, it will switch to micro SD card mode and start playing the music, the Bluetooth mode will be disconnected. Long press the volume to adjust the volume level, short press the volume to adjust the previous track and next track.

**U disk play music**

After the portable speaker is turned on, insert the U disk to the USB port, it will switch to USB mode and start playing the music, the Bluetooth mode will be disconnected. Long press the volume to adjust the volume level, short press the volume to adjust the previous track and next track.

**Using AUX-in**

After the portable speaker is turned on, connect one end of the 3.5mm AUX cable (included) into AUX in jack, the other end of the Cable to connect MP3 / Smartphone to play music. Long press or short press the volume to adjust the volume level.

Note: It can press Mode button to change to other mode after inserting AUX cable.

**Please Note**

- Not all mobile phones support all the functions listed above. Please refer to your cell phone's user's manual for further information.
- Certain functions and indication tones may vary depending on your mobile phone.

**Cleaning & Maintenance**

Turn OFF the speaker if it is left unattended and before cleaning.  
NEVER immerse the speaker into water and please use a dry cloth for cleaning.

**Storage**

Turn OFF the power when you not in use, clean and store safely.

4

**Do's and Don'ts**

Read the following recommendations before using the speaker. Following these you will be able to enjoy the product for many years.

- Don't use abrasive cleaning solvents to clean the speaker.
- Do not expose the speaker to extremely high or low temperature as this will shorten the life of electronic devices, distort certain plastic parts.
- Don't dispose of the speaker in a fire as it will result in an explosion.
- Don't expose the speaker to contact with sharp objects as this will cause scratches and damage.
- Don't attempt to disassemble the speaker as it may get damaged if you are not professional.
- Do not expose the speaker to heat or fire. Avoid storage in direct sunlight.
- Do not subject the speaker to mechanical shock.
- Do not add any fluids or solids to your speaker.
- Do not use the speaker if it has been damaged in any way.

**Specifications**

Bluetooth specification	Bluetooth V 5.0
Operating distance	10 meters (free space)
Frequency response	100Hz-20kHz
Speaker power	2 x 5W
Built-in battery	3.7V / 1200mAh
Charging input voltage	DC 5V ---1000mA
Product size	75x80x100MM

Note: Battery life & charging time may vary based on usage & types of devices used.

**Guidelines for protection of the environment**

This appliance should not be put into the domestic garbage at the end of its useful life, but must be disposed of at a central point for recycling of electric and electronic domestic appliances. This symbol on appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

Made in China



5

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may

**FCC Radiation Exposure Statement:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body cause undesired operation.

For service assistance and product information, please call: 1-800-968-9853.  
Curtis International Ltd.  
7045 BECKETT DRIVE, UNIT 15, MISSISSAUGA, ON, L5S 2A3  
www.curtisint.com

6

To make a warranty claim, do not return this product to the store. Please email support@curtiscs.com or call 1-800-968-9853.

**90 day Warranty**

This product is warranted to be free from defects in material and workmanship for a period of ninety (90) days from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us. If the product or component is no longer available, we will replace with a similar one of equal or greater value. Prior to a replacement being sent, the product must be rendered inoperable or returned to us.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as on the specified rating on the label (e.g., 120V~60Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

For faster service, locate the model, type, and serial numbers on your appliance.

7