

SP681_B-FD 说明书排版 尺寸: 105X140MM

SYLVANIA

Bluetooth Diamond Speaker-Color Changing

Model: SP681



Please read these instructions thoroughly before use and retain for future reference

SYLVANIA is a registered trademark of OSRAM Sylvania Inc. used under license.

1

Getting Started

- Remove the Speaker from the box.
- Remove any packaging from the Speaker.
- Please retain all packaging after you have checked and counted all the parts and the contents against the list.

Package Contents

- Bluetooth diamond speaker
- USB Charging Cable
- Instruction Manual
- Line in cable

Product Features


- Bluetooth LED lights speaker
- Play music wirelessly
- Multicolor lights
- Wirelessly connects to all Bluetooth enabled devices
- Compatible to iPad, iPhone, Samsung Galaxy phones, laptops & more
- Wireless range: 10 Meters
- Built-in rechargeable battery
- Hands-free(Switch it from the phone)
- Line in
- FM radio

SAFETY INSTRUCTIONS

- Keep the unit away from heat sources and direct sunlight.
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Do not put objects into any of the openings.
- Keep the unit free from dust, lint etc.
- Do not use this unit for anything other than its intended use.
- Keep the unit out of reach of children.
- This speaker is not a toy.

2

Description of Parts

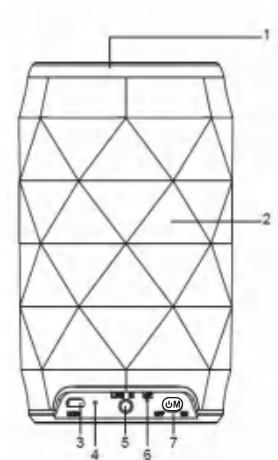

1	SPEAKER
2	Led lights
3	Charging Port
4	Charging indicator light
5	Line in Port
6	MIC
7	Power On/Off , Mode switch (Bluetooth mode, FM mode, Aux in mode) , Play/Pause , Handsfree ,

INSTRUCTIONS FOR USE

Charging the Speaker

For best results, fully charge the speaker before use.

- Connect the USB charging cord (included) to the DC 5V charging port of the speaker and insert the other end into a port on your computer or similar power source.
- Red LED turns on indicating that the battery is being charged. Once it is fully charged, the Red LED will turn off.

4

Operate the Speaker

Press and hold the Power/Mode button for 2 seconds turn on the speaker and it's on Bluetooth mode, Press and hold the Power/Mode button for 2 seconds again turns to FM radio mode , Press and hold the Power/Mode button for 2 seconds again turns to Line in Mode, Press and hold the Power/Mode button for 5 seconds turn off the speaker

Pairing the Speaker with your Bluetooth Device

Your **Bluetooth Speaker** can stream wireless audio from any Bluetooth enabled device within the range of 8-10 Meters. Simply follow the below steps.

- Press and hold the Power button for 2 seconds to turn on the speaker, It's on bluetooth mode.
- You would hear an indication tone.
- Turn on Bluetooth on your Mobile Phone or Tablet or Computer.
- It will search for available Bluetooth devices.
- Bluetooth Speaker would appear as "Sylvania SP681", in the list of searched devices. Select it from the available list of devices.
- If required, enter the password '0000' to confirm pairing.
- Once paired successfully, another indication tone would be heard.
- If you fail to pair it within a few seconds or you want to pair it with a new device, please repeat above steps.

Play your favorite song on the Bluetooth source device and music would now stream through the speaker with LED indicator lights.

Listening to Wireless Music

Please ensure that your device (iPhone, Tablet or Other Smart Phone) is paired with the speaker to stream wireless music. Once it is paired, play music from your device.

FM Radio

When in FM radio Mode, press the Power/Mode button treble times quickly to search all stations and save the preset stations , press Power/Mode button once to switch to next station . During the FM mode, if the sensitivity is not good, you can plug an USB cable as an antenna

When Play LINE IN:

When in Line in mode, connect one end of the 3.5mm Line in cable (included) into Line in jack, the other end of the Cable to connect MP3 / Smartphone to play music.

MIC hands-free function

When in Bluetooth Mode, Short press the Power/Mode button to answer a phone call , Double press the Power/Mode button to redial the last phone call

4

Do's and Don'ts

- Do not play music at excessive levels as damage to hearing and/or equipment may result.
- Do not use outdoors in wet or in damp surroundings.

Product Specifications:

Bluetooth version : V 5.0
 Speaker output : 1x3W
 Play time : up to 2 hours
 Charge Voltage : DC 5V (USB)
 Bluetooth range : 10 Meters
 Built-in Rechargeable Li-ion Battery: 3.7V, 500mAh

TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound	Volume in minimum position. The connected device is not in play mode.	Increase the volume by your device. Play the music in the connected device and make sure the volume level is in high level.
Sound distortion	Volume level too high	Decrease the volume by your device.

Care and maintenance

Clean the speaker with a soft, dry cloth. Never use chemicals or harsh abrasives.
 Keep this unit away from wet or damp surroundings

5

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

For service assistance and product information, please call: 1-800-968-9853.
 Curtis International Ltd.
 7045 BECKETT DRIVE, UNIT 15, MISSISSAUGA, ON, L5S 2A3
www.curtisint.com

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

6

To make a warranty claim, do not return this product to the store. Please email support@curtiscs.com or call 1-800-968-9853.

90 day Warranty

This product is warranted to be free from defects in material and workmanship for a period of ninety (90) days from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us. If the product or component is no longer available, we will replace with a similar one of equal or greater value. Prior to a replacement being sent, the product must be rendered inoperable or returned to us.

This warranty does **not** cover glass, filters, wear from normal use, use not in conformity with the printed directions., or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as on the specified rating on the label (e.g., 120V~60Hz).

We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. **Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty.** This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

For faster service, locate the model, type, and serial numbers on your appliance.

7

4