

SK410A 4K ATV STB User Manual

Date: 2021-01-29

Shenzhen SEI Robotics Co., Ltd



CONTENT

1	SAFE CAUTION	. 1
2	PRODUCT INSTRUCTION	. 3
3	PRODUCT FEATURES	. 3
4	UNPACKING AND SETUP HARDWARE	. 4
5	REMOTE CONTROL	. 5
6	ANDROID TV	. 6
	6.1 First Installation Guide	. 6
	6.2 A FASTER WAY TO THE ENTERTAINMENT YOU LOVE	. 6
	6.3 ENTERTAINMENT WITH THE POWER OF GOOGLE BAKED IN	. 6
	6.4 CAST YOUR DEVICE TO THE TV	. 7
	6.5 CONNECT TO NETWORK	. 7
	6.6 SYSTEM UPGRADEGOTA	. 7
7	TROUBLESHOOTING	. 8
	7.1 No signal on the TV	. 8
	7.2 CANNOT TURN ON YOUR MEDIA BOX.	
	7.3 THE REMOTE CONTROL DOES NOT WORK	
	7.4 NO PICTURE OR SOUND	. 8
	7.5 NO INTERNET	R

1 Safe Caution



NOTICE: To prevent fire and electric shock, do not expose this receiver to rain or moisture. In order to avoid any possible risk of electric shock, never attempt to open the unit. In case of the unit breaking down, repair



of the unit should be carried out by qualified technicians. No part of this unit should be repaired by users.

WARNING!

- > Presence of live parts inside the unit! Do not open. Risk of electric shock! No part should be repaired by users.
- > The maintenance of the receiver should be carried out exclusively by qualified persons.
- If the power cord is damaged, it must be replaced or repaired by the manufacturer, its after-sales service, qualified electrician or persons of similar qualification in order to avoid possible danger.
- The product must be installed in accordance with national regulations.
- > The used batteries must be disposed of safely. Throw them in appropriate rubbish bins in order to protect the environment.

Proper Installation

- Place the receiver on a flat, firm and stable surface. Do not put it on a carpet or rug.
- Do not place the receiver on top of another device, such as an amplifier. This may lead to overheating.
- > Do not put anything above the unit (for example, CDs or magazines).

Sufficient Ventilation

- Place the receiver in a well-ventilated location to prevent accumulation of internal heat. Allow a gap of at least 10cm to the rear and the top of the unit, as well as a space of 5cm to both sides to avoid overheating.
- > Do not obstruct any ventilation openings with items such as newspapers, tablecloths, curtains, etc.

Protecting the Unit from High Temperatures, Humidity, Water and Dust

- The unit should not be exposed to dripping water or splashing.
- No objects filled with liquids, such as vases, shall be placed on the unit.
- Do not place any objects that might damage your unit near it (e.g. liquid filled objects or candles).
- Do not place any source of flames such as lit candles on the unit.

Electricity Supply

- Please unplug the unit in case of prolonged non-use.
- If the power cord is damaged, it must be replaced or repaired by the manufacturer, its after-sales service, qualified electrician or similar qualifications to those to avoid possible danger.
- > The plug must remain readily accessible after the installation of the product.



2 Product Instruction

The SK410A powered by Android TV. Bring your entertainment together in one place to easily jump from live TV and on-demand to the top streaming apps, or cast your favorites from your smartphone to your TV. And do it all with Google Assistant—search for shows, control your TV and smart devices, answer questions, manage tasks, and more using your voice.

Android TV offers thousands of movies, shows, and games from Google Play, YouTube, and your favorite apps. Discover your favorite content, apps, and games on Google Play.

Cast your favorite entertainment apps—movies & TV shows, music, games, sports, and more—from your Android or iOS device, Mac or Windows computer, or Chromebook to the TV.

3 Product Features

- With the Google Assistant
- Chromecast built-in
- Built-in Widevine Level 1 DRM
- Built-in PlayReady DRM
- 4K Live TV APP
- HDMI CEC
- Amlogic S905X4 Chipset (Quad-Core Cortex-A55 Up to 20800+ DMIPS)
- ARM Mali-G31 MP2 GPU
- 2GB DDR4 RAM
- 16GB eMMC Flash
- 802.11 b/g/n/ac/ax 2.4GHz/5GHz 2T2R Wi-Fi(Wi-Fi 6)
- AV1 MP-10@L5.1 up to 4Kx2K@60fps, VP9 Profile-2 up to 4Kx2K@60fps, H.265 HEVC MP-10@L5.1 up to 4Kx2K@60fps
- Support easy Mesh



4 Unpacking and setup hardware

The pictures show what our product looks like and how to setup the hardware.

NOTICE: The pictures are for references only; please make the object as the standard.

Front panel



Rear panel





5 Remote control



NOTICE: The picture is for references only, please make the object as the standard.




6 Android TV

All the Instructions and pictures here are for reference only, please make the product you have as the standard and refer to the actual items.


6.1 First Installation Guide

Using your Android TV voice remote control, follow the on-screen instructions to pair the remote control. Choose the language from the list after you paired the remote control successfully. Then follow the guide to set up your device.

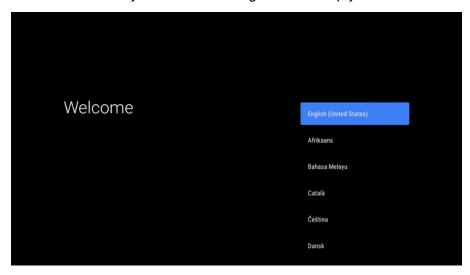

6.2 A faster way to the entertainment you love

From live TV and on-demand to your favorite apps, get all the entertainment you love organized in one experience on SK410A. Talk to Google to search for movies and shows, pause and rewind, and even start your DVR. Get answers to your questions, control smart home devices, and check your agenda – all with your voice. And use Chromecast built-in to bring photos, music, and more to the big screen. Do it all, more easily, in one place.

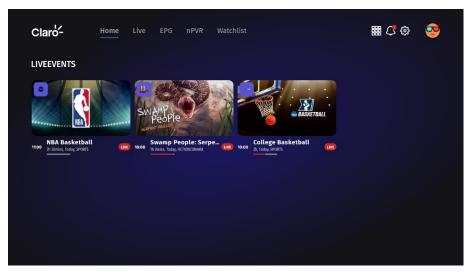


6.3 Entertainment with the power of Google baked in

All the things you love about Google are built into Google Play, so recommendations get



smarter the more you play. It's all powered by the web, so the entertainment you love is available anytime, anywhere, on any screen.

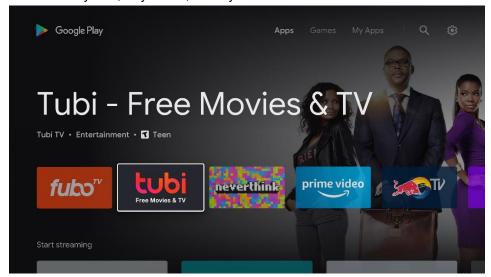

6.4 Cast your device to the TV

Go from your phone, tablet, or laptop to your TV in an instant. With Chromecast built-in, you can cast all your favorite movies, shows, apps, games, and more directly to your TV.

- Step 1: Connect your phone, table or compute to the same Wi-Fi as your Android TV™ device.
- Step 2: Open an app that supports casting, such as YouTube.
- Step 3: Select a video you want to play and touch or click the Cast icon.
- Step 4: Choose your Android TV™ device, press play, then control playback on your phone, table or compute.

6.5 Connect to Network

You can connect to the Network by Ethernet or Wi-Fi. If the Wi-Fi is not connected, you can follow the steps to change your Wi-Fi.

- Step 1: Go to Settings--->Network&Internet, enter to the "Network&Internet" menu.
- Step 2: Open the Wi-Fi button, so you will see the available Wi-Fi list.
- Step 3: Click the Wi-Fi name you want to connect, then enter the right password, it will connect successfully. .

6.6 System Upgrade--GOTA

Go to Settings--->General Settings--->Device Preferences--->About ---> System Update, click it to check that if there is a new version or not. A "Download" key appears when it checked a new version. Just click the "Download" key, it will download and update automatically.



7 Troubleshooting

7.1 No signal on the TV

- 1. Check if the HDMI cable is securely connected.
- 2. Check if you have selected the correct HDMI input on your HDTV.

7.2 Cannot turn on your media box.

- 1. Check if the power connector has completely plugged into the DC socket of your TV.
- 2. Check if the power supply is stable.

7.3 The remote control does not work

- 1. Make sure the batteries are good and they are inserted correctly in the remote control.
- 2. Make sure no objects block the path between the remote control and the signal sensor area on the product.
- 3. Make sure the distance between the remote control and the box is no more than 5 meters.
- 4. Make sure the remote control paired successfully.
- 5. Check the batteries for power, and if exhausted replace the batteries in the remote control.

7.4 No picture or sound

- 1. Check if the Audio/ Video output connection from the product to TV correctly.
- 2. Press the MUTE button Turn TV on.

7.5 No internet

- 1. Check the Wi-Fi is connected successfully.
- 2. Check the Ethernet cable is connected correctly if you use Ethernet.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - -- Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

Radiation Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance of 20cm from your body.