

 
Specifications

Bluetooth Specification: JL4.2
Bluetooth Range: Up to 33 feet (10 meters)
Battery Type: 55mAh, 3.7V, Polymer Lithium Ion Battery
Charge Time: Approximately 2 Hours
Play Time: Approximately 3 hours*

**Applicable at 50% of maximum volume. Results will be lower when volume is higher.*

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Sakar International is under license. Other trademarks and trade names are those of their respective owners.


A Quick Look

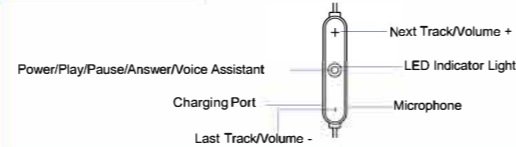

Charging



 
1. The included USB charging cable has a Micro USB plug and a standard USB plug.



2. Insert the USB charging cable's Micro USB plug into the charging port on your earbuds.



 3. Insert the USB charging cable's standard USB plug into the USB port of a computer or suitable USB charging adapter.




4. The LED indicator light turns red while the earbuds are charging then turns off once charging is complete.

Bluetooth Pairing



 
1. Press and hold the power button to power on your earbuds.



2. The LED indicator lights will alternately flash red and blue to indicate that your earbuds are in pairing mode.



 3. Go to the Bluetooth settings menu on your phone. Make sure that Bluetooth is turned on. Connect to the device listed as "wireless earbuds."




4. The LED indicator lights will slowly flash blue to indicate that your earbuds are paired with your phone.


Using Your Earbuds



 
1. Press and hold the power button to power on or power off your earbuds.



 2. Press the PLAY/PAUSE button to play or pause a track.



 3. Press the ANSWER button to answer or end a phone call. Press and hold the ANSWER button to reject a phone call.




4. Quickly tap the VOICE ASSISTANT button twice to activate Siri or Google Voice Assistant.

Important Safety Precautions

1. READ ALL INSTRUCTIONS BEFORE USING YOUR EARBUDS.
2. Do not use your earbuds near water. Clean using a dry or slightly moist cloth.
3. Do not place your earbuds on any wet surfaces.
4. Do not allow children or the infirm to play with your earbuds without adult supervision.
5. Do not expose your earbuds to excessive heat, flames or fire.
6. Always press all buttons carefully. Do not mishandle your earbuds.
7. Do not use in extremely dry environments, as this can lead to static discharge during usage.
8. Do not expose your earbuds to temperatures above 40°C. Keep out of direct sunlight.
9. Do not attempt to repair this product yourself. Contact a qualified service center if your earbuds are in need of service.
10. Do not drop, puncture or expose your earbuds to excessive trauma.
11. Your earbuds are not intended for commercial use.
12. Do not place near objects that generate a strong magnetic field.
13. Use only the supplied charging cables. Unplug this device when not in use for long periods of time or during lightning storms.
14. Use a soft cloth to clean your earbuds. Never use any harsh chemicals or detergents. Make sure your earbuds are dry before charging.
15. Please recycle or dispose of your earbuds properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your earbuds for further information.


Controlling Music

 NEXT TRACK ►►




Tap the Next Track Button to advance to the next track in a playlist.

 LAST TRACK ◀◀




Tap the Last Track Button to return to the last track in a playlist.

 VOLUME + ◀◀



Press and hold the Volume + Button to increase the volume.

 VOLUME - ◀◀



Press and hold the Volume - Button to decrease the volume.

Vivitar One Year Warranty

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered by Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:

Call 1-800-592-9541 in the U.S. or visit our website at www.vivitar.com.
 Distributed By: Sakar International 195 Carter Drive, Edison, NJ 08817

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepaid.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.