



FCC Warning Statement
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Statement
To maintain compliance with FCC's RF Exposure guidelines, this equipment should be installed and operated with minimum distance of 30cm the radiator your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

IMPORTANT SAFETY INSTRUCTIONS

Please follow the instructions for the operation.
The design and manufacture of this apparatus are of high safety, which can ensure your personal safety. However, improper use can lead to the risk of electric shock or fire. Please read all safety tips and operating instructions carefully before installation and use, and keep these instructions for future reference. Please pay special attention to all warnings listed on this manual and equipment.

- Water and moisture**
The apparatus shall be far from water or wet places (such as bathtub, washbasin, kitchen sink, washbasin, swimming pool and damp basement).
- Ventilation**
This apparatus shall be placed in a position that does not affect normal ventilation. Do not place on a bed, sofa, carpet, or a similar surface that may block its vent. Do not use papers, tablecloths, curtains and other items to cover the unit, so as not to be blocked and pass through. Do not put in sealing device (such as book cabinet or cabinet) to prevent air from flowing through the unit, or to ensure enough ventilation. The apparatus should be at least 20cm away from the object.
- Heat and flame**
This apparatus should be far away heat source (such as radiator, thermal recorder, stove) or other apparatus (including amplifier) that product heat. Do not open fire source (such as burning wax) on the apparatus.
- Power**
The connection source of this apparatus should meet the requirements of operation explanation and appliance specification. When the power adaptor is used as a switching appliance, the on/off switch is available at the same time.
- Protect the power cord**
The power adaptor cord should be properly arranged so as not to be trampled on or squeezed by surrounding items. The power cord between the apparatus and the AC outlet are best kept clean and free of debris.
- Cleaning**
This apparatus must be cleaned according to the recommended method. Please refer to maintenance section of this User Guide.
- Foreign objects or liquids**
Please be careful to avoid any objects or liquids into this apparatus through the opening part or the unit. Do not expose the apparatus to the drip and splash. Do not place a liquid-filled object (such as a vase) on the apparatus.
- Accessories**
Only use attachments/accessories specified by the manufacturer.
- Thunder and electricity protection**
If necessary, remove the plug from the wall socket to prevent the damage caused by the lightning storms or voltage fluctuation to the product.
- Overload**
Please avoid backing of wall sockets, extended cord or power outlet, as this may lead to fire or electric shock hazard.
- Repair range**
If there are the following conditions in this apparatus, please hand it over to a qualified repairman.

MAIN UNIT

| | |
|---|--|
| (1): DVD door cover | (11): FUNC Mode Switch |
| (2): Door switch (press to open DVD door) | (12): LED display |
| (3): Volume button | (13): Remote Sensor |
| (4): Next/Previous/Fast Forward/Last Rewind | (14): TF card slot |
| (5): Play/Pause button | (15): Speaker |
| (6): Stop/Play/Pause button | (16): 2 x 18650 battery for unit power |
| (7): Adj-repeat button | (17): USB Port |
| (8): Repeat 1/Repeat All/Long press 2 Sec. to adjust turn off timer | (18): DC IN Jack |
| (9): Digital selection button | (19): Earphone Jack/AUX audio video output |
| (10): Channel Switch/Long press 2 Sec. turn off display | (20): AUX Input Jack/FM Antenna Jack |
| | (21): Power Switch |

REMOTE BUTTON DESCRIPTION

| | |
|----------------------------------|------------------------------|
| (1): Infrared emitter | (15): Play/Pause |
| (2): Radio | (16): Return |
| (3): Mute | (17): Stop |
| (4): Sing. along | (18): Channel |
| (5): Power on/off | (19): Radio scan/tune button |
| (6): AUX IN | (20): Numeric buttons |
| (7): Bluetooth | (21): Cycle |
| (8): USB/TF switch | (22): V+/- button |
| (9): DVD | (23): Timer |
| (10): Menu | (24): Record |
| (11): Setting | (25): Repeat |
| (12): Previous/Next | (26): Black Screen |
| (13): Fast forward / Fast rewind | (27): Subtitle |
| (14): Confirm | (28): Sleep |

Standard Accessories

- Power Adaptor
- AV Cable

DEVICE CONNECTION INSTRUCTIONS

Connect TV (TV non-accessory)
(1) Use the accessory one to 3-in-1 cable.
(2) Plug 3.5mm plug into AV out of DVD player, the yellow line is connected to the Video input of the TV, the white line and the red line are connected to the audio input port.
(3) Back to TV for more.

Subtitle — Press Subtitle button by remote. Disc recording with subtitle language selection is available.
Sleep — Press Sleep button by remote. LED display 1.5s → 30s → 30s → OFF on DVD player.
Mute — Press Mute button or volume set to 00, the sound will be turn off and display show Mute.
Black screen — Press Black screen button by remote. LED display is not lit on the DVD player.

DVD MENU PLAY

| | | |
|--|----------|------------|
| ▶ | MENU | 01:00 |
| ▶ | CHAPTER | 11:22 |
| ▶ | AUDIO | 2CH CHRESE |
| ▶ | SUBTITLE | OFF |
| BITRATE 56 ■■■■■ TITLE ELAPSED 0:45:25 | | |

- When you watch the DVD, press the DVD button on the remote.
- The screen will appear as show in right figure.
- Press the direction button to select on the remote.
- You can also use the number buttons on the remote to enter the title position.

DVD Basic Setup

| | | | | |
|--------------------------|-------|-------|-------|------------|
| GENERAL | AUDIO | DOLBY | VIDEO | PREFERENCE |
| GENERAL SETUP PAGE | | | | |
| TV INPUT | OFF | | | |
| ANGLE MARK | OFF | | | |
| DEEP LANGUAGE | ENG | | | |
| CLOSED CAPTION | OFF | | | |
| SCREEN SHOTS | ON | | | |
| LAST MEMORY | ON | | | |
| GO TO GENERAL SETUP PAGE | | | | |

- When you watch the DVD, press the Setup button on the remote.
- The screen will appear as show in right figure.
- Press the direction button to select on the remote.
- Press Confirm button to confirm.
- Press Setup button to exit setup.

BLUETOOTH PLAYBACK OPERATION

Bluetooth Pair (Standard version no this function)
Notes:
- Bluetooth mobile pairing capability maximum working range is about 10 meters (30 feet).
- Mobile system and obstructions may shorten the range of reception.

Start Pair:
(1) Press FUNC button on the unit until LED display appear "bt" (right figure) on the DVD display.
(2) Turn on Bluetooth and set up your mobile device, search YW016 and select 1 to pair. After paired and connected, turn on the music player and turn volume maximum on the remote, the music of the middle sound from the DVD player.

Basic Operation

- Press Stop button to adjust volume level.
- Press Play/Pause button to select previous/next track.
- Press Play/Pause button to play music.
- To pause playback, press Play/Pause button.
- To resume playback, press Play/Pause button again.
- When unit connect to TV, the sound will come from TV, the unit speaker will not have sound out.

USB DEVICE/TF CARD PLAYBACK OPERATION STEP

- Connect AV cable to this unit and TV.
- Press repeat button on unit or remote. Single repeat show on the TV (right figure).
- Press the repeat button repeatedly to select different repeat modes.

USB DEVICE/TF CARD A-B SECTION REPEAT PLAYBACK

A-B section repeat step:
- Press Repeat button once on the unit, screen show A, when you hear the section need to repeat, press the repeat button, until screen show B, the unit will continue repeat A-B section playback.
- Press Repeat button again, A-B disappear on the screen, unit return to normal playback.

FM BROADCAST TUNING OPERATION STEPS

(STANDARD VERSION NO THIS FUNCTION)

- To get the best reception, connect AV cable to FM antenna port on the rear of the unit.
- Press the Mode button, display show frequency (right figure).
- Manual tune to desired station, repeatedly press Previous / Fast rewind / Next / Fast forward buttons.
- Semi-automatic search for strong signal station, press Previous / Fast rewind / Next / Fast forward button or press radio search button on the remote, until start auto-tuning the frequency at the display and then release the search button, the tuner will find and stop at the first strong radio signal.

CLASS I LASER PRODUCT

CLASS I LASER PRODUCT
APPLICABLE LASER CLASSIFICATION
PRODUCTO LASER DE CLASE I

CAUTION
AVOID LASER RADIATION
EVITAR LA RADIACION LASER
PREVENIR LA RADIACION LASER

This product contains a low power laser device.

About preventing Laser light energy exposure:

- If there is a liquid or solid object entering the machine, stop operating the unit immediately.
- Do not touch the lens or ports. If you do this, you may damage the lens and the player may not work correctly.
- Do not block anything from the safety lock. If you do this, the laser diode is still working when the CD door is still open.

Product Included

Main unit * 1
Remote control * 1
Adaptor * 1
AV cable * 1

Feature:

DVD / VCD / CD / MP3 Discs playback
Max. support 16GB USB and TF card with each content MP3/WMA and AII format for video playback.
Support linear turn off the unit.
AV video output, connect TV to watch the picture.
AUX audio input, 3.0mm earphone audio output jack.
Button two in/1 Speaker.
Bluetooth Version (Standard Version no this feature) with Bluetooth and FM auto.

Remote Control:

(1) Battery compartment is at the rear of unit.
(2) Install 2 x AAA battery (not included).

DISC FORMAT AND USB TF CARD COMPATIBILITY INSTRUCTIONS:

Playable disc format:
All common DVD, VCD, SVCD, DVD-VO, DVD-VO, CD, OKO, MP3, MP4, JPEG and other formats on the market.
Not supported disc format:
DVD Blue disc, non-compressive interactive multimedia disc, software disc and some discs of unusual format.

Support USB and TF card:
Maximum support 16GB USB and TF card.
Support MP3/WMA audio.
Support All video and JPEG photos.

PLAY DVD/VCD/CD/MP3 DISC STEPS

- Plug in adaptor, turn on the power switch at the rear of unit, display on, power up unit.
- Press location which on the top of unit, to open CD door.
- Take out the laser head protection unit, place a CD with label side face to you in the CD compartment and close the CD door.
- After close the CD door, unit will start the disc detector and automatic playback.
- Press Previous/Next button or directly press the numeric button to skip between previous or next tracks.
- Press V+/- button, display will show the volume level (digit), adjust the volume level.
- Press Previous / Next button or directly press numeric button jump to the desire tracks.
- During playback, press and hold Previous / Next button to fast search forward or fast search rewind.
- To pause playback, press Play/Pause button. To resume, press Play/Pause button again.
- To stop playback, press stop button.

When unit connect TV, the sound will come out from the TV, the unit speaker will not have sound.

REPEAT PLAYBACK

To repeat playback a track, press Repeat button, the symbol flash display on upper right corner.
- Repeat all track playback, press Repeat button again, the symbol stop flash display on upper right corner.
- To cancel playback, press Repeat button again, the symbol disappear on display on upper right corner.

CUSTOMIZE REPEAT PLAYBACK

Customize repeat playback step:
- When playback, press repeat button, display will show symbol A, when you hear the end point, press the Repeat button, display will show symbol B, unit will repeat playback between A and B.
- Press Repeat button again, symbol A B display disappear, unit return to normal playback.

STORE RADIO STATIONS

FM (87.5-108MHz) can store 40 stations in this unit.

- Follow above steps to find the station frequency, press CH button on the remote or Repeat button on the unit.
- Display will flash and enter a number in numeric button of the remote (right figure).
- Repeat step 2 operation, store other station.
- If you select a stored station, enter the number in the numeric button of the remote or press button to select.

LISTEN TO THE EXTERNAL AUDIO SOURCE OPERATION STEPS

- Connect the audio cable to the audio port of the external music player, and connect the 3.5mm stereo plug on the other end of the audio cable to the AUX-IN jack on the back of the unit.
- Press Mode button to select LINE IN mode (right figure).
- Open external music player.
- Press Volume button to adjust sound level.

MAINTENANCE

- Do not use this machine in situations of excessive intensity, vibration, dust or extreme temperature.
- Do not move the internal components of the machine.
- Keep your equipment away from heating devices and electrical power sources, such as fluorescent lamps or motors. When playing CD music, if there is a music interruption, jump or cannot be replayed, perhaps the bottom of disc may need to be cleaned. Before re-playing, wipe the top of the disc with a good and clean soft cloth.

SPECIFICATION

Adaptor Input: AC 100-240V - 50/60Hz / output DC5V 1000mA
Power supply: DC5V 1000mA or 2 x 18650 battery (Battery not included)
Power consumption: 10W
Battery for remote: AAA x 2 (not included)
Radio band: FM 87.5-108MHz
Product Size: 160 x 115 x 79.5mm
Package Size: 270 x 160 x 100mm

Power supply for unit

(1) 2 x 18650 battery (not included)
(2) AC Adaptor 100-240V / 5V 1.2A (included)

Connect AC adaptor:

Plug the AC adaptor into AC power outlet, the other end 5.5/2.1mm hole plug into DC5V jack on rear of the main unit.

Install 2 x 18650 battery (Battery user-owned)

Remove the battery compartment cover on the bottom of the main unit. Fit the correct batteries, referring to the polarity markings.

Warning:

- Do not expose the battery to high temperatures such as sunlight, fire or similar environments.
- Mark sure that the battery is installed correctly, and the positive and negative polarity will cause the device to not work.
- Do not throw the battery into a fire, the battery may explode or leak.

MAIN UNIT BUTTON DESCRIPTION

CD RECORDING TO USB

| OPTIONS | CD RIP | TRACK | CD RIP | Selected | TRACK |
|---------|--------|------------|-------------|----------|----------------|
| Track | Track | Track 01 | 04:28 | | Track PROGRESS |
| Track | Track | Track 02 | 03:33 | | Track 01 |
| Track | Track | Track 03 | 03:36 | | Track 02 |
| Track | Track | Track 04 | 02:41 | | Track 03 |
| Track | Track | Track 05 | 03:32 | | |
| Track | Track | Track 06 | 03:16 | | |
| Track | Track | Track 07 | 03:15 | | |
| Track | Track | Track 08 | 03:15 | | |
| Start | Exit | Select all | Select none | | |

- Connect the AV cable to unit and TV set.
- Press Record button on the remote.
- Insert USB drive into unit.
- Use direction button to select recording tracks and setting on the remote.

DVD BASIC OPERATION

Prepare work
(1) Connect DVD player to TV by AV cable.
(2) The DVD start up logo will show on the TV screen (right figure).
(3) Place the DVD Disc into the unit.
(4) DVD disc will auto playback.
(Some disc with menu need manual choose playback.)

Basic Operation
Volume Control — To adjust the volume level, press the V+/- button on unit or remote.
Pause/Play — During playback, press Play/Pause button to pause playback, screen show .
Fast forward / Fast rewind — To speed playback, press Fast forward/Fast rewind button on the unit or remote.
There are 2 level playback modes in this system.
Double the speed of each press (2x → 4x → 8x → 16x → 32x).
Chapter Title — To see previous / next chapter, press button by unit or remote.
Repeat playback — Press Repeat button by unit or remote. Screen show .
A/B section playback — Press Repeat button by unit or remote, refer to CD repeat playback operation.